

Water Cooled Aftercooler Series HAW

Series HAW can cool high temperature compressed air from compressors down to 40°C or less and efficiently remove moisture from the air.

As series HAW is water-cooled, it can be used where there is high temperature, high moisture and heavy foreign particles.

25 times heat transfer area

As compared to shell and bare tube, the flower fin tube has 25 times the heat transfer area.

Even heat exchange


Sharp edge of flower fin causes air turbulence resulting in even heat exchange and high cooling efficiency.

High efficiency drain

Drainage is efficiently removed by built-in drain separator.

Visible outlet air temperature

Outlet air temperature is easily checked by thermometer, resulting in easy maintenance.

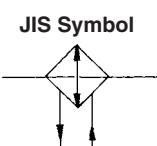

Model/Standard Specifications

Model	HAW2	HAW7	HAW22	HAW37	HAW55	HAW75	HAW110							
Applicable compressor (kW)	Screw type compressor	2.2	7.5	22	37	55	75							
	Reciprocating type compressor	2.2	7.5	15	22	37	55							
(1) Air flow rate /min (ANR)	Screw type compressor	300	1000	3300	5700	8600	12000							
	Reciprocating type compressor	300	1000	2100	4300	5600	8000							
Inlet air temperature (°C)	Screw type compressor	70												
	Reciprocating type compressor	70		180										
Inlet air pressure dew point (°C)	67													
Inlet air pressure (MPa)	0.7													
Cooling water flow (/min)	5	5	17	25	36	40	45							
Cooling water inlet temperature (°C)	30													
Outlet air temperature (°C)	40													
Cooling water pressure drop (MPa)	0.002	0.02		0.03	0.06	0.03								
Operating range	Fluid	Air: Compressed air, Cooling water: Industrial water/Tap water												
	Inlet air temperature (°C)	5 to 100		5 to 200										
	Inlet air pressure (MPa)	0.05 to 1.0 (With auto drain: 0.15 to 1.0)		0.05 to 0.97 (With auto drain: 0.15 to 0.97)										
Ambient temperature (°C)	2 to 50													
Proof pressure (MPa)	1.5													
Port size	Air side	Rc 1/2	Rc 3/4	Rc 1½		Rc 2	3B JIS 10K FF flange							
	Cooling water side	Rc 1/2		Rc 3/4	Rc 1		Rc 1¼							
	Drain side	Rc 1/2		Rc 3/4		Rc 1								
Mass (kg)	9.7	11.5	32	59	67	78	95							
Coating color	Silver													
Accessory (2) Drain valve (1 pc.)	Rc 1/2		Rc 3/4		Rc 1									
	Outlet air thermometer (1 pc.) R 1/2 (Temperature range: 0 to 150°C)													

Note 1) ANR indicates the flow rate converted to the value at 20°C under the atmospheric pressure and the state of relative humidity 65%.

Note 2) The accessories should be mounted by user.

Accessory (Option)

Applicable model	HAW2	HAW7	HAW22	HAW37	HAW55	HAW75	HAW110
Screw flange (With companion flange)	—	—	HAWF-141	HAWF-142	HAWF-200	HAWF-200	—
Auto drain	AD402-04		AD600-06			AD600-10	

Model Selection (Flow Capacity /min (ANR))

Model	HAW2-04	HAW7-06	HAW22-14	HAW37-14	HAW55-20	HAW75-20	HAW110-30
Inlet air temperature	50°C	1000	2000	6000	12000	12000	18000
	70°C	300	1000	3300	5700	8600	12000
	100°C	150	700	2500	5000	7000	10500
	180°C	—	—	2100	4300	5600	8000

Conditions: • Supply pressure 0.7 MPa, Outlet air temperature 40°C, Cooling water inlet temperature 30°C.
• Inlet air temperature 50°C is saturated air. At 70°C or more, it is humid air with dew point 67°C.

HAA
HAW

AT

IDF
IDU

IDFA

IDFB

ID

IDG

AMG

AFF

AM

AMD

AMH

AME

AMF

SF

SFD

LLB

AD

GD

Series HAW

How to Order

HAW **22** - **14**

Basic size •

Symbol	Applicable air compressor kW	
Screw type	Reciprocating type	
2	2.2	
7	7.5	
22	22	15
37	37	22
55	55	37
75	75	55
110	110	75

• Accessory (Option)

Symbol	Description
Nil	—
F	With screw flange
D	With auto drain

• Port size

Symbol	Size	Applicable model
04	Rc 1/2	HAW2
06	Rc 3/4	HAW7
14	Rc 1 1/2	HAW22, 37
20	Rc 2	HAW55, 75
30	3B JIS 10K FF flange	HAW110

How to Calculate Outlet Air Temperature

Outlet air temperature can be calculated with inlet air temperature, cooling water temperature and amount of air in the following procedure.

(Example) Inlet air temperature: 100°C, Cooling water temperature: 20°C, Cooling water flow: 17 l/min

Air flow: 2000 l/min (ANR), Air pressure: 0.7 MPa, Model: HAW2-14

Outlet air temperature at above conditions

(1) Use outlet air temperature of 37°C from outlet air temperature table. At this time correction factor line becomes A.


(2) To get correction factor of 1.3 use cooling water temperature correction factor A at 20°C.

(3) To get outlet air temperature divide 37°C from (1) by 1.3 from (2).

$$\text{Outlet air temperature} = 37 \div 1.3 = 28.5^\circ\text{C}$$

Correction Factor by Cooling Water Temperature

Air pressure 0.7 MPa

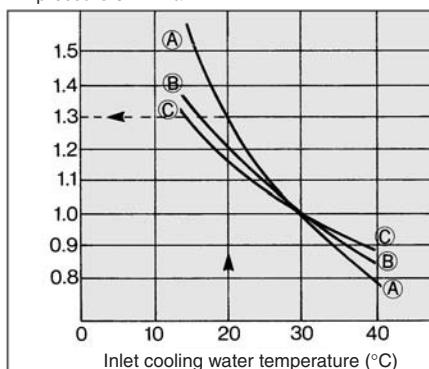

Outlet Air Temperature

Model	Cooling water (l/min)	Correction factor	Air flow (l/min (ANR))	Inlet air temperature			
				50°C	70°C	100°C	180°C
HAW2	5	(A)	200	35.5	38.5	41.5	—
		(B)	300	36	40	43	—
		(C)	400	36.5	42	45.5	—
HAW7	5	(A)	500	33.5	36	37	—
		(B)	1000	36	40	43	—
		(C)	1500	38	45.5	49.5	—
HAW22	17	(A)	2000	33.5	36	37	37.5
		(B)	3300	36	40	43	47
		(C)	4000	36.5	42.5	45.5	51
HAW37	25	(A)	4000	33.5	36	37	38
		(B)	5700	35	40	42	44.5
		(C)	7000	36	41	43.5	48
HAW55	36	(A)	7000	34.5	38	40	43
		(B)	8600	36	40	44	49
		(C)	10000	37	42.5	46	54
HAW75	40	(A)	10000	34.5	38	39.5	42
		(B)	12000	35.5	40	43	47
		(C)	14000	36	41.5	44.5	49.5
HAW110	45	(A)	15000	34.5	39	41	45
		(B)	18000	35.5	40	43	48.5
		(C)	20000	36	42.5	45.5	52

Conditions: • Air pressure 0.7 MPa, Cooling water temperature 30°C.

• Inlet air temperature 50°C is saturated air. At 70°C or more, it is humid air with dew point 67°C.

Precautions

Be sure to read before handling.
Refer to front matters 42 and 43 for Safety Instructions and pages 6 to 8 for Air Preparation Equipment Precautions.

Caution on Design

Warning

- If the supply of coolant water is disrupted, the system will overheat, creating a dangerous situation. Therefore, make sure to take safety measures against water failure.
- An excess or insufficient flow of coolant water can damage the heat exchanger tube. Therefore, design within the rated water flow range (refer to the model column).

Caution

- Design the piping for coolant water and compressed air with a bore that is greater than the bore of the piping connections.
- The quality of the coolant water to be used must exceed the water quality that has been specified by the Japan Refrigeration and Air Conditioning Industry Association. (Refer to the instruction manual.) Poor quality coolant water damages the heat exchanger and reduces performance. Therefore, inspect the water quality and replace the circulating water on a regular basis.
- Never use sea water for cooling.

Mounting

Caution


- Install the unit horizontal with pipe line.
- Make sure to correctly connect the compressed air inlet/outlet and the coolant water inlet/outlet.
- Use union joints to connect the coolant water pipes so that they can be easily removed during maintenance.
- Connect a drain pipe because a large amount of drainage is created when the compressed air is cooled. The drain pipe must have a minimum pipe bore of 10 mm, and a maximum length of 5 m (when installing an optional auto drain).

Maintenance


Caution

- Inspect the quality of the coolant water and replace the circulating water on a regular basis. If the coolant water is cooled in a cooling tower, it is susceptible to the adhesion of water scale.
- If there is a likelihood that the coolant water will be frozen, drain the coolant water to prevent damage. Also, drain the coolant water when the equipment will not be used for a long period of time.
- If the cooling performance has been reduced, clean the inside of the coolant water pipes. (Refer to the instruction manual for details on the cleaning.)

Construction Principle

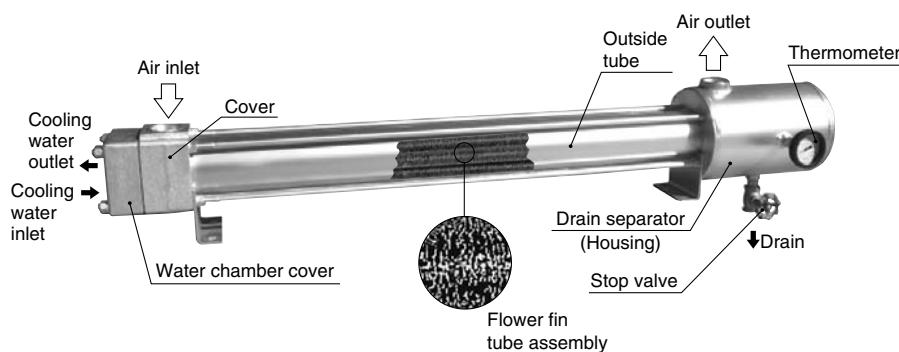

Flow Characteristics

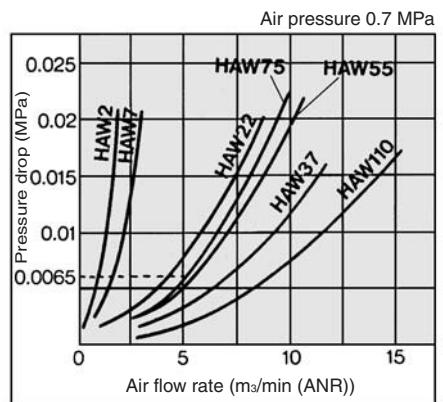


(Example) To get pressure drop at 0.3 MPa of air pressure, 5 m³/min (ANR) of air flow and model HAW75-20, use $\Delta P = 0.0065$ MPa at 0.7 MPa from the table and convert P_1 to 0.3 MPa.


$$\text{Pressure drop} = \frac{(0.7 + 0.1013) \times \Delta P}{P_1 + 0.1013} = \frac{0.8013 \times 0.0065}{0.3 + 0.1013} = 0.013 \text{ MPa}$$

Construction

HAW2/7

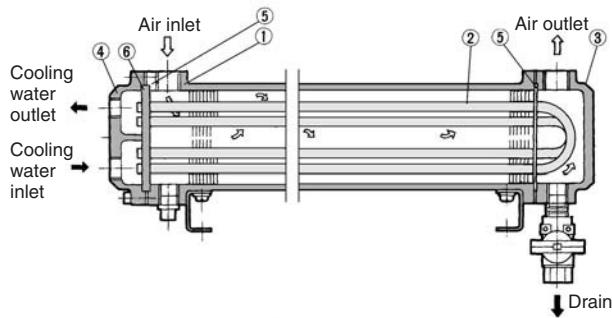

HAW22 to 110

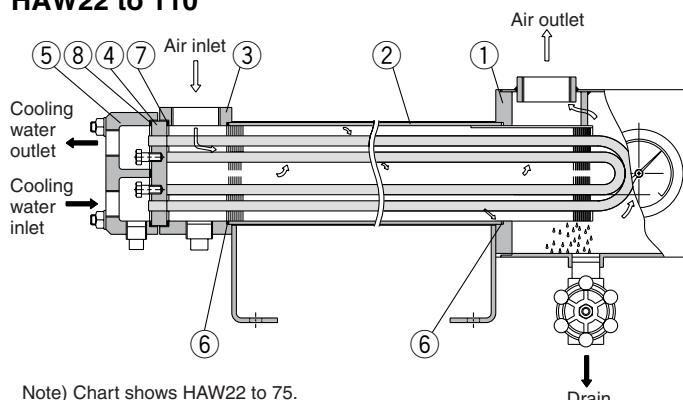

Note) Chart shows HAW22 to 75.

As HAW110 is flange-connection, it differs from the above graph.

Component Parts (HAW2/7)

No.	Description	Material	Note
1	Outside tube	AC2A-F	—
2	Flower fin tube assembly	C1220T	Flower fin
3	Housing	AC2A-F	—
4	Water chamber cover	FC200	—

Replacement Parts

No.	Description	Material	HAW2	HAW7
2	Flower fin tube assembly	Aluminum, Copper, Carbon steel	42012 (1 pc.)	42022 (1 pc.)
5	Seal	Non-asbestos	42013 (2 pcs.)	42013 (2 pcs.)
6	Seal	Non-asbestos	42015 (1 pc.)	42015 (1 pc.)

Component Parts (HAW22 to 110)

No.	Description	Material	Note
1	Housing	SGP, SS400	—
2	Outside tube	STK	—
3	Body	FC200	—
4	Flower fin tube assembly	C1220T	Flower fin
5	Water chamber cover	FC200	—

Replacement Parts Note)

No.	Description	Material	HAW22	HAW37	HAW55	HAW75	HAW110
4	Flower fin tube assembly	Aluminum, Copper, Carbon steel	42036 (1 pc.)	42046 (1 pc.)	42054 (1 pc.)	42062 (1 pc.)	42073 (1 pc.)
6	Seal	Non-asbestos	42032#1 (2 pcs.)	42042#1 (2 pcs.)	42042#1 (2 pcs.)	42042#1 (2 pcs.)	—
7	Seal	Non-asbestos	42035#1 (1 pc.)	42045#1 (1 pc.)	42045#1 (1 pc.)	42045#1 (1 pc.)	42072#1 (1 pc.)
8	Seal	Non-asbestos	42037#1 (1 pc.)	42047#1 (1 pc.)	42047#1 (1 pc.)	42047#1 (1 pc.)	42074#1 (1 pc.)


Note) Consult with SMC when replacing parts since special tools are required for replacement.

HAA
HAW
AT
IDF
IDU
IDFA
IDFB
ID
IDG
AMG
AFF
AM
AMD
AMH
AME
AMF
SF
SFD
LLB
AD
GD


Series HAW

Dimensions

HAW2/7

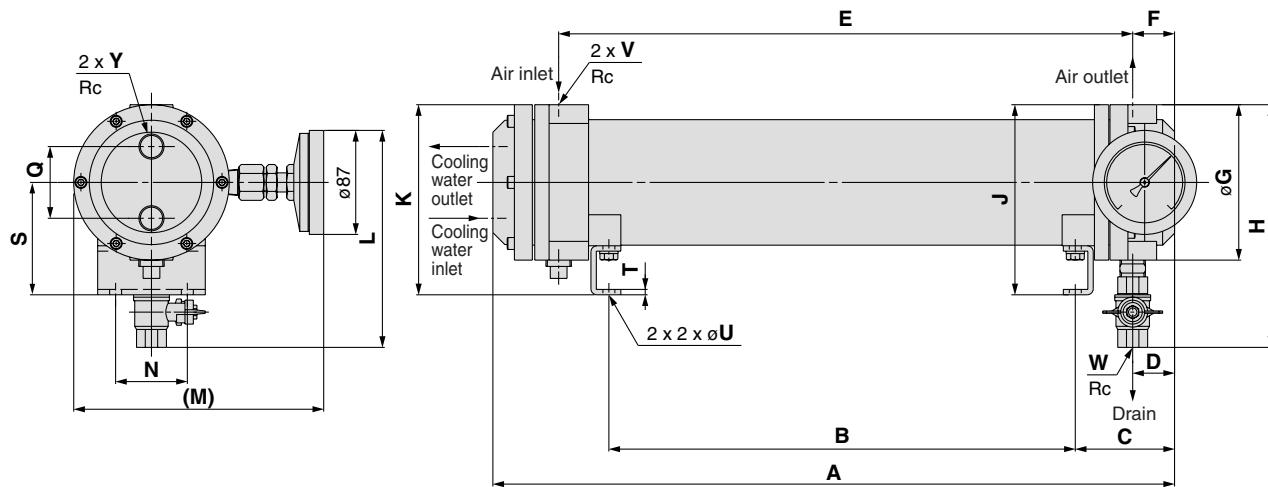

HAW22 to 110

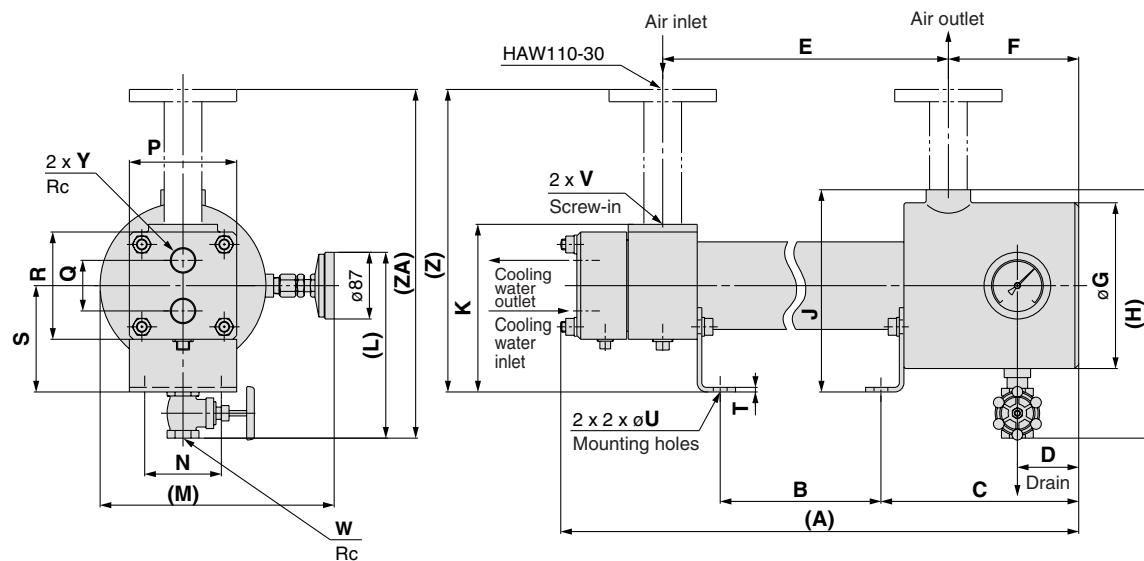

Model	A	B	C	D	E	F	$\varnothing G$	H	J	K	L	M	N	P	Q	R	S	T	$\varnothing U$	V	W	Y	Z	$\varnothing ZA$
HAW2-04	360	190	83	35	270	35	130	203	159	159	182	193	60	—	60	—	94	4.5	10	1/2	1/2	1/2	—	—
HAW7-06	570	390	83	35	480	35	130	203	159	159	182	193	60	—	60	—	94	4.5	10	3/4	1/2	1/2	—	—
HAW22-14	948	575	212	37	704	138	165	266	245	215	215	238	90	120	60	120	150	4.5	12	1 1/2	3/4	3/4	—	—
HAW37-14	1354	893	258	80	1056	170	216	324	264	219	242	289	100	140	66	140	139	6.0	18	1 1/2	3/4	1	—	—
HAW55-20	1612	1038	366	150	1203	276	216	324	264	219	242	289	100	140	66	140	139	6.0	18	2	3/4	1	—	—
HAW75-20	2112	1538	366	150	1703	276	216	324	264	219	242	289	100	140	66	140	139	6.0	18	2	3/4	1	—	—
HAW110-30	1724	950	500	72	1210	365	267.3	473	—	—	317	357	200	220	70	—	195	8.0	18	3	1	1 1/4	395	473