

Pneumatic Pressure Switch

For details about certified products conforming to international standards, visit us at www.smcworld.com.

Min. applicable load

5 VDC 160 mA

5 VDC 1 mA

Series IS3000

Piping method

Rc 1/4 thread

Gasket piping

Rc 1/4 thread

Gasket piping

Model

Can be used for micro load, around 10 mA e.g. relays, programmable controllers, etc.

Easy electrical wiring

Wide space for wiring. Fixed wiring possible with $G^{1/2}$ connector.

Calibration range

0.1 to 0.7 MPa

Frequency: 1 cycle/sec Service life: 10 million cycles

With indicator light



IS3100 (Gasket piping)

IS3000-02 (Rc ¹/₄ thread)







IS3010-02 (Rc 1/4 thread)

Specifications

Model

IS3000-02

IS3010-02

IS3100

IS3110

Fluid	Air/Inert gas
Proof pressure	1.0 MPa
Max. operating pressure	0.8 MPa
Pressure adjustment range	0.1 to 0.7 MPa
Ambient and fluid temperature	-5 to 60°C (No freezing)
Contacts	1ab
Error of scale	±0.1 MPa
Hysteresis	0.05 MPa or less
Repeatability	±0.05 MPa
Enclosure	Equivalent to IP40
Mass	0.15 kg

Micro switch type

Standard

Micro load


Micro Switch Ratings

Model	IS3100								IS3 10	
Load	Non inductive (A)			Inductive load (A)				Non inductive (A)		
	Load resistance		Light load		Inductive load		Motor load		Load resistance	
Rated Voltage (V)	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.	N.C.	N.O.
125 AC	5		1.5	0.7	3		2.5	1.3	0.1	
250 AC	3		1	0.5	2		1.5	0.8	_	
30 DC	4		2		3		3		0.1	
125 DC	0.4		0.05		0.4		0.05		_	

Insulation resistance: 100 $\mbox{M}\Omega$ or more at 500 VDC by megameter

Voltage resistance: 1500 VAC, 50/60Hz for 1 min. (When using switch with neon light: 1000 VAC for 1 min.)

How to Order

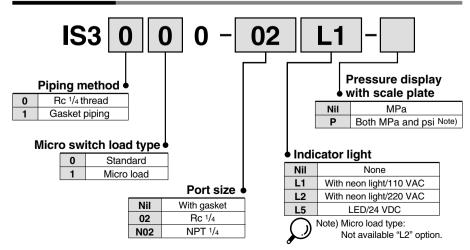







Construction

IS3000-02/3010-02 (Rc ¹/₄ thread)

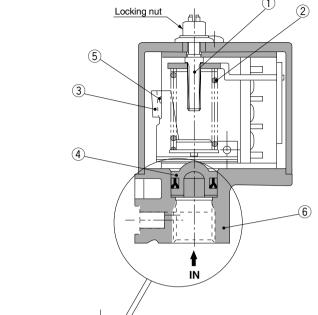

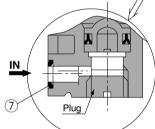


Component Parts

No.	Description	Material
1	Adjusting screw	Rolled steel
2	Setting spring	Rolled steel
3	Lever	Rolled steel plate
4	Piston	Polyacetal
5	Micro switch	_
6	Bottom cover	Aluminum die-cast
7 *	O-ring	NBR

* Only for gasket mounting style

Dimensions

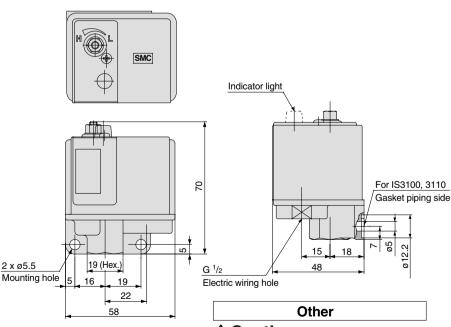

△ Caution

 Spare part is LIGHT ASSEMBLY only. If it is necessary to repair, please contact SMC. Light Assembly

For 110 VAC: 1530118-1 220 VAC: 1530118-2 24 VDC: 1530118-5

Able to convert into L1, L2, L5 by changing each light assembly.

SMC

↑ Precautions


Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 687 to 691 for Pressure Switch Precautions.

Wiring

∆Warning

- Since the light emitting diode (LED) is used for the light assembly for 24 VDC, there are 2 terminals and polarity. One is "+" for red load wire and the other is "-" for black load wire. Light will not light up if wired incorrectly.
 Light ass'y for 24 VDC has 3 mA of current Light will not light up if wired incorrectly.
- Light ass'y for 24 VDC has 3 mA of current leakage. Connect the LED directly to the power supply if the input of the PLC sees the switch as closed at all times due to leakage.

Ex. 1) When using contact "a" only or "a&b" contacts



ZSP

PS

ISA

PSE

IS

ISG

ZSM

Ex. 2) When using contact "b" only



△Caution

 In the case of using a switch with indicator light, wire the indicator light per the following:

 Please put the enclosed seal of "LAMP LIGHTS WHEN PRESSURE RISES." or "LAMP GOES OUT WHEN PRESSURE RISES." on the equipment where it is easy to see.



3. Thread using for the terminal is M3.

Mounting/Piping

∆Caution

- Allow the space required for maintenance.
 Otherwise, maintenance or pressure adjustment cannot be made, since the adjusting screw is on the top of the body.
- Mounting is possible in either horizontal or vertical orientations.

Pressure Setting

∆Caution

- Turn the adjusting screw on the cover to set the pressure with a flat head screwdriver.
 Fix the screw with locking nut after adjusting.
 Hysteresis is a fixed value.
 - Increase the setting value by turning to "+" (H) side. Decrease the setting value by turning to "-" (L) side.
- Use a flat head screwdriver to set the pressure. Then, lock it in place with the lock nut. Otherwise the set pressure will change.
- 3. The hysteresis (the ON-OFF range) is fixed.
- 4. Set pressure scale is the value when pressure increases.

Operating Environment

△Warning

- Do not use in an environment, where water or oil is splashed. Because it is the open type construction. If water or oil were to make an ingress, the electrical circuit would be corroded and result in a malfunction or damage.
- Operating fluids are either air or inert gas exclusively. Never use liquids.
- Never use in an environment where flammable fluid or gas is used.

Use of this product near flammable materials could cause an explosive situation. This product is not explosion-proof.