Body Ported Metal Seal/Rubber Seal Series VQ

A variety of product groups meet all FA needs.

Flip type

- Flip type demonstrates space-saving effect.
- Cassette type enables flexible, speedy station increasing/decreasing.

Thin compact design with large flow capacity

(Flip type)

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

		-			
	Manifold pitch (mm)	Flow cha	0 " 1		
Model		Metal seal	Rubber seal	Cylinder	
		C [dm³/(s·bar)]	C [dm³/(s·bar)]	Size	
VQ0000 10.5		0.50	0.59	Up to ø40	
VQ1000 11		0.84	1.0	Up to ø50	
VQ2000	16	2.3	2.7	Up to ø80	

^{*} Flow characteristics: $4/2 \rightarrow 5/3$ (A/B \rightarrow R1/R2)



VQ2000

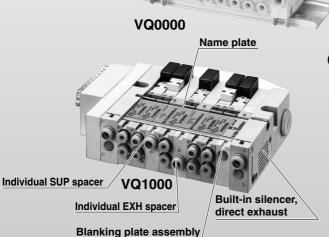

A variety of options

Cassette type VQ1000

Unprecedented high speed response and long service life


		g						
(Metal seal, Single, With indicator light/surge voltage suppressor)								
VQ0000	10 ms	7						
VQ1000	10 ms	 200 million cycles 						
VQ2000	20 ms							
Dispersion accuracy +2 ms								

Innovative mounting methods

A valve can be changed without entirely disassembling the manifold.

Built-in One-touch fittings for easier piping.

A variety of common wiring methods are standardized.

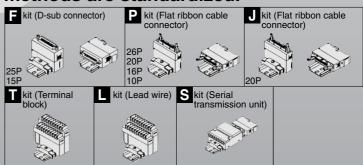




Valve Specifications

					So	nic	Type of actuation			n	Voltage			Electrical entry			trv	Manual override				
					condu	ctance:					_											
					C [dm ³] $ \begin{cases} 4/2 - \\ (A/B \rightarrow \end{cases} $		()	Double	Closed center	Exhaust center	Pressure center	12 V 24 V DC	100 V 110 V AC	200 V 220 V AC	Plug-in	Grommet	plug connector	M plug connector	ol required	Locking type	(Manual)	
					Double Single	3 position Closed center			Close	Exhau	Pressu		Hz)	(50/60) Hz			L plug c	M plug c	Push type, Tool required	Poc	Locking type (Manual)	
	Plug-in	Series VQ1000	Rubber seal	VQ1□30	0.84	0.73	•	6	•	•		•	•		•						•	
	PI	P. 2-4-8	Metal seal	VQ1□31	1.0	0.84		Latching		Latchin				P. 2-4-		10	10					
		Series	Rubber seal	VQ0□40	0.50	0.36									10	<u>۲</u>						
	VQ0000	P. 2-4-30	Metal seal	VQ0□41	0.59	0.42		Latching					D	2-4-	36	Single/ 3 position only						
orted	Plug lead	Series	Rubber seal	VQ1□40	0.84	0.73		•	•		•				<u> </u>	• ×			•			
Body Ported		VQ1000 P. 2-4-30	Metal seal	VQ1□41	1.0	0.84	Latching		Latoning			P. 2-4-			36	Single (Single)						
		Series	Rubber seal	VQ2□40	2.3	_	•	•					•			•					•	
		VQ2000 P. 2-4-30	Metal seal	VQ2□41	2.7	_		Latching					P.	2-4-	36	Single only						
	Cassette	Series	Rubber seal	VQ1□70	0.60	0.58		Latching				•	•			ا _۷						
	Cas	VQ1000 P. 2-4-72	Metal seal	VQ1□71	0.80	0.70							P.	2-4-	74	Single/ 3 position only						

_										
									D-sub connector 15P	
P.		ص.	.ت		٦.		.P	•	Flat ribbon cable 10P, 16P, 20P	0
2-4-92		Except S kit	2-4-	Except S kit	2-4-	Except S kit	2-4-	Except S kit	Negative common specifications	Option
.92		68	Ó		Ó		.28	•	One-touch fitting Inch size	Š
		Except L kit		Except L kit		Except L kit		Except L kit	For special wiring spec.	
						•		•	Blanking plate	
									Individual SUP/EXH	
						•		•	SUP/EXH passage spacer	S
									Name plate	ani
P. 2-	Standard	P. 2-	7. 2-		7. 2-		P. 2-	•	DIN rail mounting style	Manifold
2-4-87		2-4-63	4-60		4-59		4-23		Built-in silencer	
7					-		J.	•	Silencer for EXH port	Option
									Elbow fitting for cylinder port	ĭ
								•	Plug for cylinder port	
									Double check block	



Series VQ/Body Ported: Variations

Manifold Variations Flat ribbon cable Flat ribbon cable **Terminal block D-sub connector** connector connector (26, 20, 16, 10 pins) (20 pins) Conforming to MIL flat Conforming to MIL flat. ribbon Conforming to MIL D-sub connector Two kinds of terminal are available in ribbon cable connector cable connector PC Wiring accordance with the number of stations. System compatible **Series VQ1000** P. 2-4-14 P/J kit **Series VQ0000** P. 2-4-38 P. 2-4-42 P. 2-4-46 **Series VQ1000** P. 2-4-38 P. 2-4-42 P. 2-4-46 P kit **Series VQ2000** P. 2-4-42 P. 2-4-46 P kit **Series VQ1000** Cassette P. 2-4-78 P. 2-4-76 P kit

Manifold Variations

	LC	S	Port	size
	kit	kit	SUP EXH port	Cylinder port
	Lead wire	Serial transmission unit	P, R	A, B
	Direct electrical entry type	Enables single-wire solenoid valve-PLC operation		
kit			C6 (ø6)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)
	000000	and the second s	N7 (ø1/4")	N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")
	P. 2-4-18	P. 2-4-20	<option> Built-in silencer</option>	
C kit			C6 (ø6)	C3 (ø3.2) C4 (ø4) M5 (M5 thread)
	6000	The state of the s	N7 (ø1/4")	N1 (ø1/8") N3 (ø5/32")
	P. 2-4-50	P. 2-4-54	<option> Built-in silencer</option>	
C kit			C6 (ø6)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)
			N7 (ø1/4")	N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")
	P. 2-4-50	P. 2-4-54	<option> Built-in silencer</option>	
C kit			C8 (ø8)	C6 (ø6) C8 (ø8)
			N9 (ø5/16")	N7 (ø1/4") N9 (ø5/16")
	P. 2-4-50	P. 2-4-54	<option> Built-in silencer</option>	
kit			C6 (ø6)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)
			N7 (ø1/4")	N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")
	P. 2-4-82	P. 2-4-84	<option> Built-in silencer</option>	

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

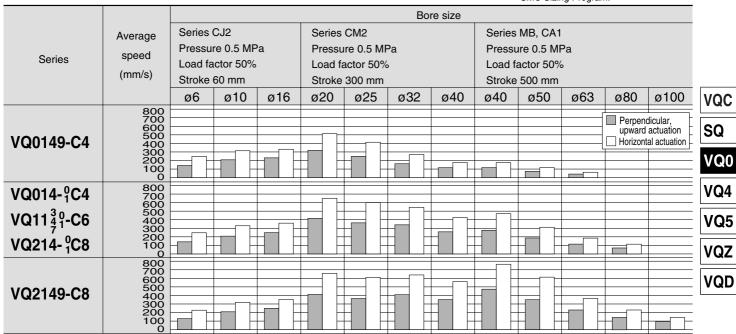

* The average velocity of the cylinder is what the stroke is divided by the total stroke time.

* Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions


Bod	y ported	Series CJ2	Series CM2	Series MB, CA1				
	VQ0149-C4 Tube bore x Length Speed controller		T0425 x 1 m					
VQ0149-C4			AS2001F-04					
	Silencer	AN103-X233						
	Tube bore x Length	T0604 x 1 m						
VQ11 ³⁰ -C6	Speed controller	AS3001F-06						
	Silencer	AN103-X233						
	Tube bore x Length		T0806 x 1 m					
VQ2149-C8	Speed controller							
	Silencer							

^{*} It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.

Series VQ1000 **Body Ported**

Plug-in Unit: Flip Type

How to Order Manifold

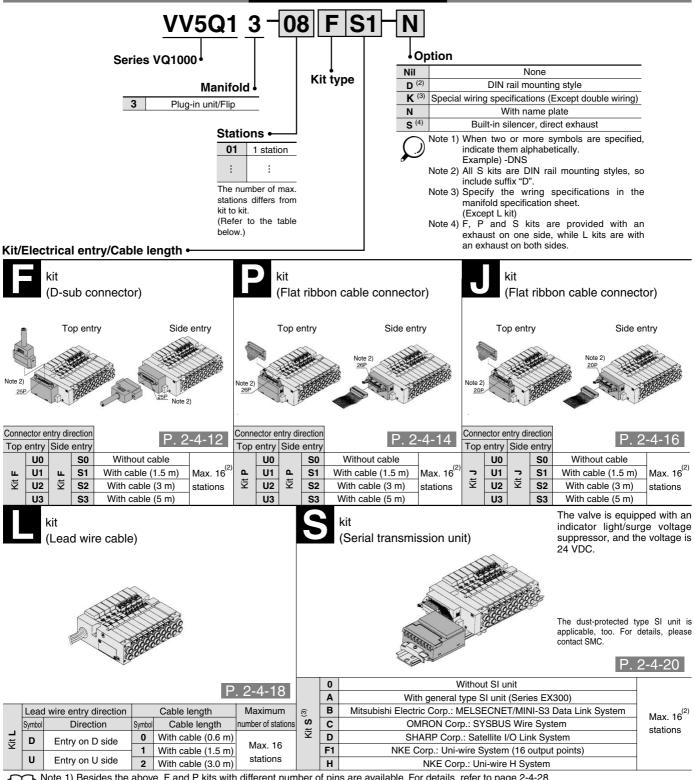


Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-28.

Note 2) For details, refer to page 2-4-29.

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

Plug-in Unit: Flip Type Series VQ1000

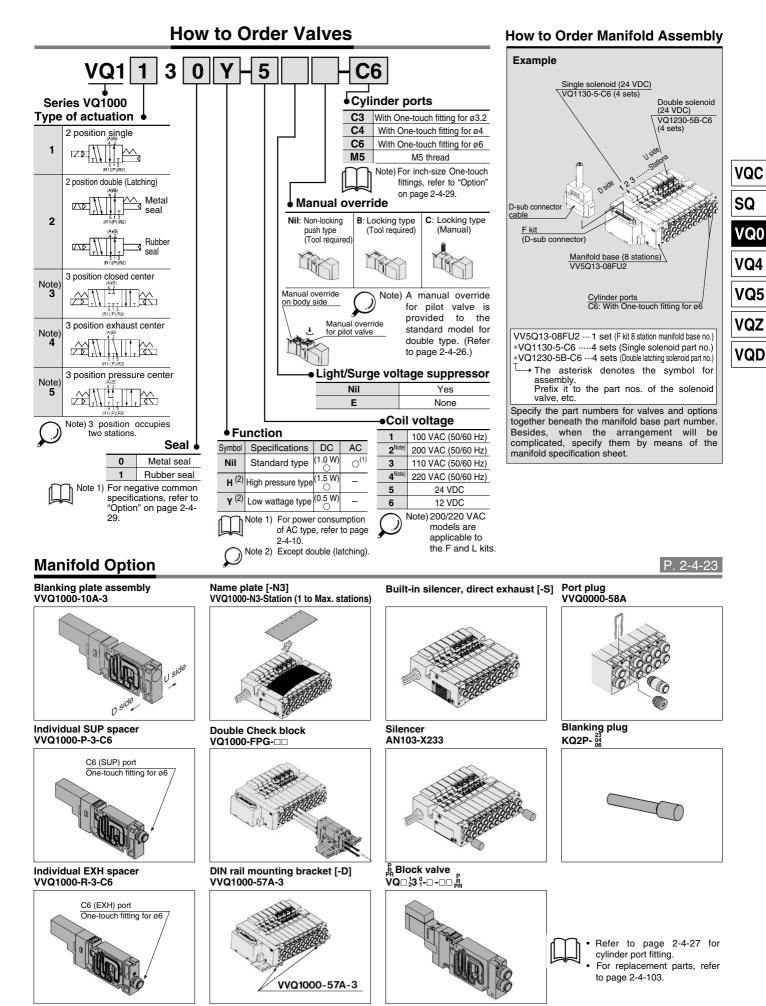

SMC

Series VQ1000 Body Ported Plug-in Unit: Flip Type

Model

						F	low cha	racteristics	Response time (2)(ms)					
Series	1	mber of lenoids	Model		1 → 4	$1 \rightarrow 4/2 \; (P \rightarrow A/B)$			4/2 → 5/3 (A/B → R1/R2)			Low wattage:	AC	Weight (g)
	30	neriolas			C [dm³/(s·bar)]	b	Cv	C [dm³/(s-bar)]	b	Cv	H: 1.5 W	0.5 W	AC	(9)
	٦	0:	Metal seal	VQ1130	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	
	osition	Single	Rubber seal	VQ1131	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	57
	2 po	Double	Metal seal	VQ1230	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less] "
	(1		Rubber seal	VQ1231	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	
VQ1000		Closed	Metal seal	VQ1330	0.67	0.13	0.16	0.73	0.13	0.17	20 or less	26 or less	40 or less	
VQ1000	_		Rubber seal	VQ1331	0.78	0.22	0.18	0.84	0.21	0.20	25 or less	33 or less	47 or less	
	position	Exhaust	Metal seal	VQ1430	0.74	0.14	0.17	0.84	0.16	0.20	20 or less	26 or less	40 or less	105
3008		center	Rubber seal	VQ1431	0.78	0.28	0.19	1.0	0.21	0.24	25 or less	33 or less	47 or less] 103
		Pressure	Metal seal	VQ1530	0.74	0.14	0.17	0.82	0.16	0.20	20 or less	26 or less	40 or less	
			Rubber seal	VQ1531	0.78	0.28	0.19	0.84	0.21	0.22	25 or less	33 or less	47 or less	



Note 1) Cylinder port size C6

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air). Subject to the pressure and air




JIS Symbol

2 position single



2 position double (Latching)



3 position closed center



3 position exhaust center




3 position pressure center



Standard Specifications

	Valve construction		Metal seal	Rubber seal			
	Fluid		Air/Inert gas	Air/Inert gas			
	Maximum operating	pressure (3)	0.7 MPa (High pressure type: 0.8 MPa) (3)				
Valve specifications		Single	0.1 MPa	0.15 MPa			
iicat	Minimum	Double (Latching)	0.1 MPa	0.15 MPa			
Decil	operating pressure	3 position	0.1 MPa	0.2 MPa			
9 32	Ambient and fluid te	emperature	−10 to	50°C ⁽¹⁾			
Valv	Lubrication		Not re	quired			
	Manual override		Push type/Locking type (Tool required, Manual) Option				
	Impact/Vibration res	sistance ⁽²⁾	150/30 m/s ²				
	Enclosure		Dust-pr	otected			
	Coil rated voltage		12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)				
	Allowable voltage fl	uctuation	±10% of rated voltage				
	Coil insulation type		Class B or equivalent				
bic		24 VDC	1 W DC (42 mA), 1.5 W DC (6	63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾			
Solenoid		12 VDC	1 W DC (83 mA), 1.5 W DC (1	25 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾			
လိ	Power consumption	100 VAC	Inrush 0.75 VA (7.5 mA),	Holding 0.75 VA (7.5 mA)			
	(Current)	110 VAC	Inrush 0.83 VA (7.5 mA),	Holding 0.83 VA (7.5 mA)			
		200 VAC	Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 m				
		220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 m				
Note 1) Use dry air to prever	nt condensation v	vhen operating at low tem				

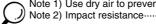

Note 2) Impact resistance No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once

for each condition. (Values at the initial period)

Vibration resistance ···· No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and deenergized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W).


Note 4) Values in the case of low wattage (0.5 W) specifications.

Plug-in Unit: Flip Type Series VQ1000

Manifold Specifications

			Por	ting specification	ons	Applicable stations	Applicable solenoid valve	5 station
Series	Base model	Type of connection	Port	One-touch fitti	ng/Port size (1)			weight
			location	1(P), 3(R)	4(A), 2(B)	Stations	Solonola valve	(g)
VQ1000	VV5Q13-□□□	■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ J kit— Flat ribbon cable connector (20P) ■ L kit—Lead wire cable ■ S kit—Serial transmission unit	Side	C6 (Ø6) Option Built-in silencer, Direct exhaust	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)	1 to 16 stations	VQ1□30 VQ1□31	424

Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-29. Note 2) For details, refer to page 2-4-29.

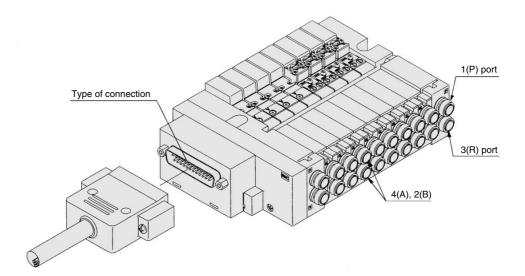

VQC

SQ


VQ0

VQ4

VQ5

VQZ

VQD



- The D-sub connector reduces installation labor for electrical connections
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


Porting specifications Applicable Series Port size Port stations location 4(A), 2(B) 1(P), 3(R) Max. 16 **VQ1000** Side C₆ C3, C4, C6, M5 stations

D-sub Connector (25 pins)

Cable assembly

AXT100-DS25-030

The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

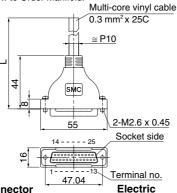

D-sub	Connector	-
Cable	Assembly ((Option)

Cable length (L)	Assembly part no.	Note
	AXT100-DS25-015	0 11 05
3 m	AXT100-DS25-030	Cable 25 core
5 m	AXT100-DS25-050	A 2-7/11/U

For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fuiitsu Limited
- · Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- · Hirose Electric Co., Ltd

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal Lead wire

no.	color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

resistance MΩkm, 20°C Note) The min. bending radius of D-sub cable assembly is

Characteristics

Characteristics

65

or less

1000

5 or more

Item

Conductor

resistance Ω/km, 20°C


Voltage limit

V 1 min AC


Insulation



Note) Types with 15 pin are also available. For details, refer to page 2-4-29.

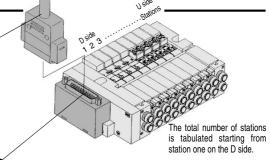

Electrical wiring specifications

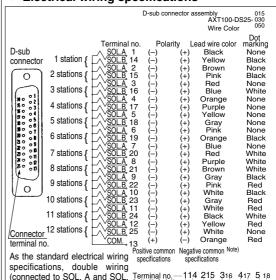

(connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.

Terminal no A B A B A B A B A B (*) A B (*) side B side Stations-1 2 3 4 5 Double wiring (Standard


3 position uses two stations. The A side solenoid of a 3 position valve is connected to SOL.A at the station with the smaller number in the above figure and the B side solenoid to SOL.A at the next station.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

16

16 stations

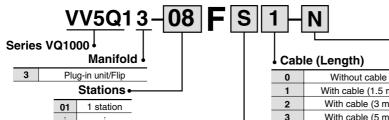

Note) For details, refer to page 2-4-29

With cable (1.5 m) With cable (3 m)


3 With cable (5 m)

Connector entry direction

U	Top entry
S	Side entry

Option

Nil	None					
D	DIN rail mounting style					
K ⁽²⁾	Special wiring specifications					
	(Except double wiring)					
N	With name plate					
S	Built-in silencer, direct exhaust					



Note 2) Specify the wiring specifications on the manifold specification sheet.



VQC

SQ


VQ0

VQ4

VQ5

VQZ

VQD

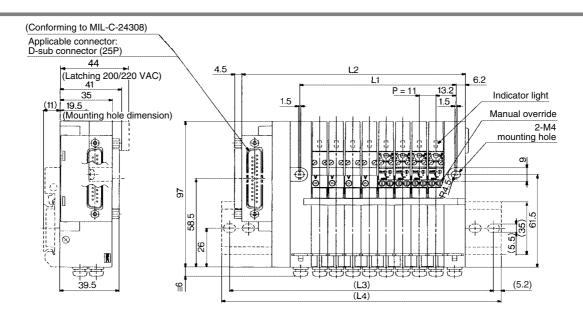

D side U side }======*>* 2-C6 (7.5)1(P) SUP port 2n-C3, C4, C6, M5 19.2 C3: One-touch fitting for ø3.2

Stations---1---2--3--4--5--6--7--8---n

The broken lines indicate the DIN rail mounting style [-D] and the top entry connection [-FU].

> Note) 3 position types need two stations.

> > Cylinder port is located at U side of body

manaiana


Note 2) Except double (latching).

Dillie	Formula L1 = $11n + 15.5$, L2 = $11n + 60$ n: Station (Maximum 16 stati							stations)								
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	71	82	93	104	115	126	137	148	159	170	181	192	203	214	225	236
(L3)	100	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5
(L4)	110.5	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273

C4: One-touch fitting for ø4

C6: One-touch fitting for ø6

M5: M5 thread

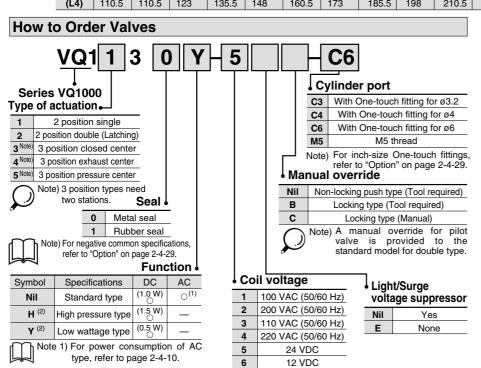

2-C6

3(R) EXH port,

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example> D-sub connector kit with 3 m cable

VV5Q13-08FU2···· 1 set — Manifold base no. *VQ1130-5-C6..... 4 sets — Valve part no. (Stations 1 to 4) $*\mbox{VQ1230-5B-C6}....4$ sets — Valve part no. (Stations 5 to 8) $\mbox{\sc J}$

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

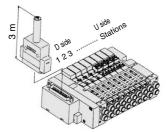





- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


	Po				
Series	Port	Po	ort size	Applicable	
	location	1(P), 3(R)	4(A), 2(B)	stations	
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations	

Flat Ribbon Cable (26 pins)

Cable assembly •

AXT100-FC26-103

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

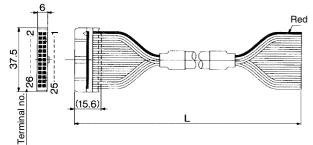


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L) Assembly part no.		Note
1.5 m	AXT100-FC26-1	0.11.00
3 m	AXT100-FC26-2	Cable 26 core x 28AWG
5 m	AXT100-FC26-3	X ZOAWG

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.


Connector manufacturers' example

- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.




Note) For details, refer

to page 2-4-29.

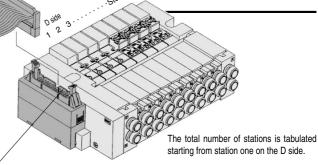

● Electrical wiring specifications

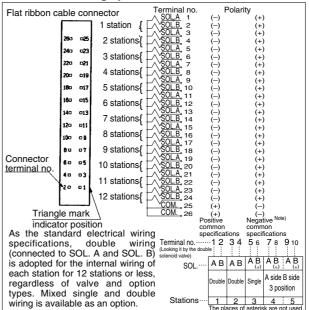


3 position type uses two stations. The A side solenoid of a 3 position valve is connected to SOL. A at the station with the smaller number in the above figure and the B side solenoid to SOL. A at the next station.



For details, refer to page 2-4-29.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

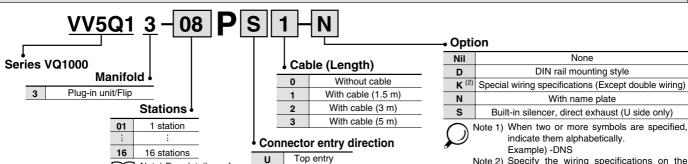

Side entry

S

Note 2) Specify the wiring specifications on the manifold specification sheet.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

Plug-in Unit: Flip Type Series VQ1000

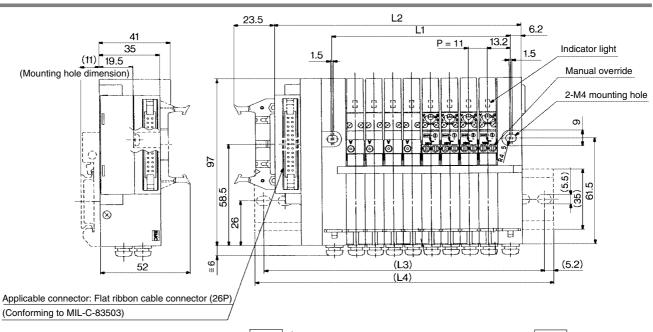

D side -- 7 -- 8 ---n U side --2--3---4--5--6 Stations 2-C6 1(P) SUP port 14 44-44------------⊭≡≡≡≢≡≡≢≕ 2-C6 2n-C3, C4, C6, M5 2 C3: One-touch fitting for ø3.2 P = 11 7 3(R) EXH port C4: One-touch fitting for ø4 C6: One-touch fitting for ø6 M5: M5 thread

 \mathcal{Q}

The broken lines indicate the DIN rail mounting style [-D] and the top entry connection [-PU].

Note) 3 position types need two stations.


Cylinder port is located at U side of body.

Note 1) For power consumption of AC type, refer to page

Note 2) Except double (latching).

Dimensions

Dimer	IMENSIONS Formula L1 = $11n + 15.5$, L2 = $11n + 55$ n: Station (Maximum 16 stations							stations)								
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	66	77	88	99	110	121	132	143	154	165	176	187	198	209	220	231
(L3)	87.5	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	250	262.5
(L4)	98	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273

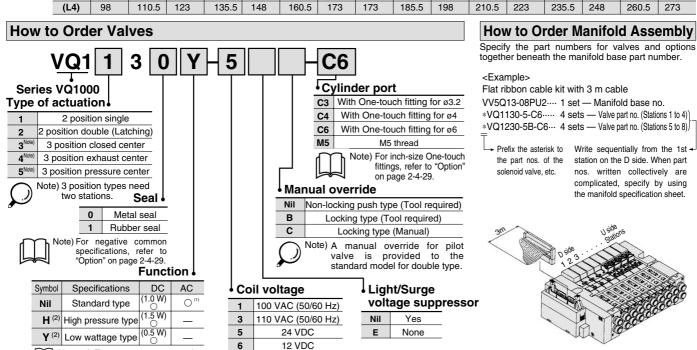

VQ1000 Kit (Flat ribbon cable connector)

- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


Porting specifications Applicable Series Port Port size stations location 1(P), 3(R) 4(A), 2(B) Max. 16 **VQ1000** Side C₆ C3, C4, C6, M5 stations

Flat Ribbon Cable (20 pins)

Cable assembly

AXT100-FC20-1 to 3

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order

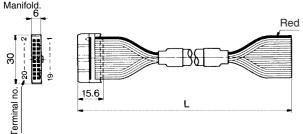


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	0.11.00
3 m	AXT100-FC20-2	Cable 20 core x 28AWG
5 m	AXT100-FC20-3	X ZOATTO


* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Oki Flectric Cable Co. Ltd.
- Sumitomo 3M Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited

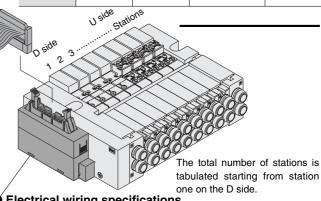

Electrical wiring specifications

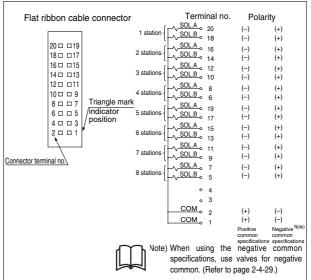


As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.



Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

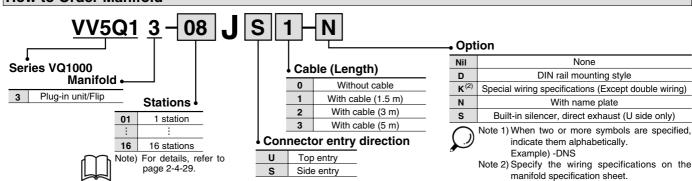

VQC

SQ

VQ0


VQ4

VQ5

VQZ


VQD


Plug-in Unit: Flip Type Series VQ1000

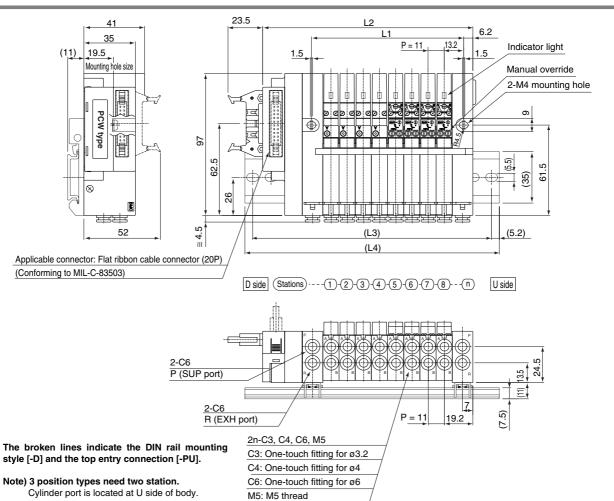

Note 2) Except double (latching).

Dimensions Formula L1 = 11n + 15.5. L2 = 11n + 55n: Station (Maximum 16 stations) 2 3 4 5 6 9 10 12 13 15 16 L1 26.5 37.5 48.5 59.5 70.5 81.5 92.5 103.5 114.5 125.5 136.5 147.5 158.5 169.5 180.5 191.5 L2 66 77 88 99 110 121 132 143 154 165 176 187 198 209 220 231 (L3) 100 112.5 125 137.5 162.5 162.5 175 187.5 200 212.5 225 237.5 250 262.5 87.5 150 (L4) 98 110.5 123 135.5 148 160.5 173 173 185.5 198 210.5 223 235.5 248 260.5 273

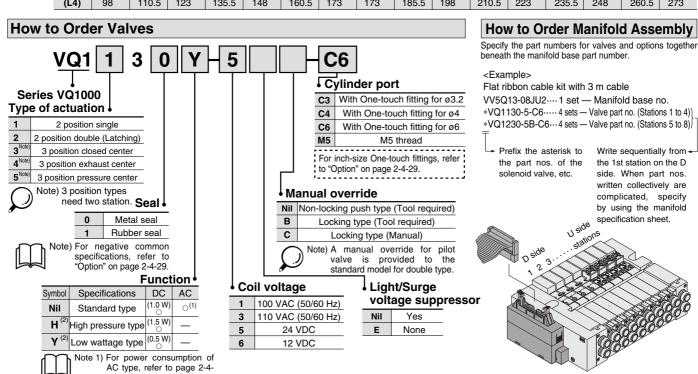







- It is the standard type which lead wire is extracted directly.
- Maximum stations are 16.


	Po			
Series	Port	Po	Applicable	
	locaition	1(P), 3(R)	4(A), 2(B)	stations
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations


Wiring specifications: Positive COM

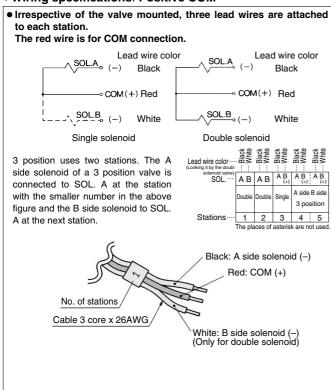

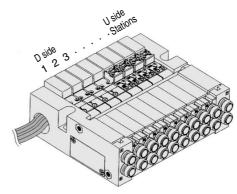

Wiring specifications: Negative COM (Option)

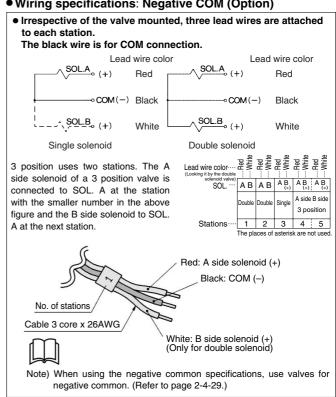

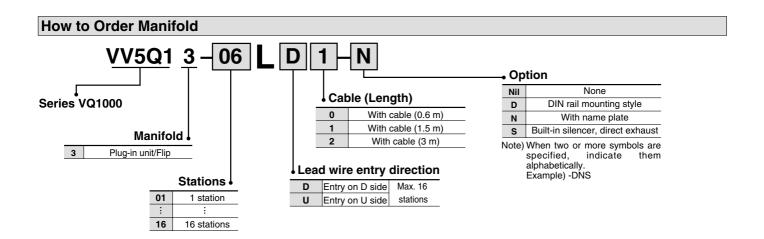

VQC

SQ


VQ0


VQ4

VQ5

VQZ

VQD



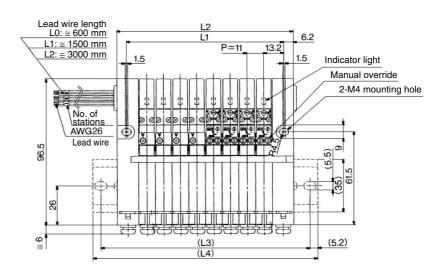

D side Stations --- -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- 8 --- n U side 1(P) SUP por ###========= 2n-C3, C4, C6, M5 C3: One-touch fitting for ø3.2 C4: One-touch fitting for ø4 C6: One-touch fitting for ø6


The broken lines indicate the DIN rail mounting style [-D].


The lead wire entry is on D side (LD□) in this case.

Note) 3 position types need two $\overline{3(R) EXH}$ port stations.

Cylinder port is located at U side of body.


Dimer	mensions Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Station (Maximum 16 station								stations)							
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
(L3)	62.5	75	87.5	100	112.5	125	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225
(L4)	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5

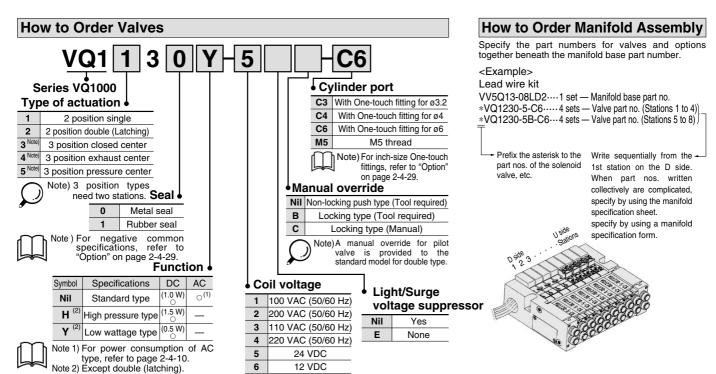



- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points max.).
- 16 stations max. (Specify a model with 9 to 16 stations by using the manifold specification sheet.)

	Po	Porting specifications							
Series	Port	Po	ort size	Applicable					
	location	1(P), 3(R)	4(A), 2(B)	stations					
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations					

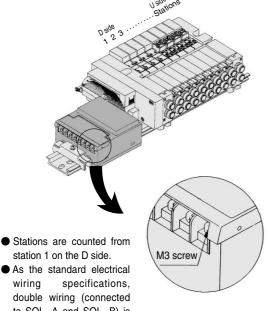

to SOL. A and SOL. B) is


adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.

Item	Specifications					
External power supply	24 VDC±10%					
Current consumption (Internal unit)	SA, SB, SD, SFI, SH: 0.1 A/SC: 0.3 A					

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System					
Name of terminal block (LED)	ACOPESS NO. IN SUN. IL THO ACOPESS NO. IN SUN. IL THO ACOPESS NO. ACOPES NO. ACOPESS NO. ACOPESS NO. ACOPESS NO. ACOPESS NO. ACOPES NO. ACOPESS NO. ACOPESS NO. ACOPESS NO. ACOPESS NO. ACOPES NO. ACOPESS NO. ACOPES NO.	POWER RIAN SO RO ERR STATION MO OV (SDA) (SDB) (SG) (RDA) (RDB) (FG)					
Name of termin	LED Description TRD Lighting during data reception RUN/ERR Blinking when received data is normal; Lighting when data reception	LED Description POWER Lighting when power is turned ON RUN Lighting when data transmission with the master station is normal RD Lighting during data reception SD Lighting during data error occurs. Lighting when reception data error occurs. Light ums off when the error is corrected.					
Note	T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1For models of Mitsubishi Electric Corporation EX300-TTA1For models of OMRON Corporation EX300-TFU1For models of Fuji Electric Co., Ltd. EX300-T001For general models * Up to 32 points per unit. No. of output points, 16 points	Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 *Max. 64 stations, connected to remote I/O stations (Max. 512 points). No. of output points, 16 points. No. of sta. occupied, 2 stations					

 \ast For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

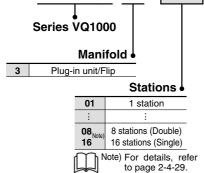

08

Model 0 Without SI unit Α With general type SI unit (Series EX300) В Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System С OMRON Corp.: SYSBUS Wire System D SHARP Corp.: Satellite I/O Link System F1 NKE Corp.: Uni-wire System (16 output points) Н NKE Corp.: Uni-wire H System Note) Please consult with SMC for the following serial

transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation, Fuji Electric Co., Ltd.; OMRON Corporation.

* The dust-protected type SI unit is applicable, too. For details, please contact SMC.

Option

D (2)	2
K (3)	Special wiring specifications (Except double wiring
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate alphabetically.
Example) -DNS
Note 2) S kits are DIN rail mounting styles,

so include suffix D.

Note 3) Specify the wiring specifications on the manifold specification sheet.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

SI unit output no. 0 1 2 3 4 5 **6** (Locked by double solenoid valve.) В В Α SOL. location Double m A side B side Dou 3 position \overline{S} Stations 2 3

The places of asterisk are not used.

3 position uses two stations for wiring. The A side solenoid of 3 position valve is connected to A at the station with the smaller number in the above figure.

<Wiring example 2>

Single/Double Mixed Wiring (Option)
Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

SI unit output no. -----0 1 2 3 4 (Locked by double solenoid valve.) Α В ABAB ABAB SOL. location Double unit A side B side Doon Sin 3 position \bar{s} Stations 2 5 1 3 4

Type SC Type SD **OMRON Corporation SHARP Corporation** SYSBUS Wire System Satellite I/O Link System Name of terminal block (LED) □ ¤ TRI LED Description LED Lights when transmission is normal **POWER** ON when power supply is ON RUN Lights when power is ON and slave stations are operating normally and PLC is in operation mode RUN T/R Blinks during data transmission/reception Lights when slave station switch setting ON when transmission is abnormal FRROR is abnormal, communication is abnormal. PLC stopped and defective slave unit R.SET ON for master unit control input · Master station unit: Master station unit: SHARP's PLC OMBON PLC New Satellite Series W SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 ZW-31LM Note New Satellite Series JW * 32 units max., transmission terminal JW-23LM, JW-31LM connection (512 points max.) Max. 31 units, I/O slave stations connected

(504 points max.)

No. of output points, 16 points

How to Order Valves Cylinder port Series VQ1000 With One-touch fitting for ø3.2 Type of actuation C4 With One-touch fitting for ø4 2 position single With One-touch fitting for ø6 2 position double (Latching) M5 M5 thread 3 Note 3 position closed center inch-size Note) For One-touch 3 position exhaust center fittings, refer to "Option" on 5 Note) 3 position pressure center page 2-4-29. Note) 3 position types need Manual override two stations Non-locking push type (Tool required) Seal В Locking type (Tool required) Metal seal 0 С Locking type (Manual) 1 Rubber seal Note) A manual override for pilot valve is provided to the standard **Function** model for double type. DC Specifications Symbol Coil voltage (1.0 W)Nil Standard type 5 24 VDC/With indicator light/surge voltage suppressor H^{Note)} (1.5 W) High pressure type

(0.5 W)

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Serial transmission kit

VV5Q13-08SA-D···1 set — Manifold base part no. *VQ1230-5-C6······4 sets — Valve part no. (Stations 1 to 4)

*VQ1230-5B-C6...4 sets — Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

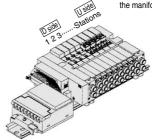


Note) Except double (latching)


Low wattage type


Y^{Note)}

. No. of output points, 16 points



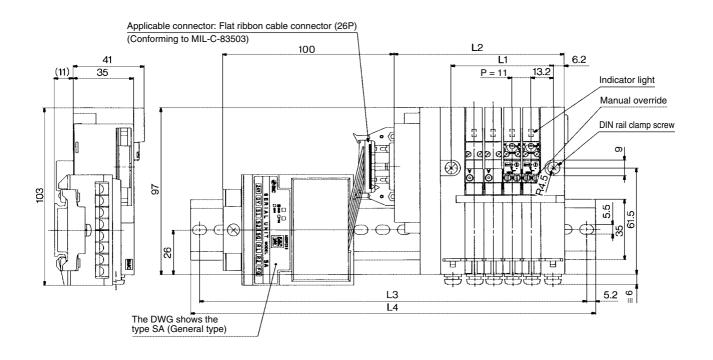

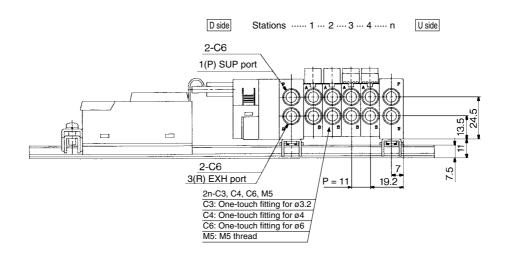





Dimensions Formula L1 = 11n + 15.5, L2 = 11n + 55 n: Station (Maximum 16 stations)										stations)						
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	66	77	88	99	110	121	132	143	154	165	176	187	198	209	220	231
L3	187.5	200	212.5	225	237.5	250	262.5	275	275	287.5	300	312.5	325	337.5	350	362.5
L4	198	210.5	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	373

Manifold Option Parts

Blanking plate assembly VVQ1000-10A-3

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.

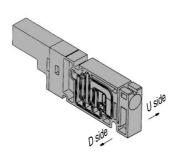



VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Individual SUP spacer VVQ1000-P-3-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side the valves U side. (Refer to the application example.)

- * Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.
- * Electric wiring is connected to the position of the manifold station where the individual SUP spacter is mounted.

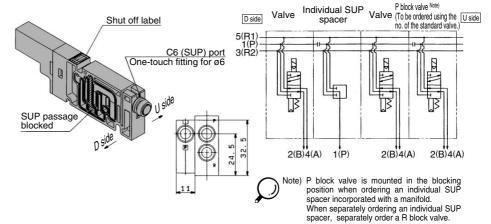


Individual EXH spacer VVQ1000-R-3-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (1 station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valves U side. (Refer to the application example.)

- * Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.
- * Electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

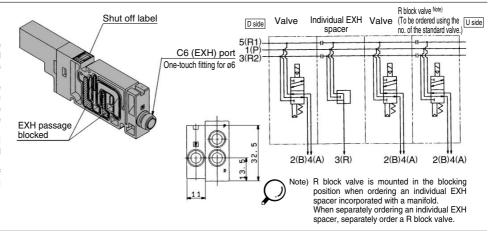

PR Block valve VQ1230-□-□---


For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that D sides of SUP and EXH passages are blocked

* Specify the number of stations on the manifold specification sheet.

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking positionfrom outside is attached. (One label for each)


 When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

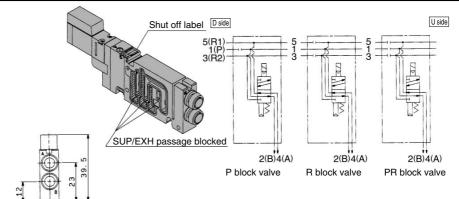





passage blocked



passage blocked


Series VQ1000

Manifold Option Parts

Name plate [-N3] VVQ1000-N3-Station (1 to Max. stations)


It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.

Insert it into the groove on the side of the end plate and bend it as shown in the figure.

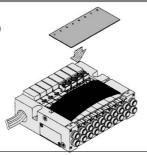



* When ordering assemblies incorporated with a manifold, add suffix N to the manifold no.




Blanking plug KQ2P- 04 Plug

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.






Dimensions


Applicable fittings size ød	Model	Α	L	D
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8


DIN rail mounting bracket VVQ1000-57A-3

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end. (The specification is the same as that for the option "-D".)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

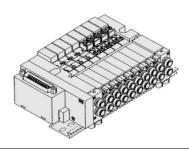

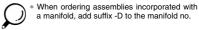



Built-in silencer, Direct exhaust [-S]


This is an exhaust port on top of the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect.

F, P and S kits are provided with single exhaust on U side.

Note) A large quantity of drainage generated in the air.




• For maintenance, refer to page 2-4-27.

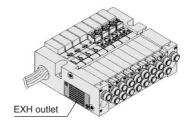


* When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.

Silencer AN103-X233

This is inserted into the centralized type EXH port (One-touch fitting).

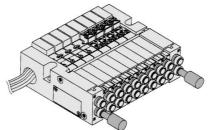



Dimensions


Series	Applicable fittings size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
VQ1000	6	AN103-X233	20	37	11	7	25


Port plug VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ1130-5L-C6-A
L A port, Plug

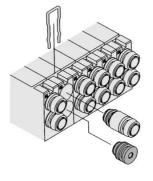



Double check block (Separated type) VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. The combination with a two position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	−5 to 50° C
Flow characteristics: C	0.60 dm3/(s·bar)
Max. operating frequency	180 CPM



Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

(Check valve operation principle) Cylinder pressure SUP side pressure (P1) VVQ1000-FPG-02 1 set *VQ1000-FPG-C6M5-D 2 sets TO CYL POR

VQC

SQ

VQ0


VQ4

VQ5


VQZ

VQD

Dimensions

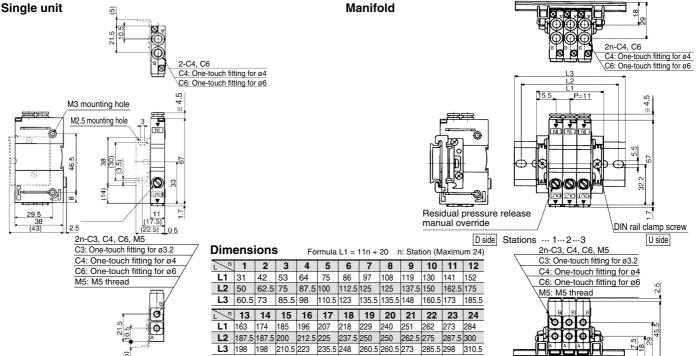

How to Order

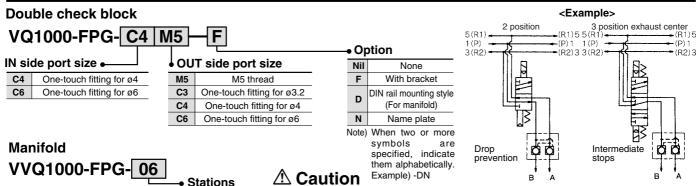

Stations 01

1 station 16 16 stations

<Example>

VVQ1000-FPG-06--6 types of manifold

*VQ1000-FPG-C4M5-D, 3 sets Double Check block *VQ1000-FPG-C6M5-D, 3 sets

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap
- Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.


 Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block.
 After screwing in the M5 fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2 N·m} • If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure


Series VQ1000

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Light/Surge Voltage Suppressor

The lighting positions are concentrated on one side for both single solenoid and double (latching) type. In the double (latching) type. A side and B side energization are indicated by two colors which match the colors of the manual overrides.

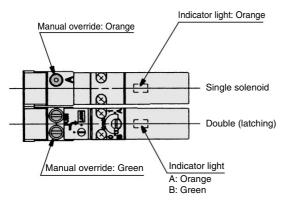

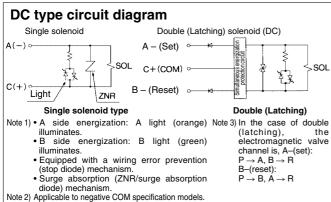

Double (Latching solenoid) Type

Different from the conventional double solenoid, the double uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more). The usage and function is the same as the double solenoid.

<Special Cautions for Latching Solenoid>

- 1. Select the circuit in which ON and OFF signals are not energized simultaneously.
- 2. 20 ms energization time is necessary for self-holding.
- 3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur. Also, do not use in places where strong magnetic fields are present.
- 4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side, ON position by energizing prior to use. After manual operation, the main valve will return to its original position.
- 5. Manual override on the pilot valve side can retain its switching position after manipulation.
- 6. Please contact SMC for long-term energization applications.
- 7. If the metal seal type goes down below the minimum operating pressure of supply air (0.1 MPa or less), the main valve will get back the home position (B side ON position). Therefore, in the event of shutting the supply air or applying the air with being A side ON position remained, cylinder may be pulsated. In the event of manipulating the supply air, the valve's switching position has to be set in the home position side (B side ON position side).

How to Mount/Remove Solenoid Valve

⚠ Caution Γie-rod bolt A <Procedure> Light cover Tie-rod bolt B

How to remove

- 1. Loosen tie-rod bolt B. (Two to four turns)
- 2. After fully loosening the tie-rod bolt, take off bold A upward as shown above.
- 3. Slide the valves aside to make a 1 mm clearance between the valve to betaken off and the others. As shown above, remove the whole valve while holding up the (a) side.

Reverse the sequence of steps above to remount. Torque applied to tie-rod bolt should be 1.0 to 1.4 N·m. Tighten evenly.

Note) Be careful not to push on the light cover while mounting/removing the valve.

Manual Override

🗥 Warning

Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

■ Push type (Tool required)



Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking slotted type



Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it.

■ Locking lever type (Option)




Push down completely on the manual override button with a small screwdriver While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

■ Manual override for double (latching) type

In the case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard. After manual operation, the main valve of the manual on the body side returns to the position before the manual operation, however. the pilot valve manual override maintains the change-over position.

Body side manual override Self-holding of the main valve is impossible. (Returns to the main valve position before operation.) Turn before pushing.



- If the manual override is turned by 180° clockwise and the ▶ mark is adjusted to A, then pushed in the direction of an arrow (♠), it will be back to the reset condition. (passage P → A)
- If the manual override is turned by 180° counterclockwise and the ▶ mark is adjusted to B, then pushed in the direction of an arrow (4), it will be back to the reset condition. (passage $P \rightarrow B$) (It is in the reset state at the time of shipment.)

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)




Replacement of Cylinder Port Fittings

A Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the top of the valve.

Remove the clip with a screwdriverto remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then re-insert the clip to the specified position.

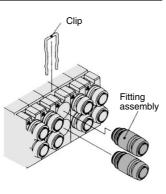

	Fitting assemly part no.
Applicable tubing O.D.	VQ1000
Applicable tubing ø3.2	VVQ1000-50A-C3
Applicable tubing ø4	VVQ1000-50A-C4
Applicable tubing ø6	VVQ1000-50A-C6

Purchasing order is available in units of 10 pieces

Caution


- 1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
- 2. The tightening torque for inserting fittings to the M5 thread assembly should be 0.8 to 1.4 N·m.

Mounting/Removing from the DIN Rail

Caution


Removing

- **1.** Loosen the clamp screw of the end plate on both sides.
- 2. Lift side (a) of the manifold base and side the end plate in the direction of (2) shown in the figure to remove.

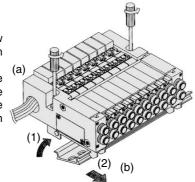

Mounting

- Hook side (b) of the manifold base on the DIN rail.
- 2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

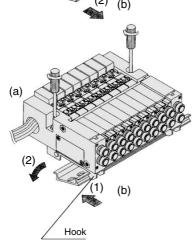

Built-in Silencer Replacement Element

⚠ Caution


A silencer element is incorporated in the end plate on both sides of the base. A dirty and choked element may reduce cylinder speed or cause manifunction. Clean or replace the dirty element.

Element Part No.

Tuno	Element part no.		
Туре	VQ1000		
Built-in silencer, direct exhaust (-S)	VVQ1000-82A-3		

* The minimum order quantity is 10 pcs.

Remove the cover from the side of the end plate and remove the old element with a screwdriver, etc.

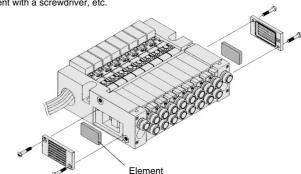

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Series VQ1000


Option

Different Number of Connector Pins


F and P kits with the following number of pins are available. Besides the standard number (F = 25; P = 26) select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.



kit (D-sub connector) 15 pins

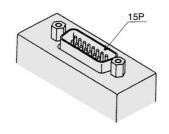

How to order manifold

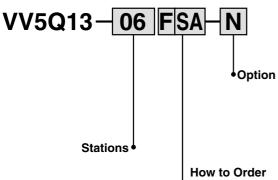


D-sub connector, 15 pins Connector location—Side (horizontal) Without cable

Kit/Electrical entry •

Pins	Тор	entry	Side entry			
15P(Max. 7 stations)	Kit F	UA	Kit F	SA		

Wiring Specifications

* As in the case of 25-pin models (standard), terminal no. 1 is the first station SOL.A and the terminal no. 8 is COM.

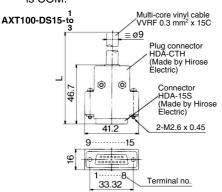

Wire Color by Terminal No. of D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

^{*} For other commercial connectors, use a type conforming to MIL-C-24308.

kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

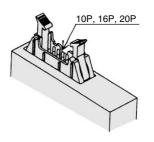

How to order manifold

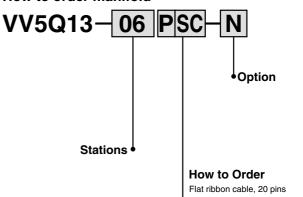

Connector location—Side (horizontal)


Without cable

Kit/Electrical entry -

Pins	Тор	entry	Side entry		
10P (Max. 4 stations)	Kit	UA	Kit	SA	
16P (Max. 7 stations)		UB	P	SB	
20P (Max. 9 stations)	Г Г	UC		SC	

Wiring Specifications

* As in the case of 26-pin models (standard), terminal no. 1 is the first station SOL.A and the last two terminal numbers are used for COM.

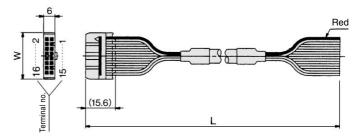

Flat Ribbon Cable Assembly

		· ,	
Cable length (L)	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)	17.2	24.8	30

^{*} For other commercial connectors, use a type with strain relief that conform to MIL-C-83503.

Option

Special Wiring Specifications

In the internal wiring of F kit, P kit, and JS kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types.

Mixed single and double wiring is available as an option.

1. How to order valves

Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.


Example)



Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without shipping any terminal numbers.

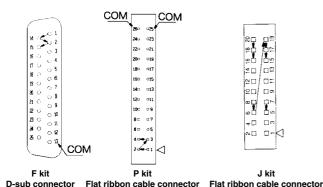

3. Max. number of stations

(25P)

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

(20P)


(26P)

kit	F ki (D-sub con		(Flat rib	P kit bon cable	J kit (Flat ribbon cable connector)	S kit (Serial)		
Туре	F s □ 25P	F s A 15P	P s □ 26P	P s C 20P	P s B 16P	P s A 10P	J % □ 20P	S□
Max. points	24 (16 stations)	14	24 (16 stations)	18 (16 stations)	14	8	16	16


Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The manifold no. shown below is for the L kits. For other kits the standard manifold can be used. Please contact for negative COM S kit.

How to order negative COM valves



How to order negative COM manifold



Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold

VV5Q13-08FSO-DN-00T

1(P), 3(R) port size: ø1/4

How to order valves

VQ1130 - 5 N7 Cylinder ports

 Symbol
 N1
 N3
 N7

 Applicable tube O.D. (Inch)
 Ø1/8"
 Ø5/32"
 Ø1/4"

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

DIN Rail Mounting

Each manifold can be mounted on a DIN rail.

Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

When DIN rail is unnecessary (Except S kit)

(DIN rail mounting brackets only are attached.) Indicate the option symbol, -DO, for the manifold no. **Example**)

VV5Q13-08LD1-DOS

 Others, option symbols: to be indicated alphabetically.

 When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.

Example)

VV5Q13-08FS1-D09S

Others, option symbols: to be indicated alphabetically.


 When changing the manifold style into a DIN rail mount Order brackets for mounting a DIN rail. (Refer to "Option" on page 2-4-24.)

No. VVQ1000-57A-3 2 pcs. per one

When ordering DIN rail only

DIN rail no.: AXT100-DR-n

* Refer to the DIN rail dimension table for determining the length




L Din	L Dimension $L = 12.5 \times n + 10.8 \times n + 10$										
No.	1	2	3	4	5	6	7	8	9	10	
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	
No.	11	12	13	14	15	16	17	18	19	20	
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	
No.	21	22	23	24	25	26	27	28	29	30	
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	
No.	31	32	33	34	35	36	37	38	39	40	
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	





Plug Lead Unit: Flip Type

How to Order Manifold

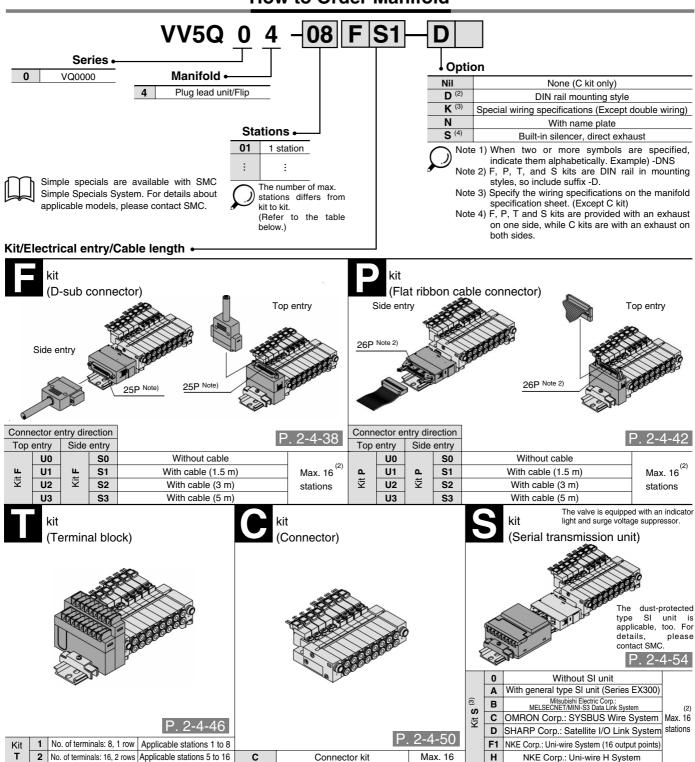

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.

Note 2) See page 2-4-69 for details.

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

VQC

VQ0

VQ4


VQ5

VQZ

VQD


Plug Lead Unit: Flip Type Series VQ0000



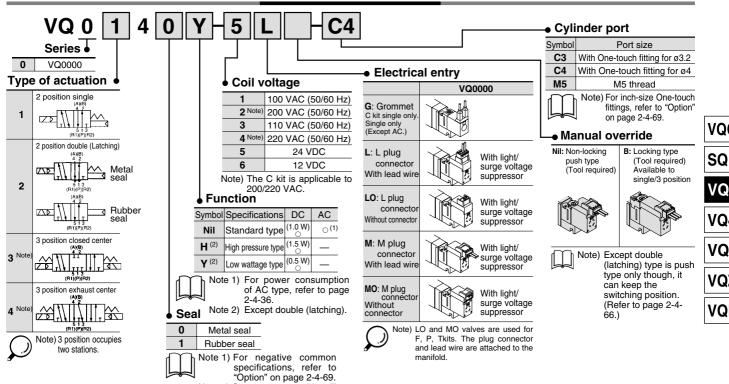

Manifold Option

Blanking plate assembly VVQ0000-10A-4

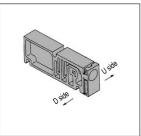

Individual SUP spacer


VVQ0000-P-4-C4

Name plate [-N4]



Note 2) Connector assembly will be required when the F, P, T, S kits add a valve. For model no., refer to "Option" on page 2-4-69

Double Check block

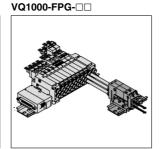


Individual EXH spacer VVQ0000-R-4-C4


C4 (SUP) port

One-touch

fitting for ø4

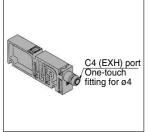



DIN rail mounting bracket VVQ0000-57A-4

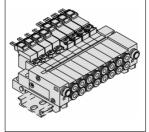

Built-in silencer, Direct exhaust [-S]


P. 2-4-59

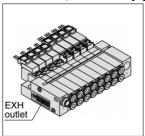

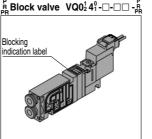


KQ2P- 04

Blanking plug

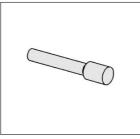

How to Order Manifold Assembly

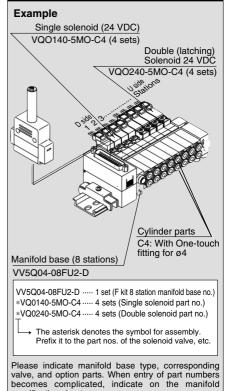




specification sheet.

• For replacement parts, refer to page 2-4-105.



Plug Lead Unit: Flip Type

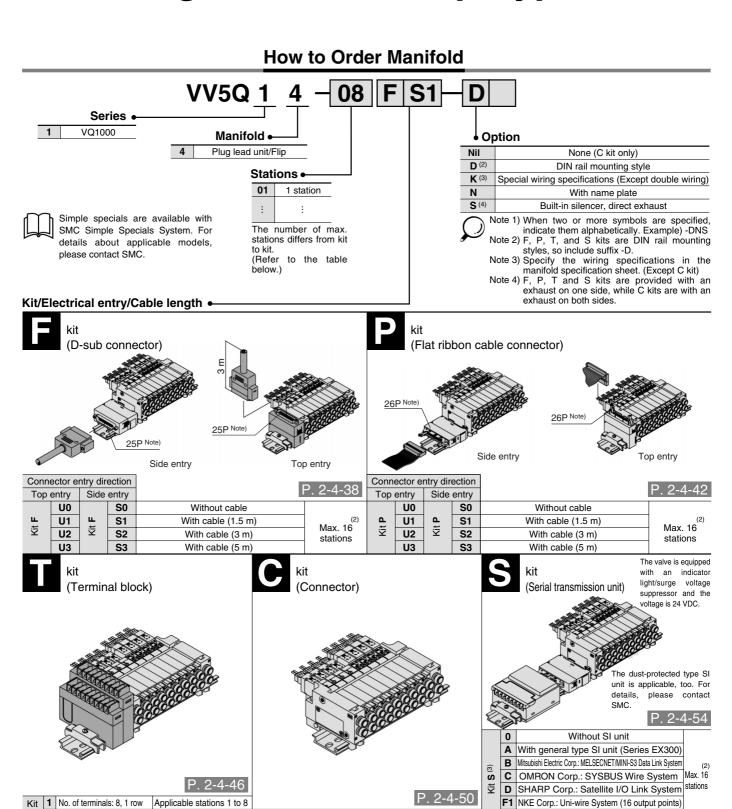

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.

Note 2) See page 2-4-69 for details.

2 No. of terminals: 16, 2 rows Applicable stations 5 to 16

Max. 16


NKE Corp.: Uni-wire H System

Connector kit

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

VQ4

How to Order Valves

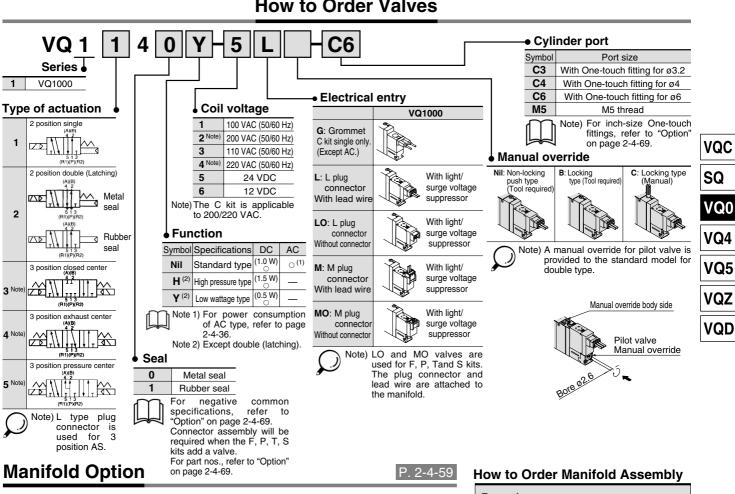


SUP/EXH passage block

VVQ0000-58A


Blanking plug

Port plug


Blanking plate assembly VVQ1000-10A-4



Individual SUP spacer VVQ1000-P-4-C6




Individual EXH spacer VVQ1000-R-4-C6




Name plate [-N4] VVQ1000-N4-Station (1 to Max. stations)




Double check block VQ1000-FPG-□□



DIN rail mounting bracket VVQ1000-57A-4




Built-in silencer, direct exhaust [-S]



Silencer (For EXH port)



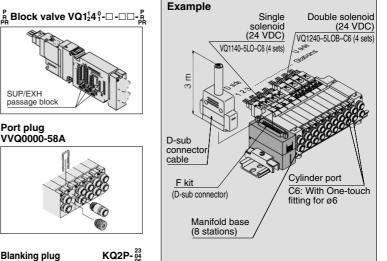

VV5Q14-08FU2-D 1 set (F kit 8 station manifold base no.) *VQ1140-5LO-C6 4 sets (Single solenoid part no.) *VQ1240-5LOB-C6 ···· 4 sets (Double solenoid part no.)

The asterisk denotes the symbol for assembly Prefix it to the part nos. of the solenoid valve, etc.

Please indicate manifold base type, corresponding valve, and option parts. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.




For replacement parts, refer to page 2-4-107.



Plug Lead Unit: Flip Type

How to Order Manifold

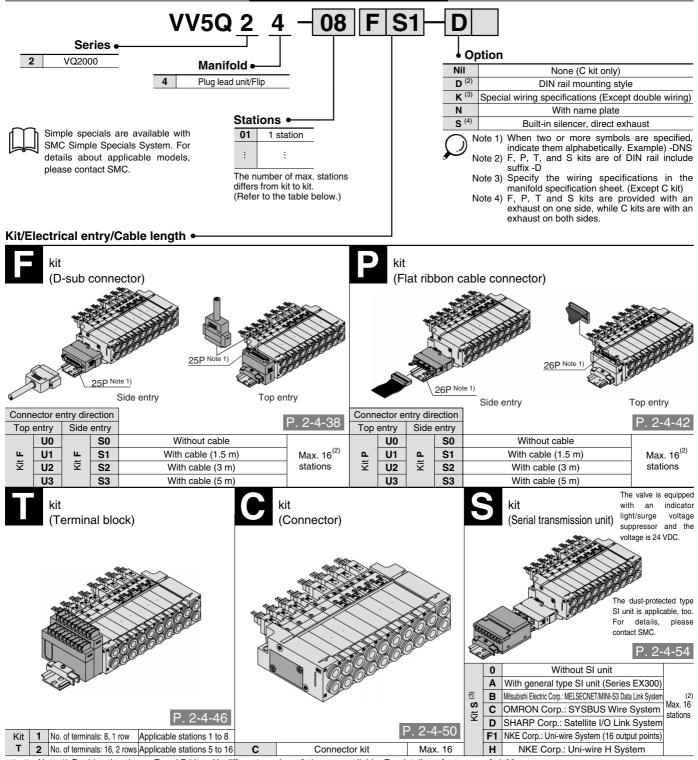


Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.

Note 2) See page 2-4-69 for details.

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.


How to Order Valves

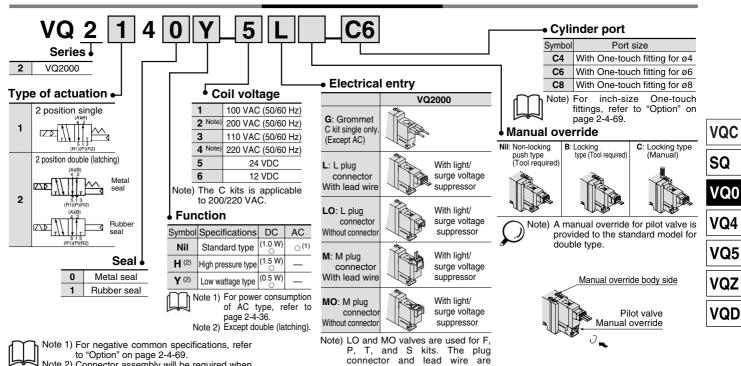

Manifold Option P. 2-4-59

Silencer (For EXH port)

Blanking plate assembly VVQ2000-10A-4




CB (SUP) port

fitting for ø8


Name plate [-N4] VVQ2000-N4-Station (1 to Max. stations)

Note 2) Connector assembly will be required when

the F, P, T, S kits add a valve. For part nos., refer to "Option" on page 2-



AN200-KM8




attached to the manifold.

DIN rail mounting bracket VVQ2000-57A-4




B Block valve VQ2 141 - - - R




Individual EXH spacer VVQ2000-R-4-C8

VVQ2000-P-4-C8



Built-in silencer. direct exhaust [-S]




Port plug VVQ1000-58A



KQ2P-06 Blanking plug




How to Order Manifold Assembly

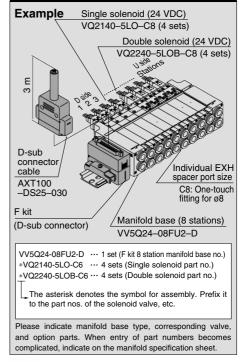



For replacement parts, refer to page 2-4-109

Double check block VQ2000-FPG-□□





Series VQ0000/1000/2000

Body Ported Plug Lead Unit: Flip Type

Model

						Flow characteristics						Response time (2) (ms)		
Series	1 -	umber of	Model		$1 \rightarrow 4/2 \text{ (P} \rightarrow \text{A/B)}$ $4/2 \rightarrow 5/3 \text{ (A/B} \rightarrow \text{R1/}$			R1/R2)	Standard: 1 W Lo			Weight		
	olenoids			C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	H: 1.5 W	0.5 W	AC	(g)	
3 position 2 position	_	Single	Metal seal	VQ0140	0.43	0.20	0.10	0.50	0.19	0.12	12 or less	15 or less	29 or less	57
	itior		Rubber seal	VQ0141	0.49	0.34	0.13	0.59	0.19	0.14	15 or less	20 or less	34 or less	
		Double (Latching)	Metal seal	VQ0240	0.43	0.20	0.10	0.50	0.19	0.12	12 or less	15 or less	29 or less	
	2		Rubber seal	VQ0241	0.49	0.34	0.13	0.59	0.19	0.14	15 or less	20 or less	34 or less	
	ے	Closed center	Metal seal	VQ0340	0.34	0.12	0.08	0.36	0.38	0.10	20 or less	26 or less	40 or less	105
	sitio		Rubber seal	VQ0341	0.37	0.25	0.09	0.42	0.45	0.12	25 or less	33 or less	47 or less	
		Exhaust center	Metal seal	VQ0440	0.36	0.21	0.09	0.48	0.18	0.12	20 or less	26 or less	40 or less	
	()		Rubber seal	VQ0441	0.37	0.31	0.11	0.59	0.24	0.14	25 or less	33 or less	47 or less	
O000LDA	ءِ	Single Double (Latching)	Metal seal	VQ1140	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	72
	sitio		Rubber seal	VQ1141	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	
			Metal seal	VQ1240	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	
			Rubber seal	VQ1241	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	
		Closed	Metal seal	VQ1340	0.67	0.13	0.16	0.73	0.13	0.17	20 or less	26 or less	40 or less	
	ءِ ا	center	Rubber seal	VQ1341	0.78	0.22	0.18	0.84	0.21	0.20	25 or less	33 or less	47 or less	
	position		Metal seal	VQ1440	0.74	0.14	0.17	0.84	0.16	0.20	20 or less	26 or less	40 or less	
3 pos			Rubber seal	VQ1441	0.78	0.28	0.19	1.0	0.21	0.24	25 or less	33 or less	47 or less	
	()	Pressure	Metal seal	VQ1540	0.74	0.14	0.17	0.82	0.18	0.20	20 or less	26 or less	40 or less	
		center	Rubber seal	VQ1541	0.80	0.28	0.19	0.84	0.21	0.22	25 or less	33 or less	47 or less	
VQ2000 Sportion 2		Single	Metal seal	VQ2140	2.0	0.13	0.43	2.3	0.15	0.58	22 or less	29 or less	49 or less	103
	sitio		Rubber seal	VQ2141	2.3	0.21	0.54	2.7	0.25	0.62	24 or less	31 or less	51 or less	
		Double	Metal seal	VQ2240	2.0	0.13	0.43	2.3	0.15	0.58	22 or less	29 or less	49 or less	
		(Latching)	Rubber seal	VQ2241	2.3	0.21	0.54	2.7	0.25	0.62	24 or less	31 or less	51 or less	

Note 1) Cylinder port size C4: (VQ0000), C6: (VQ1000), C8: (VQ2000)

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator ligh/surge voltage suppressor; clean air) Subject to the pressure and air quality.

JIS Symbol





2 position double (Latching)







3 position closed center



Rubber seal







	Valve construct	tion	Metal seal Rubber seal				
Valve specifications	Fluid		Air/Inert gas Air/Inert gas				
	Maximum oper	ating pressure	0.7 MPa (High pressure type: 0.8 MPa) (3)				
		Single	0.1 MPa	0.15 MPa			
	Min. operating	Double (Latching)	0.1 MPa	0.15 MPa			
	pressure	3 position	0.15 MPa	0.2 MPa			
×e s	Ambient and flu	uid temperature	-10 to 50°C ⁽¹⁾				
Val	Lubrication		Not required				
	Manual overrid	е	Push type/Locking type (Tool required, Manual type) Option				
	Impact resistance/Vi	bration resistance (2)	150/30 m/s²				
	Enclosure		Dust-protected				
	Coil rated volta	ge	12, 24 VDC, 100, 110, 2	00, 220 VAC (50/60 Hz)			
	Allowable volta	ge fluctuation	±10% of ra	ted voltage			
	Coil insulation t	ype	Class B or equivalent				
bio		24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) (3), 0.5 W DC (21 mA)				
Solenoid	Power	12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾				
		100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)				
	consumption	110 VAC	Inrush 0.55 VA (5 mA), Holding 0.55 VA (5 mA)				
	(Current)	200 VAC	Inrush 1.0 VA(5 mA), Holding 1.0 VA (5 mA)				
		220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA				
	- 4\ - 4		n when energting at law to				

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W) specifications. Note 4) Values in the case of low wattage type (0.5 W) specifications.




Plug Lead Unit: Flip Type Series VQ0000/1000/2000


Manifold Specifications

	a opcomoducióne							
			Р	orting specificat	ions	(2)	Applicable	5 station
Series	Base model	Type of connection	Port location	Port	size (1)	Applicable (2)	solenoid	weight
			Port location	1(P), 3(R)	4(A), 2(B)	Stations	valve	(g)
VQ0000	VV5Q04-□□□	■ F kit—D-sub connector ■ P kit—Flat cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission unit	Side	C6 (ø6) Option Built-in silencer, direct exhaust	C3 (ø3.2) C4 (ø4) M5 (M5 thread)		VQ0□40 VQ0□41	225
VQ1000	VV5Q14-□□□	■ F kit—D-sub connector ■ P kit—Flat cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission unit	Side	C6 (ø6) Option Built-in silencer, direct exhaust	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)	1 to 16 stations	VQ1□40 VQ1□41	380
VQ2000	VV5Q24-□□□	■ F kit—D-sub connector ■ P kit—Flat cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission unit	Side	C8 (Ø8) Option Built-in silencer, direct exhaust	C4 (Ø4) C6 (Ø6) C8 (Ø8)		VQ2□40 VQ2□41	671

Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-69.

Note 2) See page 2-4-69 for details.

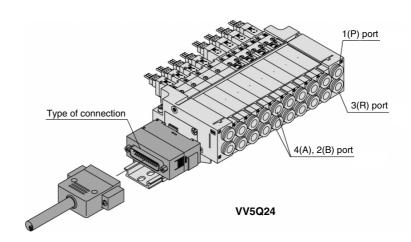

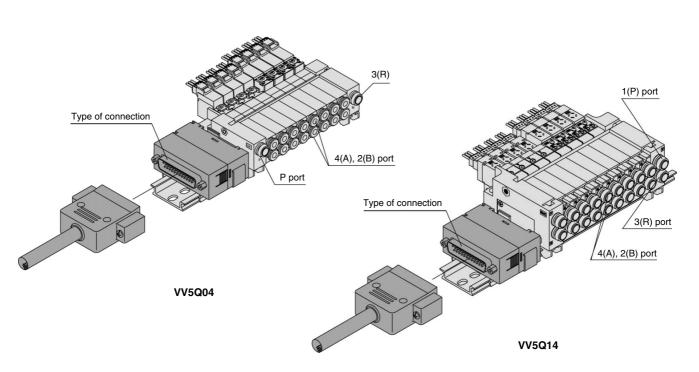

VQC

SQ


VQ0

VQ4

VQ5

VQZ

VQD



- VV5Q04 VV5Q14 VV5Q24
- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications VV5Q14


	Po	rting spe	Applicable			
Series	Port					
	location	1(P), 3(R)	4(A), 2(B)	stations		
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations		
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations		
VQ2000	Side	C8	C4, C6, C8	Max. 16 stations		

D-sub Connector (25 pins)

Cable assembly



The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

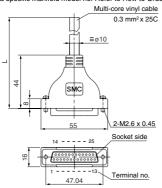

D-cub (annostor	Cabla	Assembly	(Ontion)
D-Sun (onnector	Came.	Assembly	(C)OHIOHI

	iengin (L)		
	1.5 m	AXT100-DS25-015 AXT100-DS25-030	0-11-05
	3 m	AXT100-DS25-030	Cable 25 core x 24AWG
ĺ	5 m	AXT100-DS25-050	X Z4AVVG

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fuiitsu Limited
- Japan Aviation Electronics Industry, Ltd
- J.S.T. Mfg. Co., Ltd.

Wire Color by Terminal No. of D-sub Connector Cable Assembly Terminal no. Lead wire color Dot marking

Į.	ыаск	Ivone		
2	Brown	None		
3	Red	None		
4	Orange	None		
5	Yellow	None		
6	Pink	None		
7	Blue	None		
8	Purple	White		
9	Gray	Black		
10	White	Black		
11	White	Red		
12	Yellow	Red		
13	Orange	Red		
14	Yellow	Black		
15	Pink	Black		
16	Blue	White		
17	Purple	None		
18	Gray	None		
19	Orange	Black		
20	Red	White		
21	Brown	White		
22	Pink	Red		
23	Gray	Red		
24	Black	White		
25	White	None		

MΩ/km. 20°C Note) The minimum bending radius of D-sub cable assembly is 20 mm.

Electric Characteristics

Characteristics

65 or less

1000

5 or more

Item

Conductor


O/km 20°C

Insulation resistance V, 1 min, AC


Insulation

resistance

Note) Types with 15 pin are also available. For details, refer to page 2-4-68.

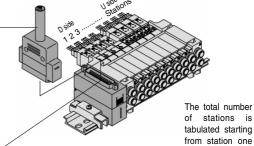


Electrical wiring specifications on the D side.

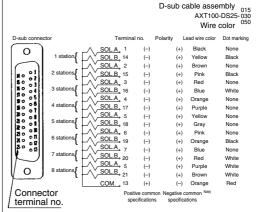

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-69.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-69.)

How to Order Manifold

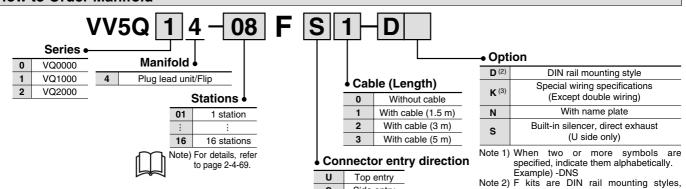



Side entry


include suffix -D.


Note 3) Specify the wiring specifications on the manifold specification sheet.


Plug Lead Unit: Flip Type Series VQ0000/1000/2000

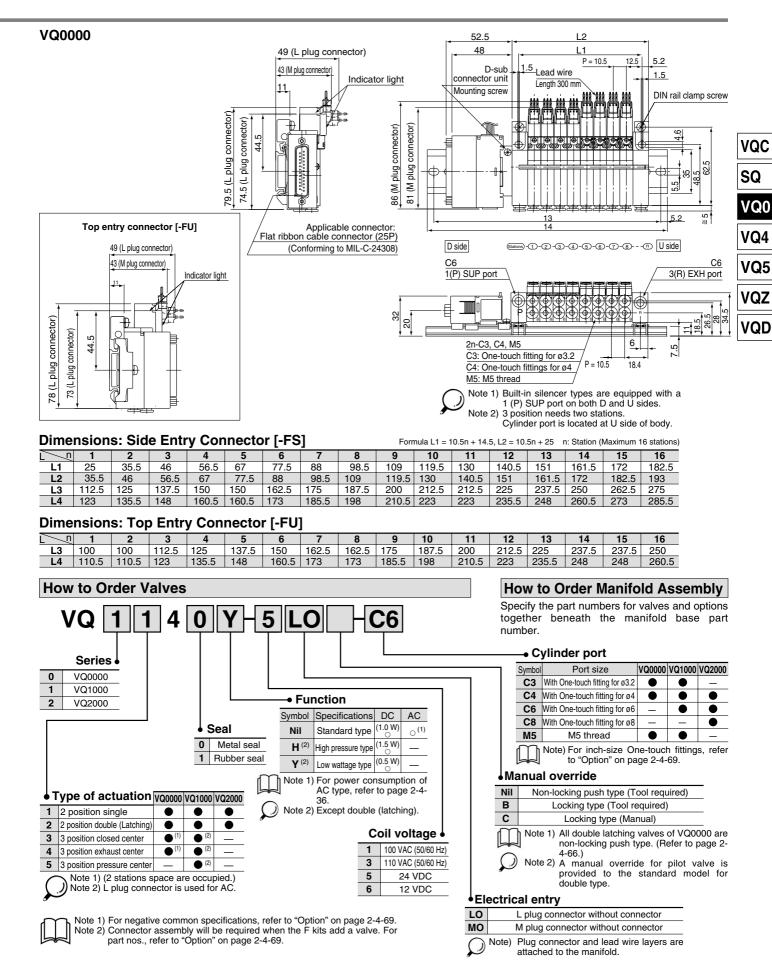



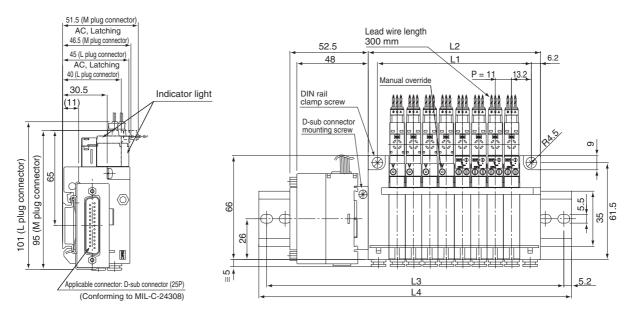

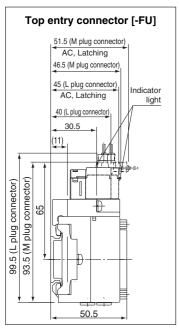

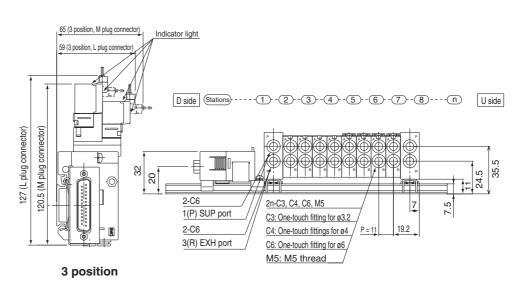

Dimensions: Side Entry Connector [-FS]

	L1 = 11n + 15.5		
Formula	L2 = 11n + 28	n: Stations (Maximum	16 stations

L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5
L4	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	285.5	298

Dimensions: Top Entry Connector [-FU]

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L	_3	100	112.5	125	137.5	137.5	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L	_4	110.5	123	135.5	148	148	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273

VQC

SQ

VQ0


VQ4


VQ5

VQZ

VQD

VQ2000

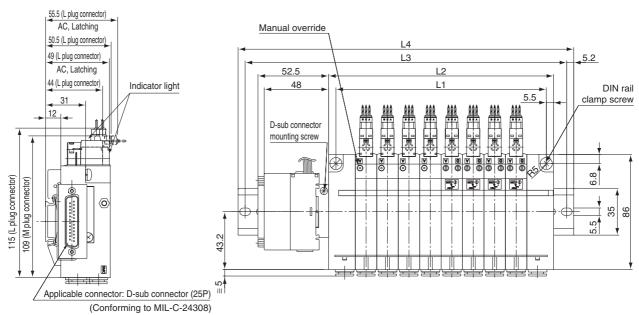


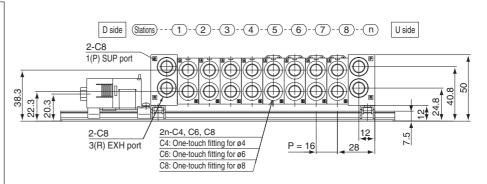

Dime	Dimensions: Side Entry Connector [-FS]										Formula L1 = 16n + 29, L2 = 16n + 40 n: Stations (Maximum 16 stations)					
	ີ 1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375
L4	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5

Dimensions: Top Entry Connector [-FU]

L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	112.5	137.5	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350
L4	123	148	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5



- VV5Q04 VV5Q14
- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Flat Ribbon Cable (26 pins)

Manifold Specifications


	Po	A				
Series	Port	Р	Applicable stations			
	location	1(P), 3(R)	4(A), 2(B)	- Oldiono		
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations		
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations		
VQ2000	Side	C8	C4, C6, C8	Max. 16 stations		

Stations

Cable assembly •

AXT100-FC26-1 to 3

Flat ribbon cable connector assembly can be ordered individually or included ackslash in a specific manifold model no. Refer to How to Order Manifold.

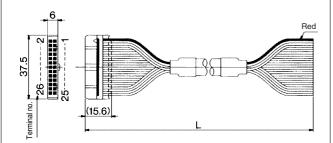

Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	0.11.00
3 m	AXT100-FC26-2	Cable 26 core x 28AWG
5 m	AXT100-FC26-3	X ZOAWG

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.


Connector manufacturers' example

- Hirose Flectric Co. Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Sumitomo 3M Limited Fujitsu Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.
- Note) Types with 10, 16, or 20 pin are also available. For details, refer to page 2-4-69.

VV5Q14

VV5Q24


The total number of stations is tabulated starting from station Electrical wiring specifications • one on the D side.

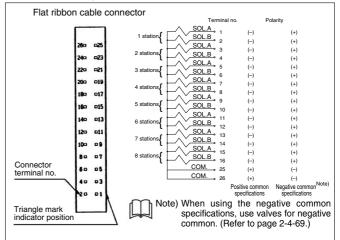

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for $8\,$ stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-69.

> so include suffix -D. Note 3) Specify the wiring specifications on the manifold specification sheet.

How to Order Manifold

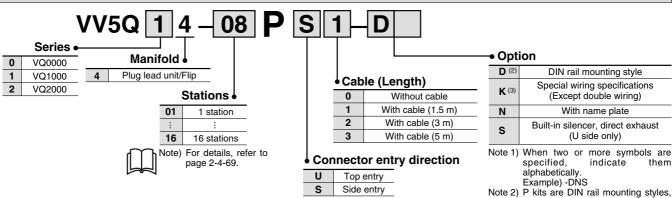

S

Side entry


Cylinder port is located at U

side of body



78.5 (L plug connector)
73.5 (L plug connector)


4.

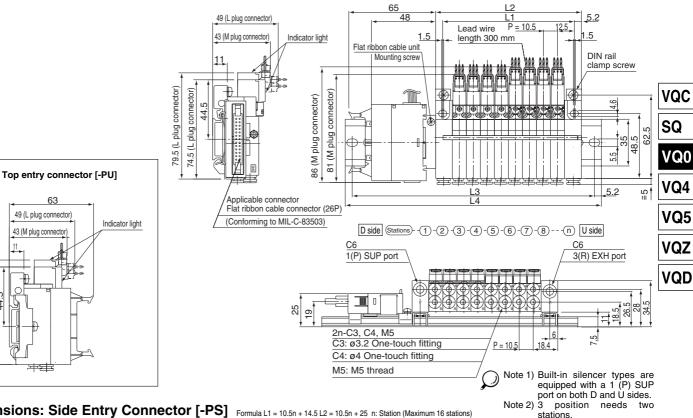



Dimensions: Side Entry Connector [-PS] Formula L1 = 10.5n + 14.5 L2 = 10.5n + 25 n: Station (Maximum 16 stations) 9 10 11 12 13 14 16 5 6 8 15 119.5 130 151 172 182.5 35.5 109 140.5 161.5 46 56.5 67 88 98.5 119.5 130 140.5 151 5 200 212.5 212.5 225 35.5 46 77.5 88 98.5 109 L2 56.5 67 161.5 172 182.5 193 137.5 150 150 162.5 175 (L3) 112.5 125 187.5 200 237.5 250 262.5 275 **(L4)** 123 | 135.5 | 148 | 160.5 | 160.5 | 173 | 185.5 | 198 210.5 223 223

Dimensions: Top Entry Connector [-PU]

<u>l</u>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	87.5	100	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250
L4	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5

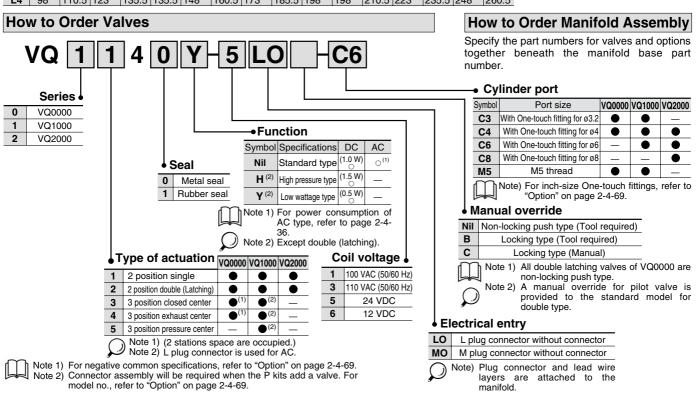

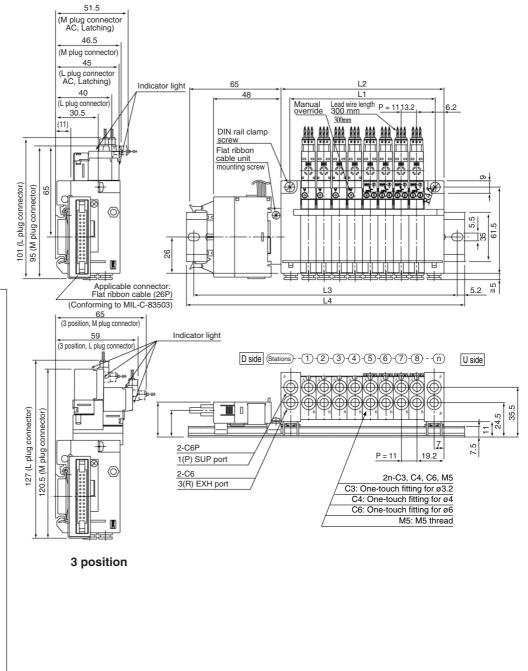

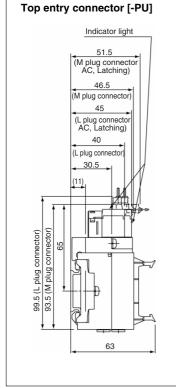


Dimer	Dimensions: Side Entry Connector [-PS] Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Stations (Maximum 16 stations)															stations)
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5
L4	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	285.5	298


Dimensions: Top Entry Connector [-PU]

	n 1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	87.5	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	250	262.5
L4	98	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273



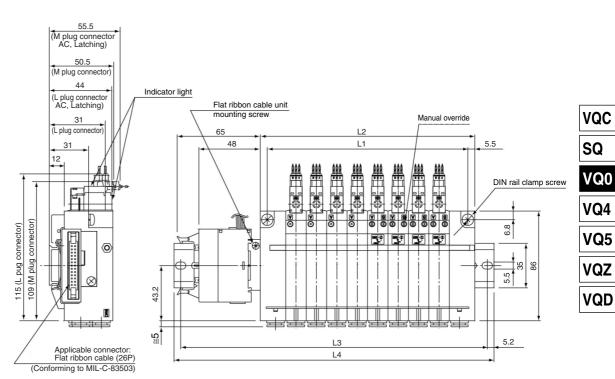

Top entry connector [-PU] 55.5 (M plug connector AC, Latching) 50.5 (M plug connector) 49 (L plug connector AC, Latching) 44 (L plug connector) Indicator light 115 (L pug connector) 109 (M plug connector)

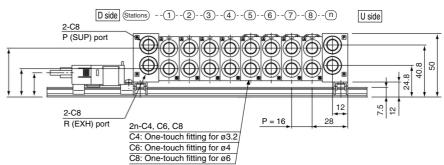


Dimensions: Side Entry Connector [-PS]							n: Statio			
	,	_	_	10	4.4	-10	40	4.4	45	4.0

Dimer	Dimensions: Side Entry Connector [-PS]									6n + 29,	L2 = 16	n + 40	n: Statio	ns (Maxi	mum 16	stations)
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375
L4	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5

Dimensions: Top Entry Connector [-PU]

L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	112.5	125	137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350
L4	123	135.5	148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5





- It is a standard terminal block type.
- Two quantities of terminals can be selected in accordance with the number of stations.


(8 terminals/16 terminals)

Maximum stations are 16.

Manifold Specifications

	Po	rting spe	ecifications	
Series	Port		Port size	Applicable stations
	location	1(P), 3(R)	4(A), 2(B)	stations
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C8	C4, C6, C8	Max. 16 stations

Electrical wiring specifications

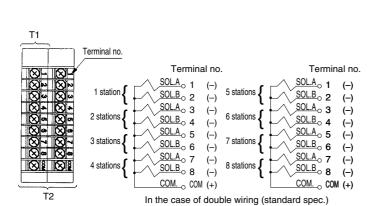


T1 (Terminal block of 1 row): 1 to 4 stations
T2 (Terminal block of 2 rows): 5 to 8 stations
T1 and T2 can be optionally chosen by adopt

T1 and T2 can be optionally chosen by adopting the combinations of single and double wiring (optional spec.), etc.


The quantity of terminal blocks used depends on the number of manifold stations.

Manifold	No. of terminals
1 to 4 stations	1 row
5 to 8 stations	2 rows

Wiring other than those above is possible. See page 2-4-69 for details.



For details, refer to page 2-4-69.

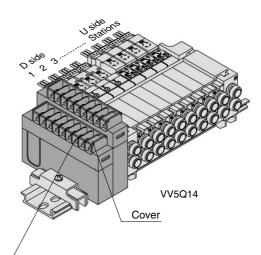


How to connect wires to terminal block

Open the terminal block cover to connect the wires to the terminal block.

(With M3 thread)

How to Order Manifold



 Stations ⋅

 01
 1 station

 :
 :

 16
 16 stations

Note 1)For negative common specifications, refer to "Option" on page 2-4-69.

Note 2) As option, the maximum number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-69.

D (2) DIN rail mounting style	
Din fall mounting style	
K (3) Special wiring specifications (Except double w	viring)
N With name plate	
S Built-in silencer, direct exhaust (U side onl	y)

Note 1) When two or more symbols are specified, indicate them alphabetically.

Example) -DNS

Note 2) T kits are DIN rail mounted type, so include suffix -D.


Note 3) Specify the wiring specifications in the manifold specification sheet.

Number of terminals

1	8 terminals in 1 row	Applicable stations 1 to 4 stations (Double), 8 stations (Single)
2	16 terminals in 2 rows	Applicable stations 5 to 8 stations (Double), 16 stations (Single)
_	- N - \ T 1	

Note) The number of terminal blocks can be chosen regardless of station qty. Suffix the option symbol, K, when the wiring specification is special.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

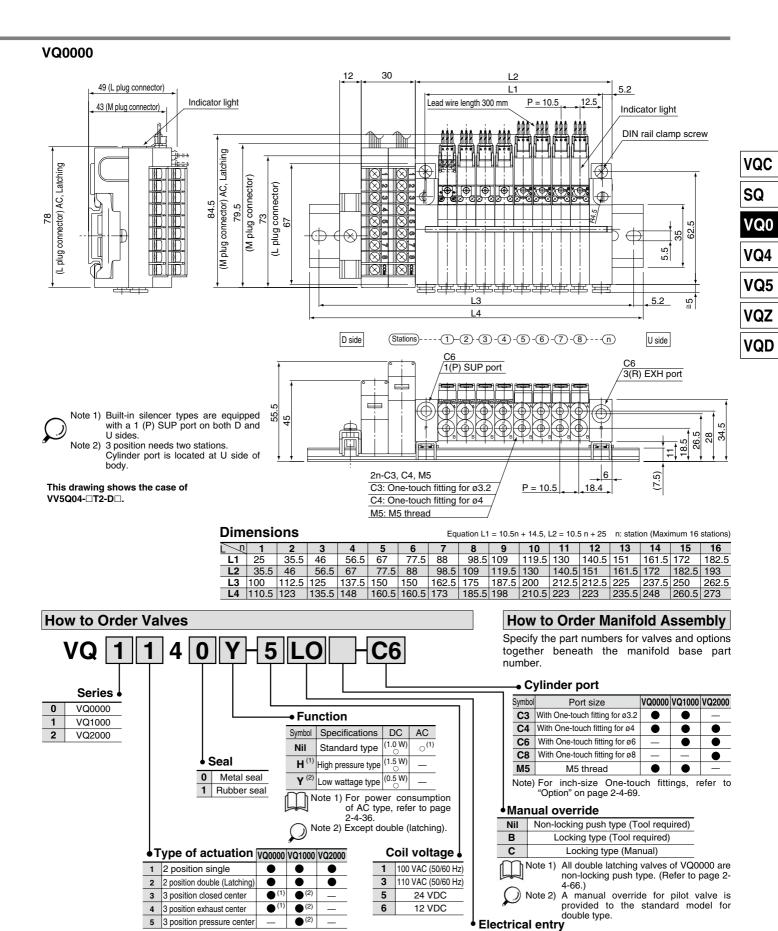

SMC

Note 1) 2 stations space are occupied.

Note 1) For negative common specifications, refer to "Option" on page 2-4-69.

Note 2) Connector assembly will be required when the T kits add a valve. For model no., refer to "Option" on page 2-4-69.

Note 2) L plug connector is used for AC

LO L plug connector without connector


MO M plug connector without connector

Note) Plug connector and lead wire

layers are attached to the manifold.

Series VQ0000/1000/2000

VQ1000

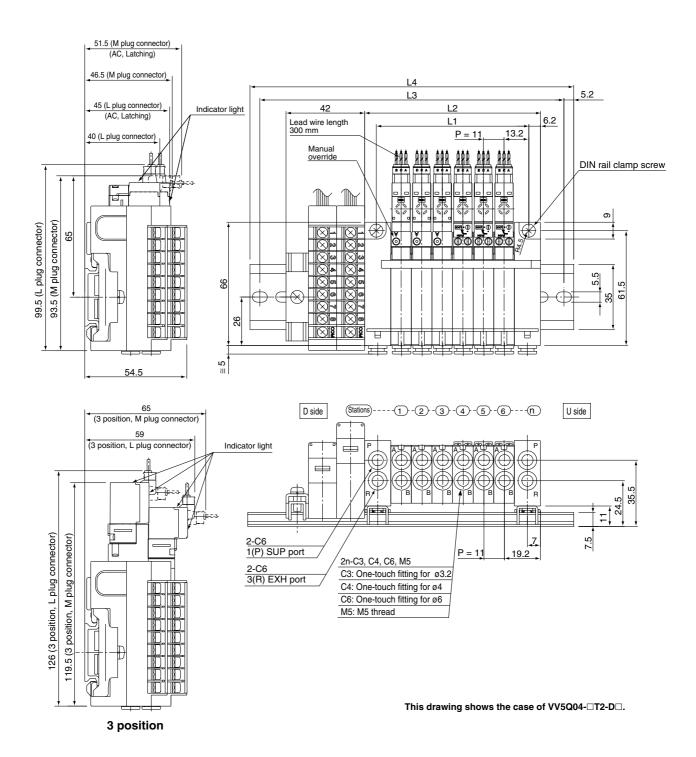

me		

ı	חוט	ensi	ons				Formula L1 = 11n + 15.5, L2 = 11 n + 28 n: Station (Maximum 16 stations)											
į	L n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
ĺ	L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5	
Ī	L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204	
	L3	112.5	112.5	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275	
Ī	L4	123	123	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5	

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD


VQ2000

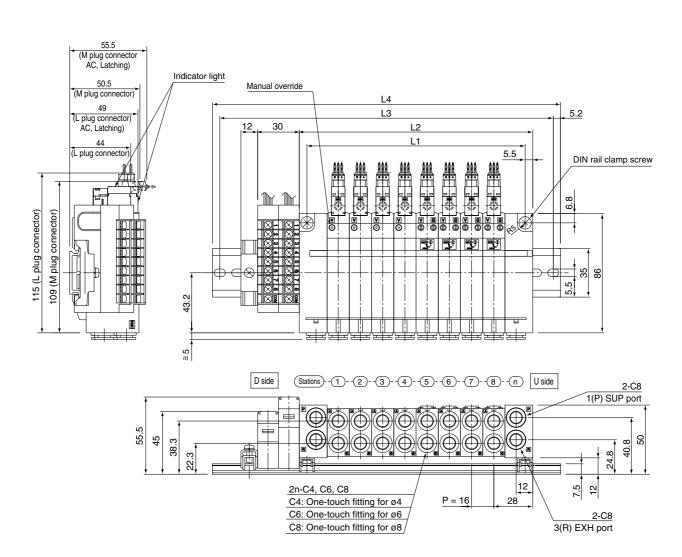

The drawing shows the case of VV5Q24-□T2.

Dim	Dimensions Formula L1 = 16n + 29, L2 = 16n + 40 n: Station (Maximum 16 stations											stations)				
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	125	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L4	135.5	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373







- Standard with lead wires connected to each valve individually.
- Maximum stations are 16.


Manifold Specifications

	Po	rting spe				
Series	Port		Port size	Applicable stations		
	location	1(P), 3(R)	4(A), 2(B)	stations		
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations		
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations		
VQ2000	Side	C8 C4, C6, C8		Max. 16 stations		

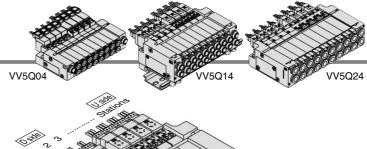


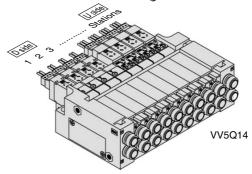

Wiring specifications: Positive COM



• The lead wires are connected to the valve as shown below.



• Plug connector lead wire length Note) The lead wire length of the valves with lead wire is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

White (Gray) [Gray]:
B side solenoid (-)

Example) Lead wire length 1000 mm
VQ1140-5LO-C6... 3 pcs.
AXT661-14A-10 ... 3 pcs.


Connector Assembly Part No. (For DC)


Lead wire length	Single/3 position part no.	Double solenoid part no.					
Socket only (3 pcs.)	AXT661-12A						
300 mm	AXT661-14A	AXT661-13A					
600 mm	AXT661-14A-6	AXT661-13A-6					
1000 mm	AXT661-14A-10	AXT661-13A-10					
2000 mm	AXT661-14A-20	AXT661-13A-20					
3000 mm	AXT661-14A-30	AXT661-13A-30					

Note 1) 100/110 VAC for single: AXT661-31A-*; for double: AXT661-32A-* 200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-* are in accordance with the above table.

Note 2) 3 position type requires 2 sets for A side and B side.

Wiring specifications: Negative COM (Option)

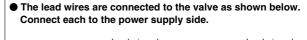

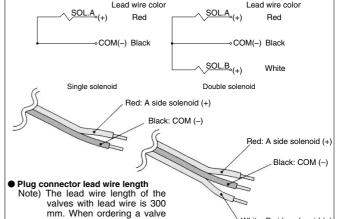

with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm VQ1140-5LO-C6...3 pcs. AXT661-14A-10 ...3 pcs.

White: B side solenoid (+)


Connector Assembly Part No.

Lead wire length	Single/3 position part no.	Double solenoid part no.					
Socket only (3 pcs.)	AXT661-12A						
300 mm	AXT661-14AN	AXT661-13AN					
600 mm	AXT661-14AN-6	AXT661-13AN-6					
1000 mm	AXT661-14AN-10	AXT661-13AN-10					
2000 mm	AXT661-14AN-20	AXT661-13AN-20					
3000 mm	ΔΧΤ661-14ΔN-30	ΔΧΤ661-13ΔN-30					


Note 1) When using the negative common specifications, use valves for negative common.


Note 2) 3 position type requires 2 sets for A side and B side.

How to Order Manifold

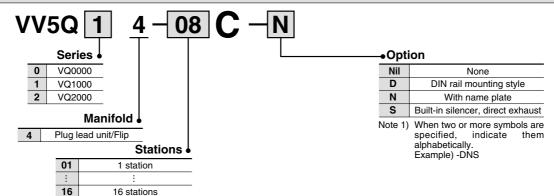

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

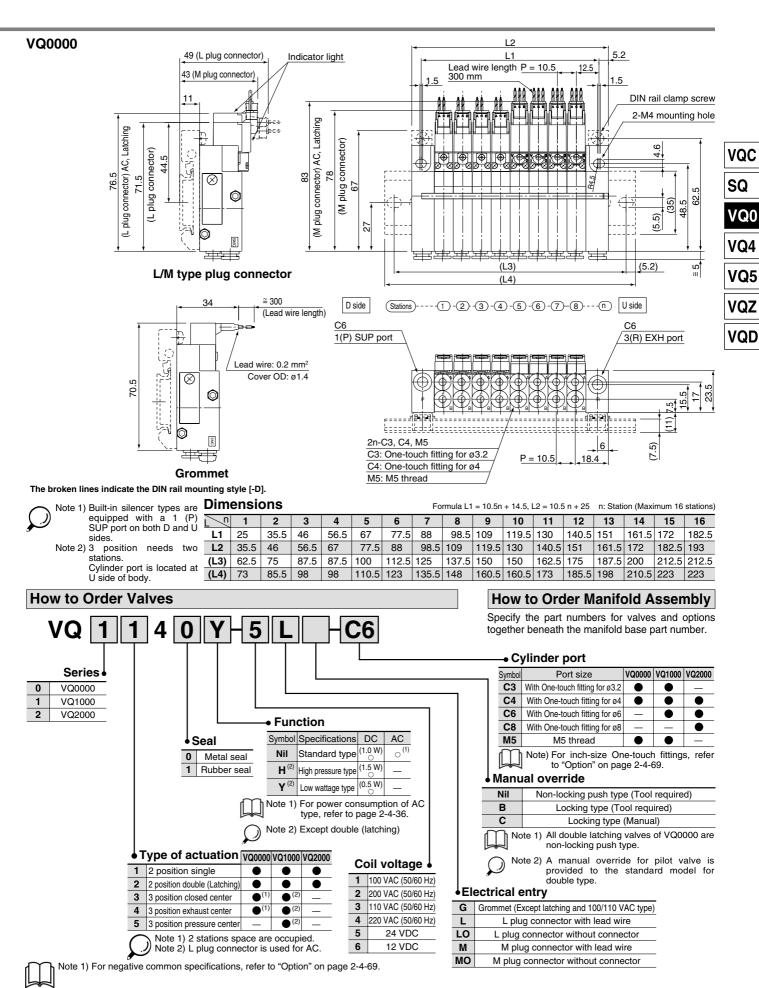

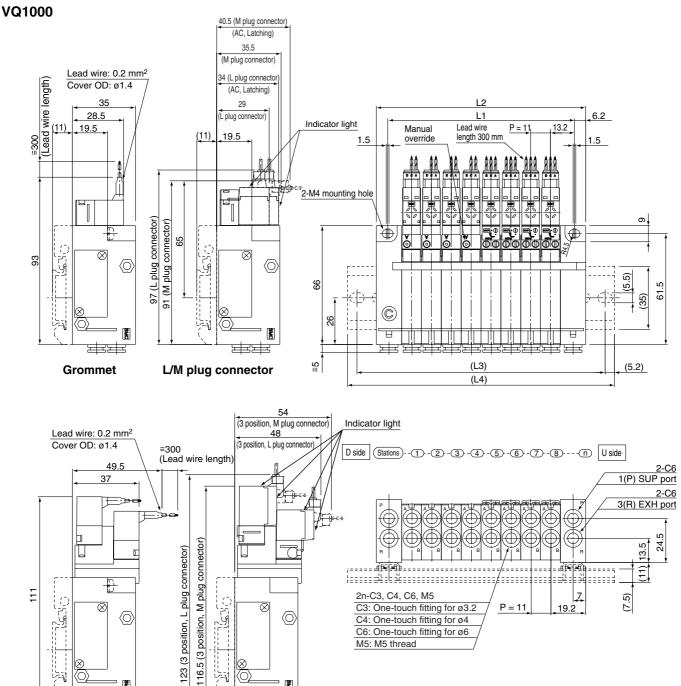

3 position (L/M plug connector) 3 position (Grommet)

 \otimes

8 串串


Dim	ensi	ons		Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Station (Maximum 16 station											tations)	
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
(L3)	62.5	75	87.5	100	112.5	125	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225
(L4)	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5

2n-C3, C4, C6, M5

M5: M5 thread

C3: One-touch fitting for ø3.2

C4: One-touch fitting for ø4 C6: One-touch fitting for ø6 P = 11

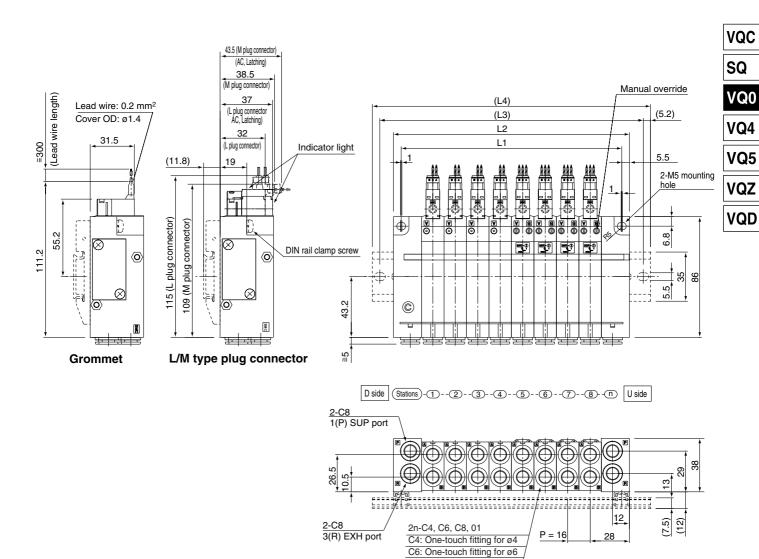


Dimensions Formula L1 = 16n + 29, L2 = 16n + 40								n: Station (Maximum 16 stations)									
L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
- 1	L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
(1	L3)	87.5	100	112.5	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325
(1	L4)	98	110.5	123	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5

C8: One-touch fitting for ø8
01: R 1/8 thread

VQ0000/1000/2000 Kit (Serial transmission unit)

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points

Maximum 8 stations, optional 16 stations possible. (16 stations available as an option. Indicate 9 to 16 stations on the manifold

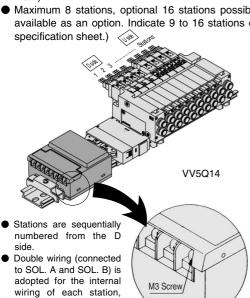

Item	Specifications
External power supply	24 VDC±10%
Current consumption (Internal unit)	SA, SB, SD, SFI, SH: 0.1 A/SC: 0.3 A

Mixed

Manifold Specifications

VV5Q04

•												
	Po	rting sp										
Series	Port		Port size	Applicable stations								
	location	P, R	A, B									
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations								
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations								
VQ2000	Side	C10 C4, C6, C8		Max. 16 stations								

VV5Q14

VV5Q24

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System
Name of terminal block (LED)	ADDRESS NO.	POWER RUN SO RO SRID WITH UT
Name of termir	LED Description TRD Lighting during data reception RUN/ERR Blinking when received data is normal; Lighting when data reception	LED Description POWER Lighting when power is turned ON RUN Lighting when data transmission with the master station is normal RD Lighting during data reception SD Lighting during data transmission ERR. Lighting when reception data error occurs.
Note	T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1 For models of Mitsubishi Electric Corporation EX300-TTA1 For models of OMRON Corporation EX300-TFU1 For models of Fuji Electric Co., Ltd. EX300-T001 For general models *Up to 32 points per unit. No. of output points, 16 points	Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). No. of output points, 16 points. No. of sta. occupied, 2 stations


How to Order Manifold

VV5Q

regardless of valve and option types.

single and double wiring is available as an option. For details, refer to page

2-4-69

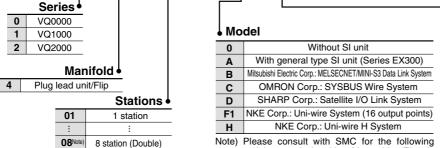

08 S

16 16 stations (Single) As option, the max. number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-69.

serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

* The dust-protected type SI unit is applicable, too. For details, please contact SMC.

Option

D (2)	DIN rail mounting style
K (3)	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS

Note 2) S kits are DIN rail mounting styles, so include suffix -D

Note 3) Specify the wiring specifications in the manifold specification sheet.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

2 3 4 5 6 SI unit output no. (Looked by double solenoid valve) SOL. location ----Double 3 position Single Single Dou \overline{S} 2 5 Stations

<Wiring example 2> Single/Double Mixed Wiring (Option) Mixed wiring is available as an option. Use the manifold specification sheet to specify.

SI un outpu	t no.	0	1	2	3	4		5		6	7
(Looked by do solenoid valve) SOL. location	uble) 	Α	В	Α	В	Α	В	Α	В	Α	В
	SI Unit	4	Double	4	nonne	. i	eligine	3	Single	c cition	o position
	Stations		1	2	2	(3	4	4	Ę	5

The places of asterisk are not used.

How to Order Valves

Type of actuation VQ0000 VQ1000 VQ2000

Note 1) 2 stations space are occupied

Note 2) L plug connector is used for AC.

Series 6 VQ0000

VQ1000 VQ2000

1 2 position single

2 position double (Latching)

3 | 3 position closed center 4 3 position exhaust center

5 3 position pressure center

1

Type SC Type SD OMRON Corporation SYSBUS Wire System **SHARP Corporation** Satellite I/O Link System Name of terminal block (LED) POWER RUN SO RD FRE RUN ¤TRD LED Description LED Description Lights when transmission is normal **POWER** ON when power supply is ON RUN Lights when power is ON and and PLC is in operation mode slave stations are operating normally T/R Blinks during data transmission/reception Lights when slave station switch setting is abnormal, communication is abnormal **ERR** ON when transmission is abnormal **ERROR** PLC stopped and defective slave unit ON for master unit control input · Master station unit: Master station unit: **OMRON PLC** SHARP's PLC SYSMAC C(CV) series New Satellite Series W Types C500-RM201 and C200H-RM201 ZW-31LM * 32 units max., transmission terminal connection New Satellite Series JW (512 points max.) JW-23LM, JW-31LM . No. of output points, 16 points Max. 31 units, I/O slave stations connected (504 points max.) • No. of output points, 16 points

0 | Y | 5 | LO

Seal

(2)

(2)

(1)

0 Metal seal

1 Rubber seal

5

Function

Nil

H

Symbol Specifications DC

Standard type

High pressure type (1.5 W)

Low wattage type (0.5 W)

Note) Except double

(latching).

24 VDC/With light/surge voltage suppressor

a valve.

Note 1) Connector assembly will be

required when the S kits add

For part nos., refer

"Option" on page 2-4-69.

(1.0 W)

Coil voltage



Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

		<u> </u>									
	Symbol	Port size	VQ0000	VQ1000	VQ2000						
	C3	With One-touch fitting for ø3.2	•	•	_						
	C4	With One-touch fitting for ø4	•	•	•						
	C6	With One-touch fitting for ø6	-	•	•						
	C8	With One-touch fitting for ø8	_	_	•						
	M5	M5 thread	•	•	_						
	Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.										
M	Manual override										


Nil	Non-locking push type (Tool required)						
В	Locking type (Tool required)						
С	Locking type (Manual)						
	Note 1) All double latching valves of VQ0000 are non-locking push type. (Refer to page 2-4-66.)						

ル Note 2) A manual override for pilot valve is provided to the standard model for double type.

Electrical entry

LO L plug connector without connector MO M plug connector without connector


Note 1) Plug connector and lead wire layers are attached to the manifold.

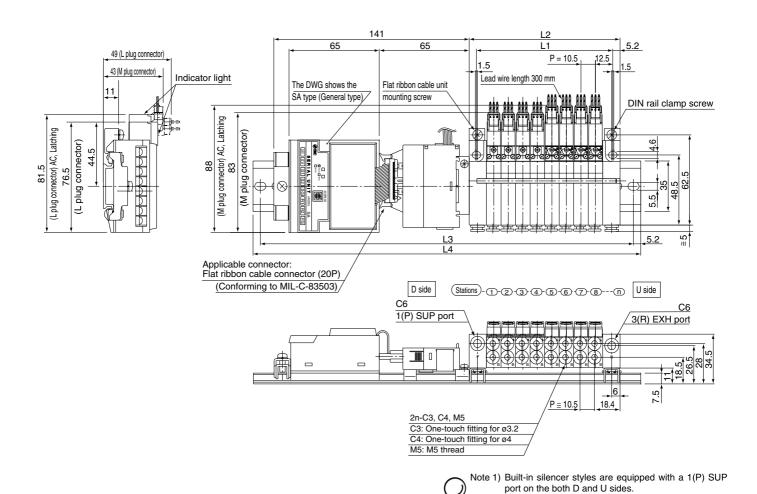


Dimensions Formula L1 = 10.5n + 14.5, L2 = 10.5n + 25 n: Station (Maximum 16 stations) /5 1 2 3 4 5 6 9 10 11 12 13 14 15 16 L1 46 77.5 161.5 172 182.5 25 35.5 56.5 67 88 98.5 109 119.5 130 140.5 151 35.5 46 56.5 67 77.5 88 98.5 109 119.5 130 140.5 151 161.5 172 **L3** 200 212.5 225 275 287.5 300 312.5 312.5 325 337.5 350 362.5 237.5 250 250 262.5 **L4** 210.5 223 235.5 248 260.5 260.5 273 285.5 298 310.5 323 323 335.5 348 360.5 373

Note 2) 3 position needs two stations.

Cylinder port is located U side of body.

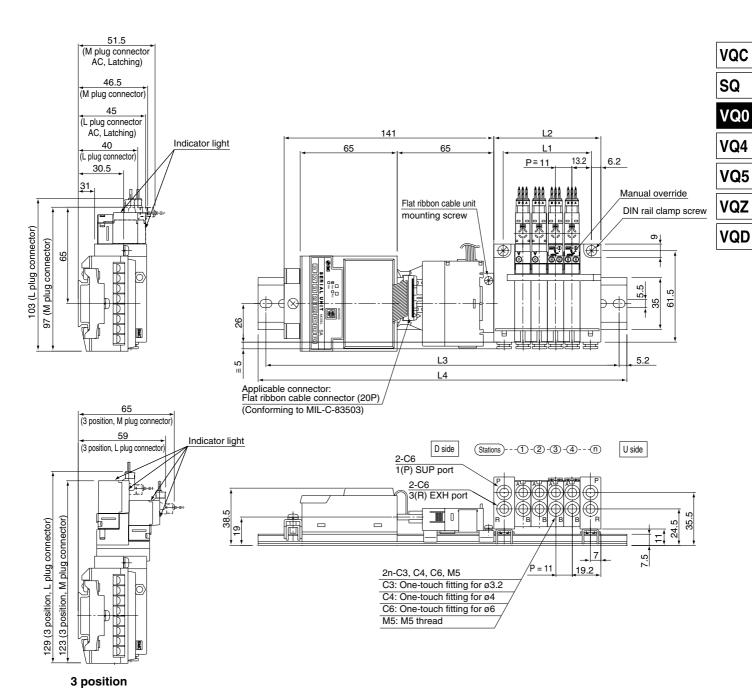

D	Dimensions Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Station (Maximum 16 stations)																
Ĺ	'n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
	L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
_	L3	212.5	212.5	225	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375
	L4	223	223	235.5	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5

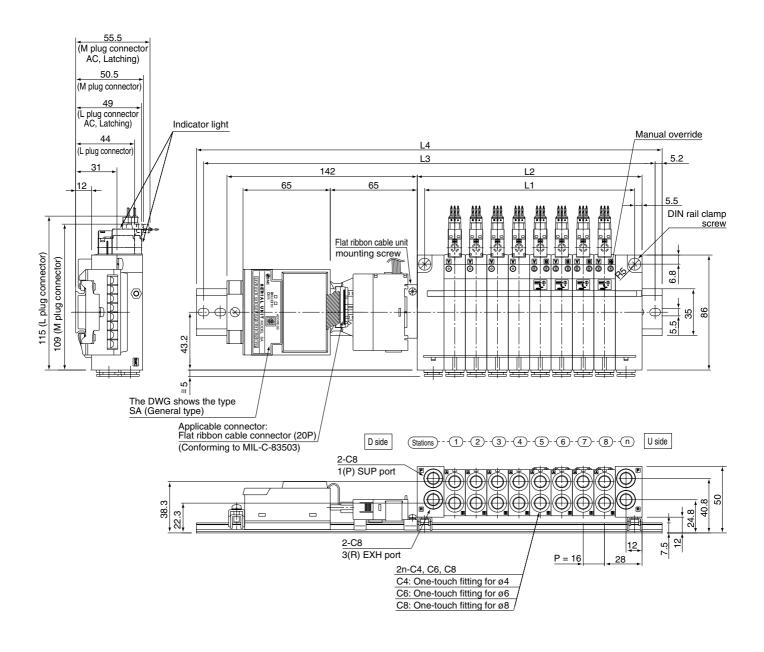


Dim	Dimensions Formula L1 = 16n + 29, L2 = 16n + 40 n: Station (Maximum 16 stations)									stations)						
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	225	237.5	250	275	287.5	300	325	337.5	350	362.5	387.5	400	412.5	437.5	450	462.5
L4	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ0000

Blanking plate assembly VVQ0000-10A-4

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.






Individual SUP spacer VVQ0000-P-4-C4

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

 Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

Shut off label C4 (SUP) port One-touch fitting for ø4 SUP passage blocked

Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.

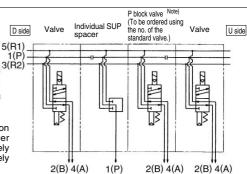

VQ0 VQ4

VQC

SQ

VQ4


VQZ

VQD


Individual EXH spacer VVQ0000-R-4-C4

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

 Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.



Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH spacer, separately order a R block valve.

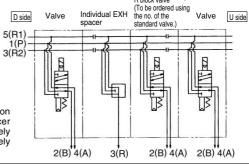

R block valve

Block valve

VQ01 41 - - - - R


For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that U sides of SUP and EXH passages are blocked.

* Specify the number of stations on the manifold specification sheet.


<Shut off label>


When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)


- * When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.
- * Caution on handling P/RP block valve For manifold other than C kit which is silencer built-in, there's no exhaust port on the D side end plate. Install a spacer for individual EXH on the 1st station separately.

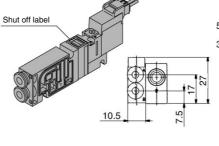





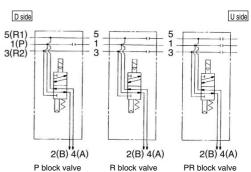




Name plate [-N4] VVQ0000-N4-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.






* When ordering assemblies incorporated with a manifold, suffix -N to the manifold no

Blanking plug KQ2P-23 CA

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.





Dimensions								
Applicable fittings size ød	Model	Α	L	D				
3.2	KQP-23	16	31.5	3.2				
4	KQP-04	16	32	6				
6	KQ2P-06	18	35	8				



Series VQ0000/1000/2000

Manifold Option Parts for VQ0000

DIN rail mounting bracket VVQ0000-57A-4

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate.

(The specification is the same as that for the option

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).


Built-in silencer, Direct exhaust [-S]

This is a type with an exhaust port atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect.

F, P, T and S kits are provided with exhaust on one side

with drainage.




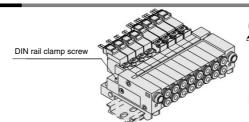



When ordering assemblies incorporated with a manifold, add suffix -D to the manifold no.








U side


When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.



Manifold Option Parts for VQ1000


Blanking plate assembly VVQ1000-10A-4

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc

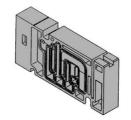

Exhaus


D side




Individual SUP spacer VVQ1000-P-4-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

* Specify the spacer mounting position and SUP blocked block plate mounting position on the manifold specification sheet.

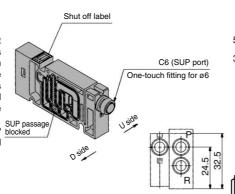

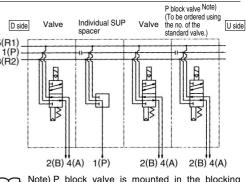

Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.


Individual EXH spacer VVQ1000-R-4-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (Refer to the application example.) EXH pass

- Specify the spacer mounting position and EXH blocked block plate mounting position on the manifold specification sheet.
- When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end

In this case, install a spacer for individual EXH on the 1st station.

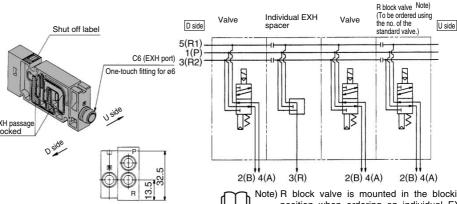

Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH

spacer, separately order an R block valve.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ1000

片 Block valve VQ1240-□-E


For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that D sides of SUPand EXH passages are blocked.

* Specify the number of stations on the manifold specification sheet

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

- *When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.
- *Caution on using R/PR block valve If the electrical entry is selected for an option for builtin silencer when F, P, T, S kit, there will not be the exhaust port on the D side end plate. In this case, mount an individual EXH spacer for the 1st station

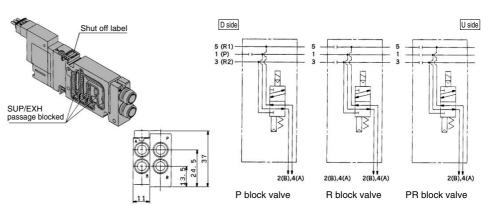

SUP pass

EXH passage blocked

SUP/EXH ge blocke

For SUP passage block VQ1 ½4° -□-□□-P For EXH passage block For SUP/EXH passage block VQ1 ½41°-□-□□-R VQ1 1/2 41 - □ - □ - PR

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Name plate [-N4]

VVQ1000-N4-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that Indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.






When ordering assemblies incorporated with manifold. suffix [-N] to the manifold no.

Blanking plug KQ2P- 04

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.





Dimensions


Applicable fittings size ød	Model	Α	L	D
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8

DIN rail mounting bracket VVQ1000-57A-4

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate. (The specification is the same as that for the option -D.)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

DIN rail clamp screw

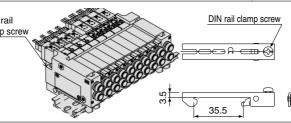




When ordering assemblies incorporated with manifold, add suffix manifold no. -D

Built-in silencer, Direct exhaust [-S]

This is an exhaust port on top of the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. F, P, T and S kits are provided with exhaust on one side.

Note) A large quantity of drainage generated in the airsource results in exhaust of air together with drainage

For maintenance, refer to page 2-4-67.





When ordering assemblies incorporated with manifold, add suffix -S to the manifold no.

Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).





Dimensions

>	Series	Applicable fittings size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
	VQ1000	6	AN103-X233	20	37	11	7	25

Port plug VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no

valve no. Example) **VQ1140-5L-C6-A** L

A port, Plug





Series VQ0000/1000/2000

Manifold Option Parts

Double check block (Separated type): For VQ0000/1000


VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.

The combination with a two position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications


Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	−5 to 50° C
Flow characteristics: C	0.60 dm3/(s.bar)
Max. operating frequency	180 CPM

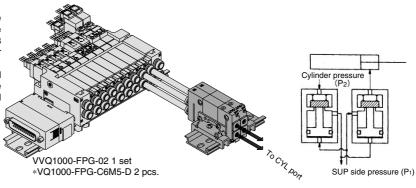




Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

Dimensions

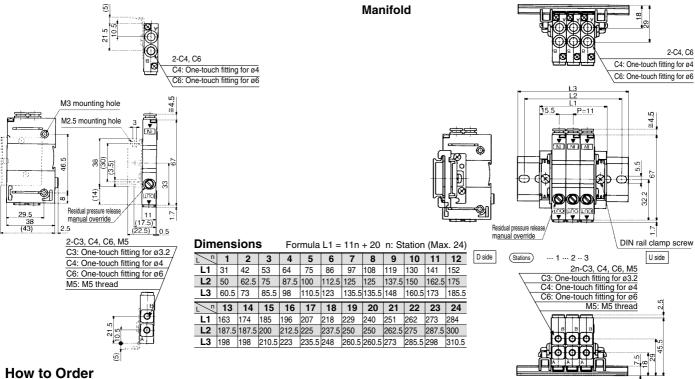

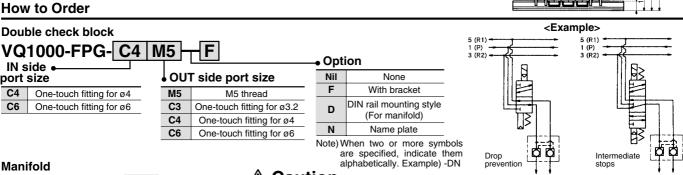

VVQ1000-FPG- 06 **Stations**

> 01 16 16 stations

<Example>

VVQ1000-FPG-06····6 types of manifold *VQ1000-FPG-C4M5-D, 3 sets Double

Double check block *VQ1000-FPG-C6M5-D, 3 sets

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
 Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when
- stopping the cylinder in the middle for a long time.

 Combining double check block with 3 position closed center or pressure center solenoid valve will not
 - M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and
- may not stop intermediately.

 Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.



VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD


Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ2000

Blanking plate assembly VVQ2000-10A-4

It is used when a blanking plate is mounted to amanifold in advance for possible valve mounting, etc

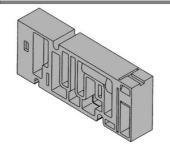

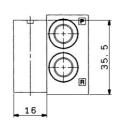


Individual SUP spacer VVQ2000-P-4-C8

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side the valves U side. (Refer to the application example.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

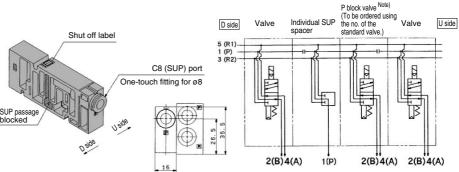


Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.

Individual EXH spacer VVQ2000-R-4-C8

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (1 station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valves U side. (Refer to the application example.)

- * Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet
- * When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end plate. In this case, mount a spacer for individual FXH on the 1st station

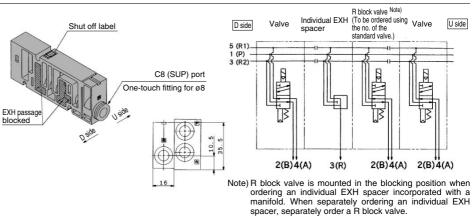

Block valve VQ2 14 1-----

For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that U sides of SUP and EXH passages are blocked.

* Specify the number of stations on the manifold specification sheet.

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached.

(One label for each)


- * When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.
- * Caution on handling P/RP block valve When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end plate. In this case, mount a spacer for individual EXH on the 1st station





SUP passage blocked






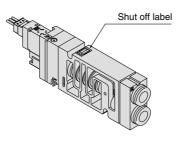



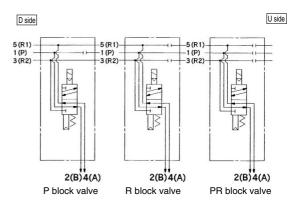

For SUP passage block	VQ2 ½41 -□-□□-P
For EXH passage block	VQ2 ½41 -□-□□-R
For SUP/EXH passage block	VQ2 ½41°-□-□□-PR




Series VQ0000/1000/2000

Manifold Option Parts for VQ2000

Name plate [-N4] VVQ2000-N4-Station (1 to Max. stations)


It is a transparent resin plate for placing a label that Indicates solenoid valve function, etc.

Insert it into the groove on the side of the end plate and bend it as shown in the figure.

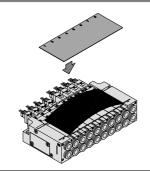



 When ordering assemblies incorporated with a manifold, add suffix N to the manifold no.




Blanking plug

KQ2P-04

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.






Dimensions

Applicable fittings size ød	Model	Α	L	D
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

DIN rail mounting bracket VVQ2000-57A-4

It is used for mounting a manifold on a DIN rail. The DIN rail mounting bracket is fixed to the manifold end plate. (The specification is the same as that for the option -D.)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

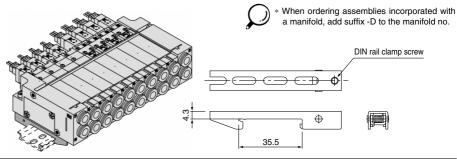

Built-in silencer, Direct exhaust [-S]


This is type with an exhaust port atop the manifold endplate. The built-in silencer exhibits an excellent noise suppression effect.

F, P, T and S kits are provided with exhaust on one side

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage



• For maintenance, refer to page 2-4-67.

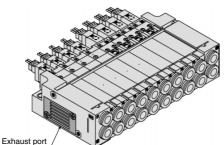





* When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust.



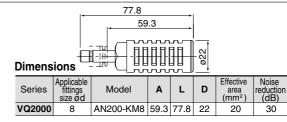


Port plug VVQ1000-58A

The plug is used to block the cylinder port when using 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ2140-5L-C8-A

A port, Plug

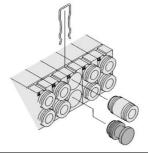



Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option

Double check block (Separated type)

VQ2000-FPG-□□-□

It is used on the outlet side piping.

Combining the double check block with built-in pilot double check valve and a two-position single/double solenoid valve will prevent the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Maximum operating pressure	0.8 MPa
Ambient and fluid temperature	0.15 MPa
Ambient and fluid temp.	–5 to 50° C
Flow characteristics: C	3.0 dm ³ /(s·bar)
Max. operating frequency	180 c.p.m

Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

<Check valve operation principle> Cylinder side SUP side pressure (P1)

VQC

SQ

VQ0


VQ4

VQ5


VQZ

VQD

Dimensions

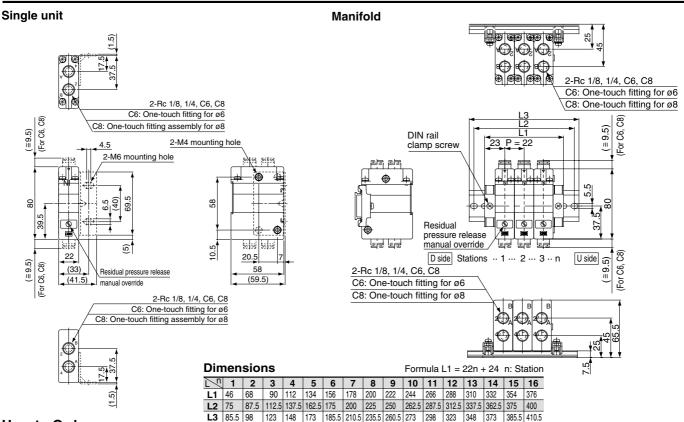

How to Order

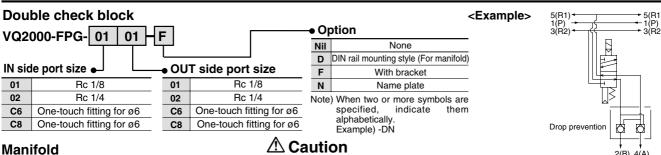

VVQ2000-FPG- 06 Stations 1 station <Ordering Example>

VVQ2000-FPG-06....6 stations manifold

*VQ2000-FPG-C6C6-D: 3 sets } Double check block *VQ2000-FPG-C8C8-D: 3 sets }

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such
 - Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.

Rc 1/8

Rc 1/4

- When screwing the fittings in the double check block, proper tightening torque is as shown below:
- If the exhaust of the double check block is throttled too much, the cylinder may not properly and may not stop intermediately
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.



Connection threads Proper tightening torque (N·m)

7 to 9

12 to 14


♠ Precautions


Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Light/Surge Voltage Suppressor

⚠ Caution

The lighting positions are concentrated on one side for both single solenoid and double (latching) type. In the double (latching) type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

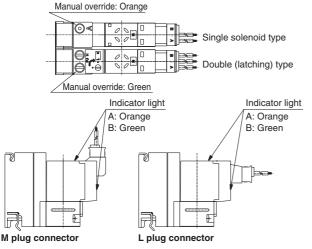

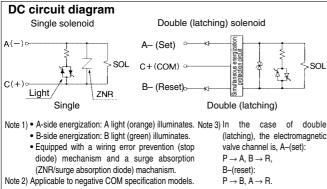

Double (Latching solenoid) Type

⚠ Caution

Different from the conventional double solenoid, the double type uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more).

The usage and function is the same as the double solenoid.

<Special Cautions for Latching Solenoid>

- 1. Select the circuit in which ON and OFF signals are not energized simultaneously.
- 2. 20 ms energization time is necessary for self-holding.
- 3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur. Also, do not use in places where strong magnetic fields are present.
- 4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side, ON position by energizing prior to use.
- 5. After manual operation, the main valve will return to its original position. Manual override on the pilot valve side can retain its switching position after manipulation.
- 6. Please contact SMC for long-term energization applications.
- 7. If the metal seal type goes down below the minimum operating pressure of supply air (0.1 MPa or less), the main valve will get back the home position. (B side ON position) Therefore, in the event of shutting the supply air or applying the air with being A side ON position remained, cylinder may be pulsated. In the event of manipulating the supply air, the valve's switching position has to be set in the home position side (B side ON position side).

How to Mount/Remove Solenoid Valve


$oldsymbol{\Delta}$ Caution

<Procedure>

How to Remove

- 1. Loosen tie-rod bolt B. (Two to four turns) 2. After fully loosening the tie-rod bolt, take
- off bolt A upward as shown above. 3. Slide the valves aside to make a 1 mm clearance between the valve to be taken off and the others. As shown above, remove the whole valve while

holding up the (a) side. (Avoid rough handing of the connector.)



ie-rod bolt A

Mounting

Reverse the sequence of steps above to remount.

Tighten the tie-rod bolts with the tightening torque at the right table while using caution not to tighten the only one side unevenly.

Torque Applied to Tie-rod Bolt VQ0000 0.5 to 0.7 N·m VQ1000 1.0 to 1.4 N·m VQ2000

1.0 to 1.4 N·m


Note) Be careful not to push on the light cover while mounting/removing the valve

Double (Latching solenoid) Type


🕰 Warning

Without an electric signal for the solenoid valve the manual override is used for switching the main valve.


■ Push type (Tool required)



Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.




If the manual override is turned by 180° clockwise and the mark is adjusted to 1, then pushed in the direction of an arrow (\downarrow), it will be locked in the ON state. If the manual override is turned by 180 counterclockwise and ▶ mark is adjusted to 0, locking will be released and the manual override will return.



Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.


■ Locking lever type (Option)



Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it

■ Manual override for double (latching) type

In the case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard. (VQ0000: Pilot valve only). After manual operation, the main valve of the manual on the body side returns to the position before the manual operation, however, the pilot valve manual override maintains the change-over position.



- Manual override body side If the manual override is turned by 180° clockwise and the ▶ mark is adjusted to A, then pushed in the direction of an arrow (♠), it will be back to the reset condition. (passage P → A)

 If the manual override is turned by 180°counterclockwise and the ▶ mark is adjusted to B, then pushed in the direction of an arrow (♠), it will
 - be back to the reset condition. (passage $P \rightarrow B$) (It is in the reset state at the time of shipment.)

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

2-4-66

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. (Except VQ1000)

The fittings are blocked by a clip inserted from the top of the valve. Remove the clip with a screwdriver to remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then re-insert the clip to the specified position.

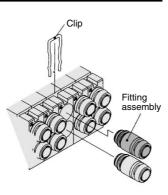

Applicable	Fitting assembly part no.				
tubing O.D	VQ1000	VQ2000			
Applicable tubing ø3.2	VVQ1000-50A-C3				
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4			
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6			
Applicable tubing ø8	_	VVQ1000-51A-C8			

Purchasing order is available in units of 10 pieces.

Caution

- 1. Protect O-rings from scratches and dust to prevent air leakage.
- 2. The tightening torque for inserting fittings to the M5 thread assembly should be 0.8 to 1.4 N·m

Mounting/Removing from the DIN Rail


∕ Caution

<Procedure>

How to Remove

1. Loosen the clamp screw on side (a) of the end plate on both sides.


2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

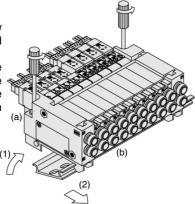

Mounting

- 1. Hook side (b) of the manifold base on the DIN rail.
- 2. Press down side (a) and mount the end plate on (a) the DIN rail. Tighten the clamp screw on side (a) of the end plate.

The proper tightening torque for screws is 0.4 to 0.6 N·m.

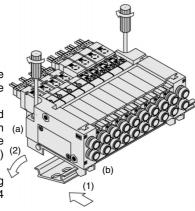

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Built-in Silencer Replacement Element


⚠ Caution

A silencer element is incorporated in the end plate on both sides of the manifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type		Element part no.	
туре	VQ0000	VQ1000	VQ2000
Built-in silencer, direct exhaust (-S)	VVQ0000-82A-4	VVQ1000-82A-4	VVQ2000-82A-4


* The minimum order quantity is 10 pcs.

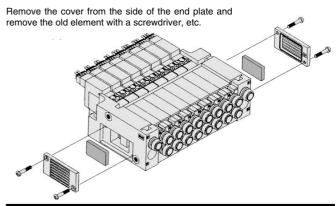

How to Use Plug Connector

⚠ Caution

Attaching and detaching connectors

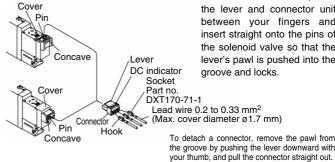


To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.

Lead wire 0.2 to 0.33 mm² (Max. cover diameter ø1.7 mm) To detach a connector, remove the pawl from

Crimping the lead wire and socket

Peel 3.2 to 3.7 mm of the tip of lead wire, enter the core wires and press contact it by a press tool. Be careful so that the cover of lead wire does not enter into the core press contacting part.




Attaching and detaching lead wires with sockets Attaching

Insert a socket in the square hole (Indicated as +, -) of connector, push in the lead wire and lock by hanging the hook of socket to the seat of connector. (Pushing-in can open the hook and lock it automatically.) Then confirm the lock by lightly pulling on the lead wire.

Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1

mm). If the socket will be used again, first spread the hook outward.






Series VQ0000/1000/2000

Option


Different Number of Connector Pins

F and P kits with the following number of pins are available. Besides the standard number (F = 25; P = 26) select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.



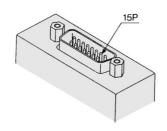

How to order manifold

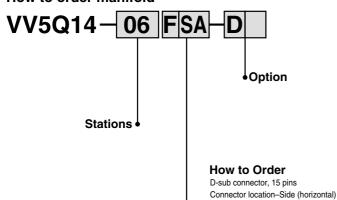


Kit/Electrical entry -

Pins	Top entry		Side entry		
15P (Max. 7 stations)	Kit F	UA	Kit F	SA	

Wiring specifications

* In the same way as the 25-pin models (standard) the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

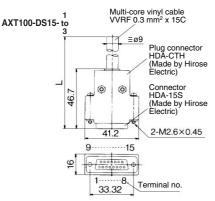

Wire Color by Terminal No. of
D-sub Connector Cable Assemb


Terminal no.	Lead wire color	Dot marking	
1	Black	None	
2	Brown	None	
3	Red	None	
4	Orange	None	
5	Yellow	None	
6	Pink	None	
7	Blue	None	
8	Purple	White	
9	Gray	Black	
10	White	Black	
11	White	Red	
12	Yellow	Red	
13	Orange	Red	
14	Yellow	Black	
15	Pink	Black	

D-sub Connector Cable Assembly


Cable length (L)	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

^{*} For other commercial connectors, use a type conforming to MIL-C-24308.

kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

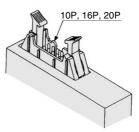

How to order manifold

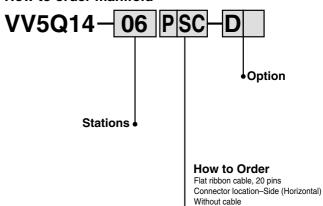


Kit/Electrical entry •

Pins Location	Top entry		Side entry	
10P (Max. 4 stations)	Kit	UA	Kit	SA
16P (Max. 7 stations)	NIL D	UB	P	SB
20P (Max. 8 stations)	Г	UC		SC

Wiring Specifications

*In the same way as the 26-pin models (standard) the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

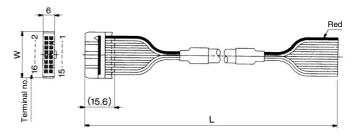

Flat Ribbon Cable Assembly

		- ,	
Cable length (L)	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)	17.2	24.8	30

^{*} For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

Special Wiring Specifications

In the internal wiring of F kit, P kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types.

Mixed single and double wiring is available as an option.

1. How to order valves

Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.


Example)

VV5Q14-09FS0-DKS

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.

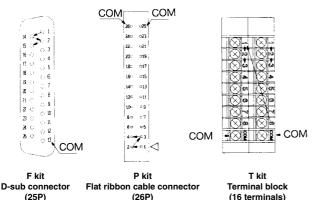

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

kit	F (D-sub co		P kit (Flat ribbon cable connector)			T kit (Terminal block)		S kit (Serial)	
Туре	F ⅓ □ 25P	F&A 15P	P ⅓ □ 26P	P&C 20P	P \ B 16P	P \ A 10P	T1	T2	S□
Max. points	Note) 16	14	Note) 16	Note) 16	14	8	8	16	16

Note) Due to the limitation of internal wiring.

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The standard manifold no. can be used. Please contact SMC for negative COM S kit.

How to order negative COM valves



Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold

VV5Q14-08FSO-DN-00T

P, R port size

VQ0000	ø1/4"
VQ1000	ø1/4"
VQ2000	ø5/16"

How to order valves

VQ1140-5M-

Cylinder port N9 N7 Symbol N1 N3 Applicable tubing ø1/8' ø1/4' ø5/16' O.D. (Inch) VQ0000 A, B **VQ1000** port 0 0 VQ2000 0

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Plug Connector Assembly Model

Connector assembly will be required when the F, P, T, S kits add a valve.

Specify the type of valve and connector assembly.

Connector Assembly Part No.

Specifications	Part no.	
Single	Positive common	AXT661-14A-F
(2-wire)	Negative common	AXT661-14AN-F
Double (latching)	Positive common	AXT661-13A-F
(3-wire)	Negative common	AXT661-13AN-F

Note) Lead wire length: 300 mm

Note) The parts numbers above are applicable to VQ0000/1000 (2 to 16 stations) and VQ2000 (2 to 10 stations). VQ2000 (11 to 16 stations) uses AXT661- ¹³/₁₄ A(N) -F425.

Series VQ0000/1000/2000

Option

DIN Rail Mounting

Each manifold can be mounted on a DIN rail.

Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

When DIN rail is unnecessary (C kit only.)
 (DIN rail mounting brackets only are attached.)
 Indicate the option symbol, -DO, for the manifold no.

Example)

VV5Q14-08C-DOS

Others, option symbols: to be indicated alphabetically.

 When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.

Example)

VV5Q14-08FS1-D09S

Others, option symbols: to be indicated alphabetically.


 When changing the manifold style into a DIN rail mount Order brackets for mounting a DIN rail. (Refer to "Option" on pages 2-4-60, 61 and 64.)

No. VQ0000-57A4 (For VQ0000) VQ1000-57A-4 (For VQ1000) VQ2000-57A-4 (For VQ2000) 2 pcs. per one set

 When ordering DIN rail only DIN rail no.: AXT100-DR-n

L dimension | 398 | 410.5 | 423 | 435.5

* Refer to the DIN rail dimension table for determining the length.



L Dimension $L = 12.5 \times n + 10.5$ No 10 4 6 35.5 48 60.5 73 85.5 98 110.5 123 135.5 23 L dimension 14 16 17 No 11 12 13 15 18 19 20 L dimension 148 160.5 173 185.5 198 210.5 223 235.5 248 260.5 No 21 30 22 23 24 25 26 27 28 L dimension | 273 | 285.5 | 298 310.5 323 335.5 348 360.5 373 385.5 40 No. 31 32 33 34 35 36 37 38 39

448 | 460.5

473 | 485.5

498 510.5

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD

Series VQ1000 Body Ported

Plug Lead Unit: Cassette Type

How to Order Manifold

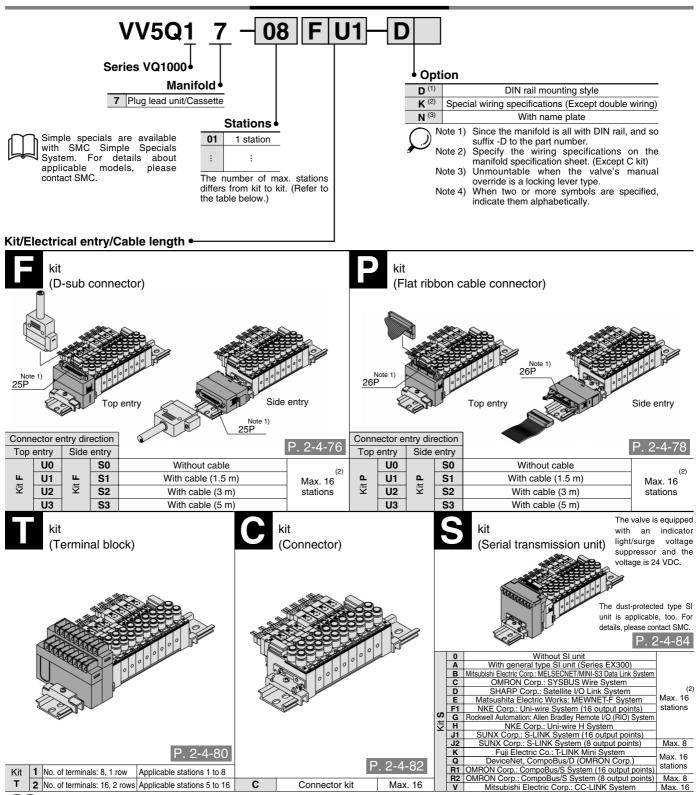

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-92 Note 2) See page 2-4-93 for details.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

How to Order Valves

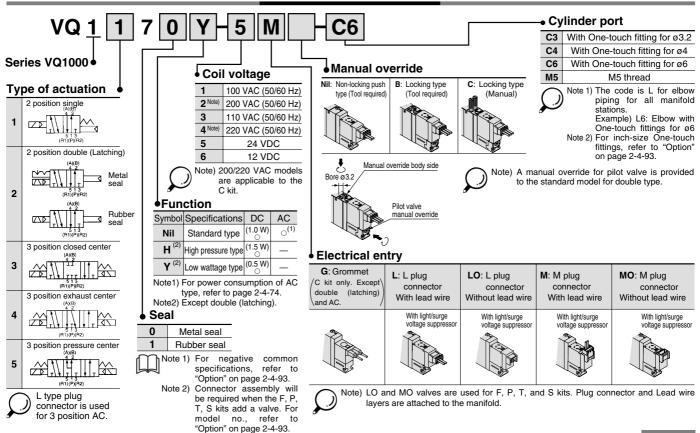


Manifold Option


C6 (SUP) port One-touch fitting for ø6

> Block bushing (2 pcs. attached)


Individual SUP spacer SUP/EXH block bush assembly VVQ1000-P-7-C6 VVQ1000-87A-B-50

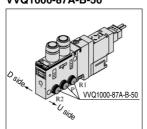


Double Check block VQ1000-FPG-□□

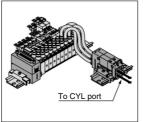


Blanking plug KQ2P-

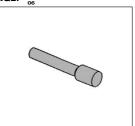


Individual EXH spacer VVQ1000-R-7-C6

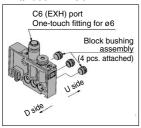


Elbow fitting assembly VVQ1000-F7-L

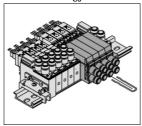


Silencer

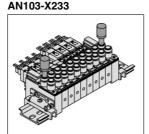


Individual SUP/EXH spacer VVQ1000-PR-7-C6

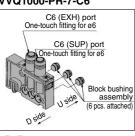


Name plate [-N7] VVQ1000-N7-station (1 to Max. stations)

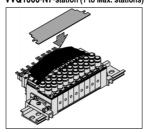

Port plug VVQ0000-58A

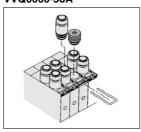

How to Order Manifold Assembly

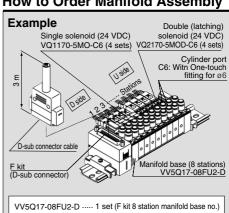

*VQ1170-5MO-C6 4 sets (Single solenoid part no.) *VQ1270-5MOB-C6 ... 4 sets (Double latching solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


Add the valve and option part number under the manifold base part number. In the case of complex arrangement, specify them on the manifold specification sheet.

See page 2-4-91 for cylinder port fittings.

• For replacement parts, refer to page 2-4-111.



Plug Lead Unit: Cassette Type

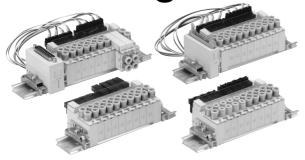


Model

					F	low char	acteristics			Response	e time (ms)	3)		
Series	_	mber of lenoids	Model		1 → 4	/2 (P →	A/B)	4/2 → 5/3 (A/B → R1/R2)			Standard:	Low	AC	Weight (g)
	30	neriolas			C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	H: 1.5 W	wattage: 0.5 W		(9)
	_	0:	Metal seal	VQ1170	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	
	position	Single	Rubber seal	VQ1171	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	67
		Double	Metal seal	VQ1270	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	
	0	(Latching)	Rubber seal	VQ1271	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
VQ1000		Closed	Metal seal	VQ1370	0.53	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	
VQ1000		center	Rubber seal	VQ1371	0.65	0.23	0.16	0.70	0.20	0.17	25 or less	33 or less	47 or less	
	position	Exhaust	Metal seal	VQ1470	0.54	0.16	0.12	0.60	0.12	0.14	20 or less	26 or less	40 or less	82
		center	Rubber seal	VQ1471	0.65	0.23	0.16	0.80	0.16	0.19	25 or less	33 or less	47 or less	
	က	Pressure	Metal seal	VQ1570	0.54	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	
	center	Rubber seal	VQ1571	0.70	0.20	0.17	0.72	0.20	0.17	25 or less	33 or less	47 or less		

Note 1) Cylinder port size C6

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air. Subject to the pressure and air quality.)

JIS Symbol

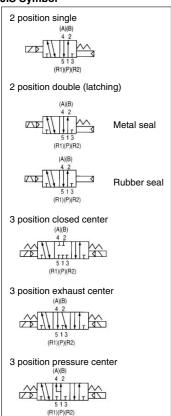

Standard Specifications

	•						
	Valve construction		Metal seal	Rubber seal			
	Fluid		Air/Inert gas	Air/Inert gas			
40	Maximum operatin	g pressure	0.7 MPa (High pressure type: 0.8 MPa) (3)				
ions		Single	0.1 MPa	0.15 MPa			
ficat	Minimum	Double (Latching)	0.1 MPa	0.15 MPa			
)eci	operating pressure	3 position	0.15 MPa	0.2 MPa			
Valve specifications	Ambient and fluid	emperature	10 to 50°C ⁽¹⁾				
Valv	Lubrication		Not re	quired			
	Manual override		Push type/Locking type (Tool required, Manual) Option				
	Impact/Vibration re	esistance (2)	150/30	O m/s ²			
	Enclosure		Dust-pr	otected			
	Coil rated voltage		12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)				
	Allowable voltage	fluctuation	±10% of rated voltage				
	Coil insulation type)	Class B or equivalent				
ë		24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾				
Solenoid		12 VDC	1 W DC (83 mA), 1.5 W DC (1	25 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾			
တိ	Power consumption	100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)				
	(Current)	110 VAC	Start-up 0.55 VA (5 mA),	Holding 0.55 VA (7.5 mA)			
		200 VAC	Inrush 1.0 VA(5 mA), I	Holding 1.0 VA (5 mA)			
		220 VAC	Inrush 1.1 VA (5 mA),	Holding 1.1 VA (5 mA)			

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial

direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz.

Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W).

Note 4) Values in the case of low wattage (0.5 W) specifications.



Plug Lead Unit: Cassette Type Series VQ1000

Manifold Specifications

			Po	rting specificat	ions	(2)		5 station	
Series	Base model	Type of connection	Port location	Port	size ⁽¹⁾	Applicable stations	Applicable solenoid valve	weight	
			Port location	1(P), 3(R)	4(A), 2(B)	Stations	Soleriola valve	(g)	
VQ1000	VV5Q17-□□□-D	■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission unit	Тор	C6 (ø6)	C3 (Ø3.2) C4 (Ø4) C6 (Ø6) M5 (M5 thread)	1 to 16 stations	VQ1□70 VQ1□71	405	

Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-93. Note 2) For details, refer to page 2-4-93.

VQC

SQ


VQ0


VQ4

VQ5

VQZ

VQD

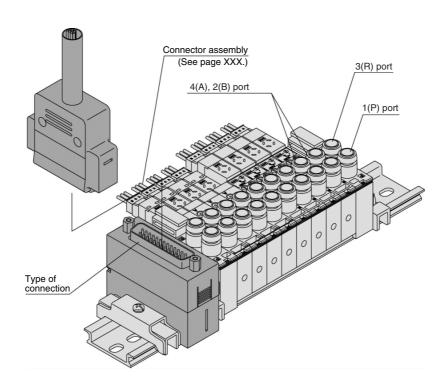



- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications

	Po			
Series	Port	Port	size	Applicable
	location	1(P), 3(R)	4(A), 2(B)	stations
VQ1000	Тор	C6	C3, C4, C6, M5	Max. 16 stations

D-sub Connector (25 pins)

Cable assembly

None

None

None

None

None

White

White

Red


Red

None

White

Wire Color by Terminal No.

of D-sub Connector Cable

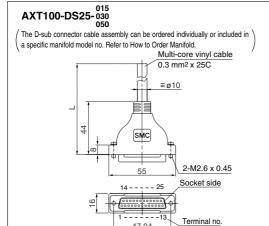

Terminal no. Lead wire color Dot marking Black Brown 3 Red 4 Orange

Assembly

-		
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black

Red

Brown

Pink

Gray

Black

White

D-sub Connector Cable Assembly (Option) Electric Characteristics

Cable length (L)	Assembly part no.	Note
3 m	AXT100-DS25-019	Cable 25 core
5 m	AXT100-DS25-050	X Z4AVVG

* For other commercial connectors, use a 25 pins type with female conforming to MIL-C-24308.

Connector manufacturers' example • Fujitsu Limited • J.S.T. Mfg. Co., Ltd.

- Japan Aviation Electronics Industry, Ltd.
- · Hirose Electric Co., Ltd. Note) Types with 15 pin are also available. Refer to page 2-4-92 for details.

Note) The minimum bending radius of D-sub cable

Item

Conductor

resistance Ω/km, 20°C

Insulation resistance /, 1 min, AC

Insulation

resistance MΩ/km, 20°C

Characteristics

65

or less

5 or less

20

21

22


23

24


25

assembly is 20 mm.

Note) For details, refer to page 2-4-93.

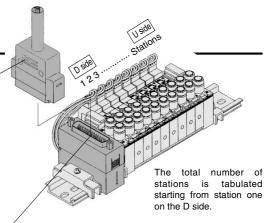

Electrical wiring specifications

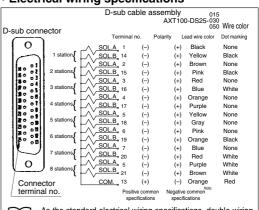





As the standard electrical wiring specifications, double wiring (connected to SOL, A and SOL, B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types


Mixed single and double wiring is available as an option. For details, refer to page 2-4-93.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-93.)

How to Order Manifold

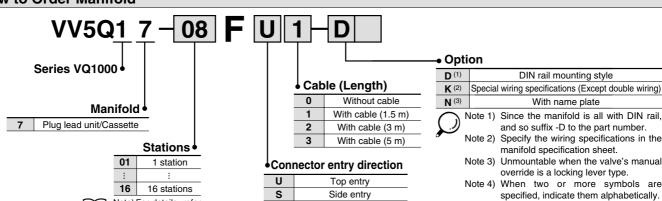

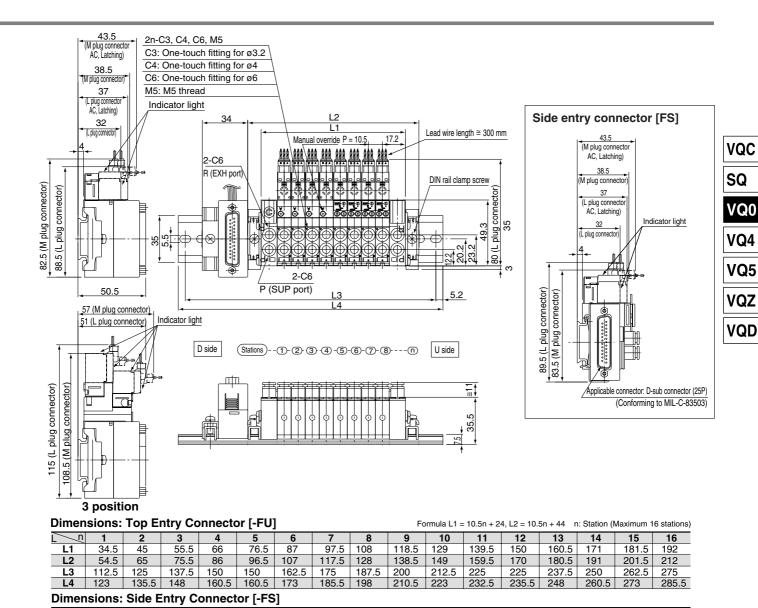

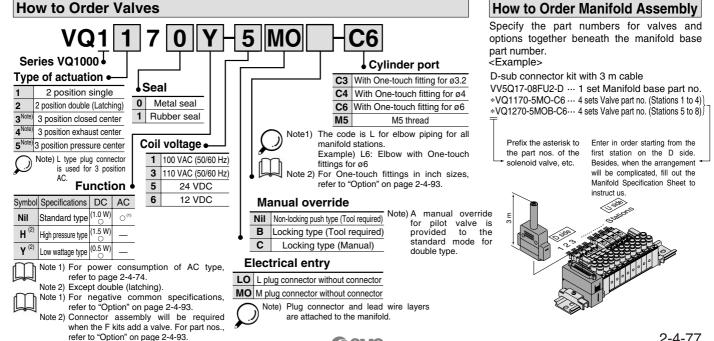

212.5

225

250

237.5

248

262.5

262.5 273

275

287.5

187.5

198

200

210.5

200

210.5

137.5

148

150

160.5 173

162.5

185.5

137.5

148

VQ1000 Kit (Flat ribbon cable connector)

- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Flat Ribbon Cable (26 pins)

Manifold Specifications


		ications			
	Series	Port	Port	Applicable	
		location	1(P), 3(R)	4(A), 2(B)	stations
ĺ	VQ1000	Тор	C6	C3, C4, C6, M5	Max. 16 stations

The total number of stations is tabulated starting from station one on the D side.

Cable assembly €

AXT100-FC26-to

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

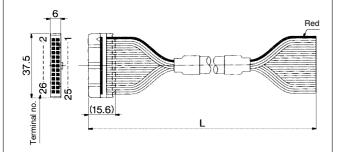

Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	0.11.00
3 m	AXT100-FC26-2	Cable 26 core x 28AWG
5 m	AVT100 ECGE 2	X ZOAVVG


 For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Sumitomo 3M Limited
- Japan Aviation Electronics Industry, Ltd.
- Fujitsu Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Note) Types with 10, 16, or 20 pin are also available. For details, refer to page 2-4-92.


Electrical wiring specifications

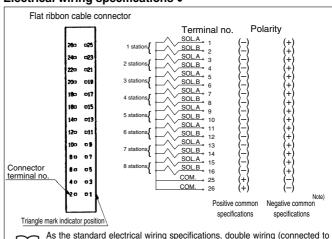


As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-93.


Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-93.)

How to Order Manifold

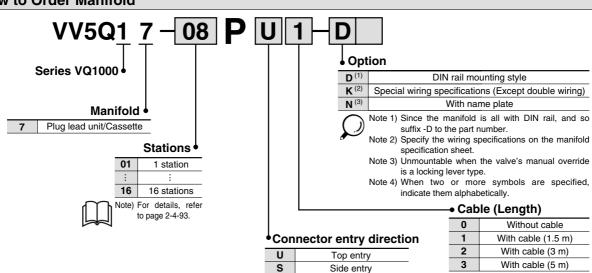

Plug Lead Unit: Cassette Type Series VQ1000

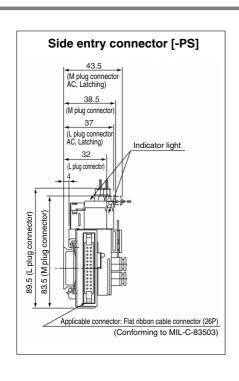

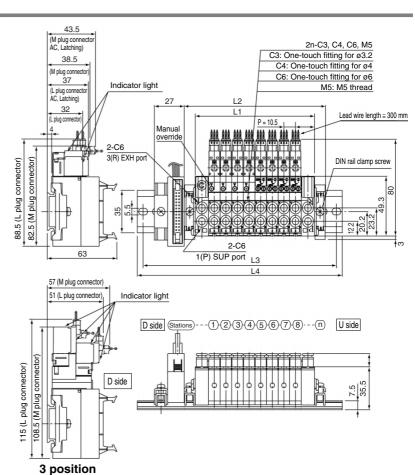

Dimensions: Top Entry Connector [-PU]


L1 = 10.5n + 24, L2 = 10.5n + 44 n: Station (Maximum 16 stations)

		•	•			•				,				`		,
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	112.5	112.5	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5
L4	123	123	135.5	148	60.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273

Dimensions: Side Entry Connector [-PS]

2-4-93.

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5
L4	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298

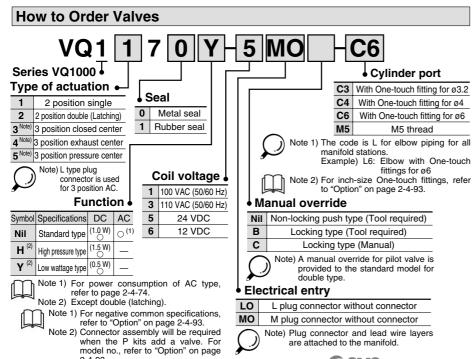

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Connector kit

VV5Q17-08PU2-D ... 1 set -Manifold base part no. *VQ1170-5MO-C6 ... 4 sets -Valve part no. (Stations 1 to 4)] *VQ1270-5MOB-C6... 4 sets -Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill out the Manifold Specification Sheet to instruct us.

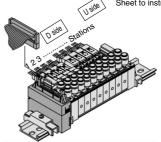

VQ0 VQ4

VQC

SQ

VQ5

VQZ

VQD



- It is a standard terminal block type.
- Two quantities of terminals can be selected in accordance with the number of stations.


(8 terminals/16 terminals)

Maximum stations are 16.



	Р			
Series	Port	Port	Applicable	
	location	1(P), 3(R)	4(A), 2(B)	stations
VQ1000	Тор	C6	C3, C4, C6, M5	Max. 16 stations

Electrical wiring specifications

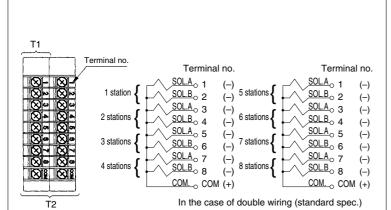


T1 (Terminal block of 1 row): 1 to 4 station
T2 (Terminal block of 2 rows): 5 to 8 stations
T1 and T2 can be optionally chosen by adopting
the combinations of single and double wiring
(optional spec.), etc.


The quantity of terminal blocks used depends on the number of manifold stations.

Manifold	Number of terminals
1 to 4 stations	1 row
5 to 8 stations	2 rows

Wiring other than those above is

For details, refer to page 2-4-93.

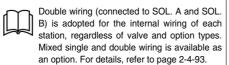


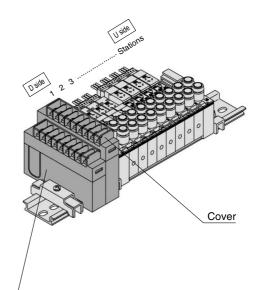

How to connect wires to terminal block

Open the terminal block cover to connect the wires to the terminal block. (With M3 thread)

How to Order Manifold

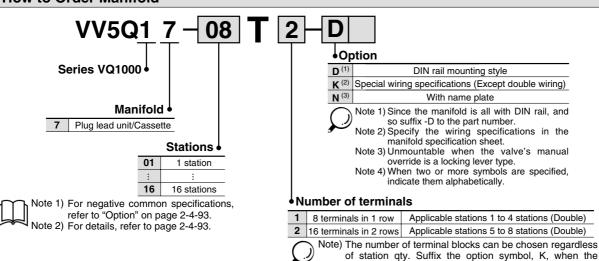

wiring specification is special.

VQC

SQ


VQ0


VQ4

VQ5

VQZ

VQD

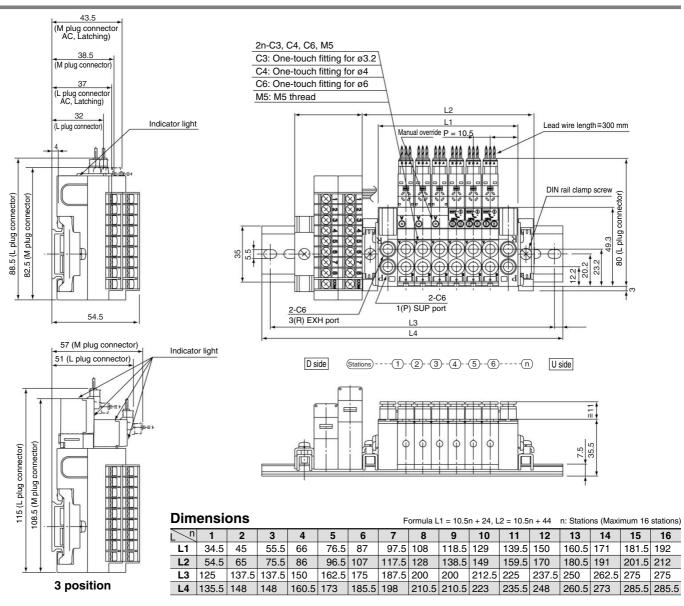

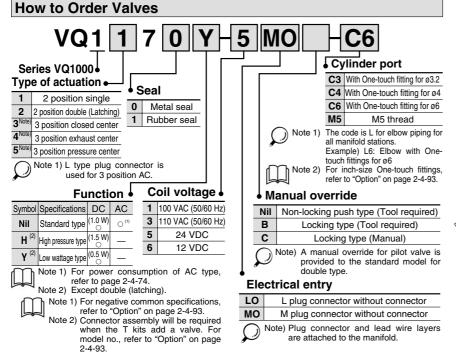

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Connector kit

etc

VV5Q17-08T2-D ·····1 set-Manifold base part no. *VQ1170-5MO-C64 sets-Valve part no. (Stations 1 to 4) <u>★</u>VQ1270-5MOB-C6 …4 sets–Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill out the Manifold Specification Sheet to

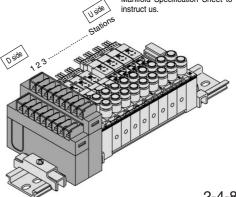

2-4-81




Standard with lead wires connected to each valve individually.

Maximum stations are 16.



	ı	Porting specific	Applicable					
Series	Port	Port						
	location	1(P), 3(R)	4(A), 2(B)	stations				
VQ1000	Top	C6	C3, C4, C6, M5	Max. 16 stations				

Wiring specifications: Positive COM

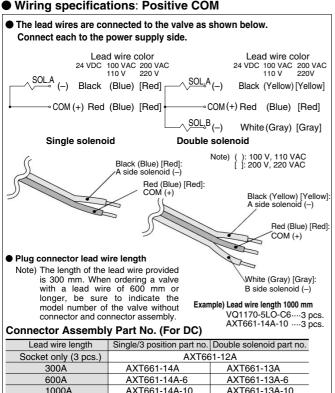


100/110 VAC for single: AXT661-31A-*; for double: AXT661-32A-* 200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-* are in accordance with the above table.

AXT661-14A-20

AXT661-14A-30

Note 2) 3 position type requires 2 sets for A side and B side

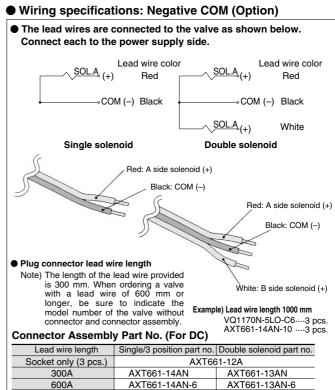

AXT661-14AN-30 Note 1) When using the negative common specifications, use valves for negative common.

Note 2) 3 position type requires 2 sets for A side and B side.

AXT661-14AN-10

AXT661-14AN-20

AXT661-13AN-10

AXT661-13AN-20

AXT661-13AN-30

1000A


2000A

3000A

How to Order Manifold

2000A

3000A

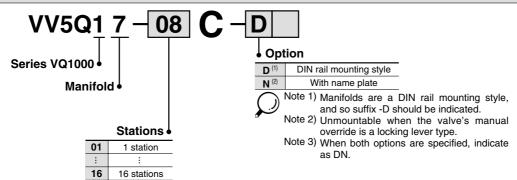

AXT661-13A-20

AXT661-13A-30

VQC

SQ

VQ0


VQ4

VQ5

VQZ


VQD

Plug Lead Unit: Cassette Type Series VQ1000

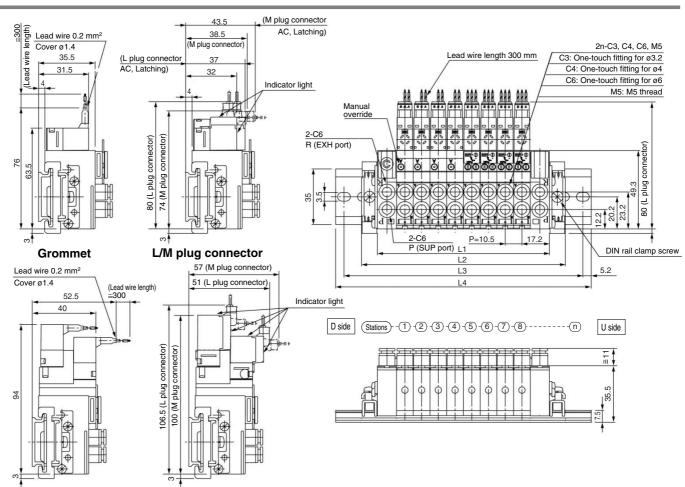


3 position (Grommet) 3 position (L/M plug connector)

Dimensions Formula L1 = 10.5n + 24, L2 = 10.5n + 44 n: Station (Maximum 16)							mum 16	stations)								
Ln	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	75	87.5	100	112.5	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5
L4	85.5	98	110.5	123	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248

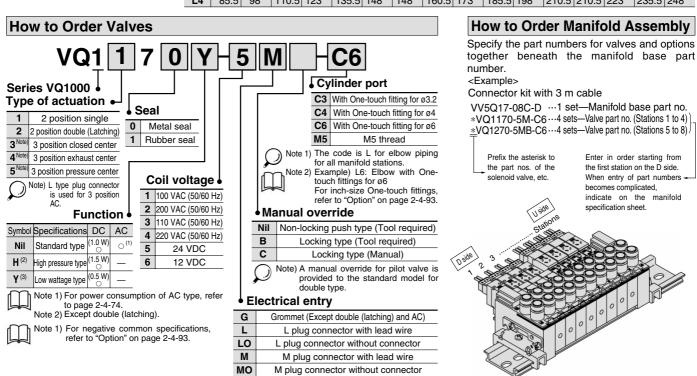


VQ1000 Kit (Serial transmission unit)

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points max.).
- 16 stations max. (Specify a model with more than 8 stations by using a manifold specification sheet.)

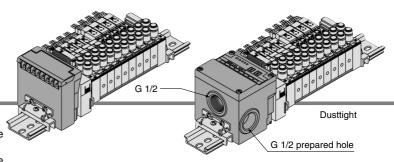


Manifold Specifications

Series	Port	Po	Applicable	
	locaition	1(P), 3(R)	4(A), 2(B)	stations
VQ1000	Тор	C6	C3, C4, C6, M5	Max. 16 stations

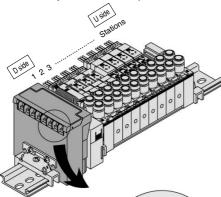

- Stations are counted from station 1 on the D side.
- As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for

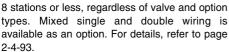


Item	Specifications
External power supply	24 VDC +10%, -5%
Current consumption (Internal unit)	SA, SB, SD, SE, SF, SG, SH, SJ, SK, SQ, SV, SR: 0.1 A, SC: 0.3 A

		Type SA general type SI unit Series EX300)			Type SB bishi Electric Corporation NET/MINI-S3 Data Link System
Name of terminal block (LED)	224V (0V	ME RIAN II THO SS SS SS SS R1 R2 FG		PK (24V)	OV SDA SOB SG RDA ROBB FG
Ē	LED	Description		LED	Description
tē	TRD	Lighting during data reception		POWER	Lighting when power is turned ON
ō	RUN/ERR	Blinking when received data is normal;		RUN	Lighting when data transmission with the master station is normal
ä		Lighting when data reception		RD	Lighting during data reception
Na				SD	Lighting during data transmission
				ERR.	Lighting during data transmission Lighting when reception data error occurs. Light turns off when the error is corrected.
	• T unit		•	Master sta	ation:
		nnected with PLC I/O card for			e by Mitsubishi Electric
	serial trans			Corporation	
	EX300-TM	B1 ···For models of		Series ME	
		Mitsubishi Electric		AJ/1P132	2-S3, AJ71T32-S3
Note	EX300-TT	Corporation A1For models of OMRON	sk		tations, connected to remote
ž		Corporation			ns (Max. 512 points).
	EX300-TF	U1 ···For models of Fuji	•		put points, 16 points. No. of
		Electric Co., Ltd.		sta. occup	pied, 2 stations
	EX300-TO	O1 ···For general models			
		oints per unit.			
	No. of outp	out points, 16 points			

^{*} For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

7 Plug lead unit/Cassette




Stations •

01	1 station			
:	:			
08	8 station (Double)			
16 Note)	16 stations (Single)			

Note) As an option, the maximum number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-93.

Without SI unit With general type SI unit (Series EX300) В Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System OMRON Corp.: SYSBUS Wire System С D SHARP Corp.: Satellite I/O Link System Max. 16 Matsushita Electric Works: MEWNET-F System Ε stations F1 NKE Corp.: Uni-wire System (16 output points) G Rockwell Automation: Allen Bradley Remote I/O (RIO) System н NKE Corp.: Uni-wire H System SUNX Corp.: S-LINK System (16 output points) J1 SUNX Corp.: S-LINK System (8 output points) J2 Max. 8 Fuji Electric Co.: T-LINK Mini System Max. 16 C DeviceNet, CompoBus/D (OMRON Corp.) stations R1 OMRON Corp.: CompoBus/S System (16 output points) R2 OMRON Corp.: CompoBus/S System (8 output points) Max. 8 Mitsubishi Electric Corp.: CC-LINK System

For the general purpose type, a transmission unit is required on the CPU side.



DIN rail, and so suffix -D to the part number. Note 2) Specify the

specifications in the manifold specification sheet.

Note 3) Unmountable when the valve's manual override is a

locking lever type.
Note 4) When two or more symbols

are specified, indicate them alphabetically.

SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

How to Order Valves

0 1 2 3 4 5 6 7 (Looked by double solenoid valve) В А В Α В Α В Α SOL. location Double Single m 3 Stations 2 3 5

The places of asterisk are not used.

<Wiring example 2> Single/Double mixed wiring (Option) Mixed wiring is available as an option. Use the manifold specification sheet to specify.

SI unit output no (Looked by double		0	1	2	3	4	5	6 7
solenoid valve) SOL. location		Α	В	Α	В	АВ	АВ	АВ
	SI unit			oldriod		Single	Single	3 position
	Stations	1		2	2	3	4	5

VQC

SQ


VQ0

VQ4

VQ5

VQZ

VQD

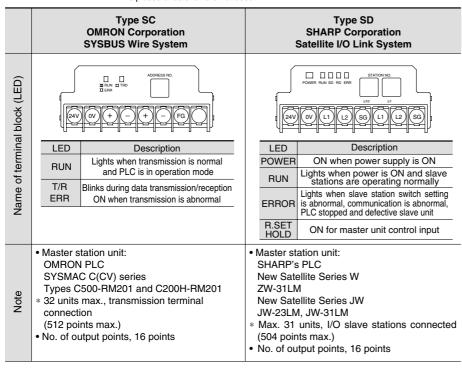

5 **MO** Cylinder ports Series VQ1000 C3 With One-touch fitting for ø3.2 Type of actuation • C4 With One-touch fitting for ø4 1 2 position single C6 With One-touch fitting for ø6 2 position double (Latching) M5 M5 thread 3 position closed center Seal The code is L for elbow piping Note 1) 3 position exhaust center for all manifold stations. 0 Metal seal Example) L6: Elbow with One-touch fittings for ø6 3 position pressure center 1 Rubber seal L type plug connector is used Note) L Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-93. for 3 position AC. Function • Manual override Symbol Specifications Non-locking push type (Tool required) (1.0 W) B No Locking type (Tool required) Standard type С Locking type (Manual) H (1.5 W) High pressure type Note) A manual override for pilot (0.5 W) Low wattage type valve is provided to standard model for double type. Note) Except double (latching). **Electrical entry** Coil voltage L plug connector without connector 24 VDC, With indicator light and 5 M plug connector without connector surge voltage suppressor Connector assembly will be required Note) Plug connector and lead wire when the S kits add a valve. For model no., refer to "Option" on page layers are attached to the

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>


Serial transmission unit kit

VV5Q17-08SA-D ··· 1 set-Manifold base part no. *VQ1170-5MO-C6 ··· 4 sets-Valve part no. (Stations 1 to 4)

*VQ1270-5MOB-C6 ··· 4 sets-Valve part no. (Stations 5 to 8)


Prefix the asterisk to the part nos. of the solenoid valve, etc

Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill Manifold Specification Sheet to

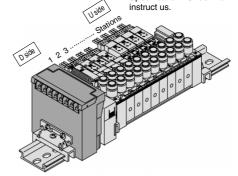

manifold.

VQ1000 Kit (Serial transmission unit)

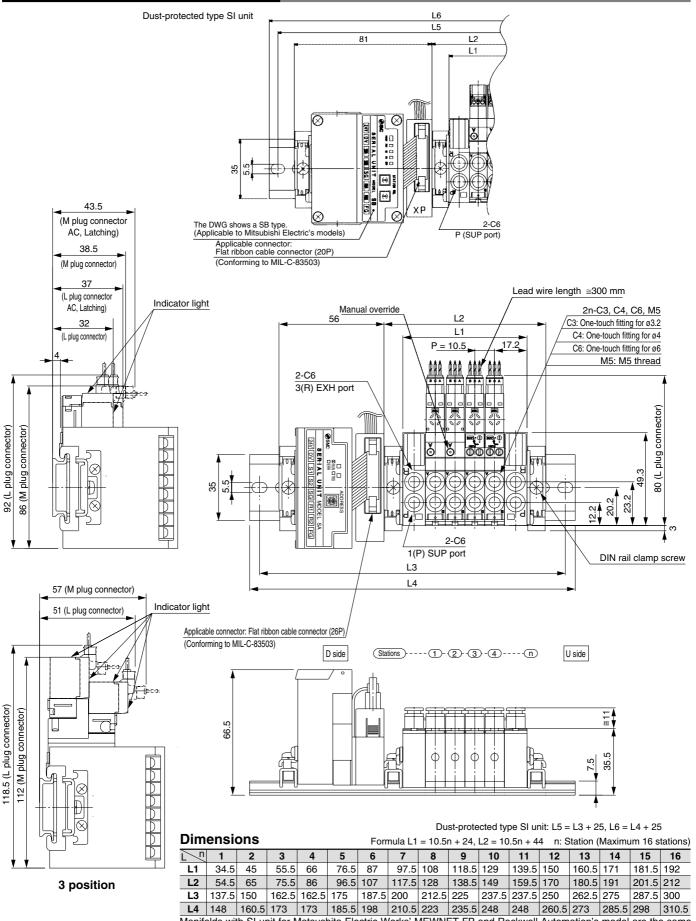


Manifold Option Parts

Individual SUP spacer VVQ1000-P-7-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (See the application ex.)

- Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet. The block plate are used in two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
- * The spacer's specification can be changed (from an individual SUP spacer to an individual EXH spacer) by changing the coupling of the fittings and bushing.

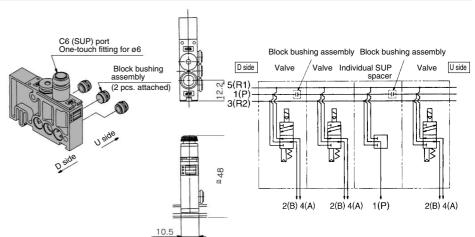

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Individual EXH spacer VVQ1000-R-7-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station.

- Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet. The block plate are used in two places for one set. (Four EXH block plates for blocking EXH station are attached to the individual EXH spacer.)
- The spacer's specification can be changed (from an individual EXH spacer to an individual SUP spacer) by changing the coupling of the fittings and bushing.

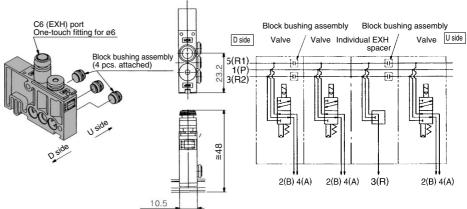


Individual SUP/EXH spacer VVQ1000-PR-7-C6

This spacer has both functions of the above individual SUP and EXH spacers. (Refer to the application example.)

Specify the spacer mounting position and SUP/EXH block plate mounting position on the manifold specification sheet. The blockplates are used in two places for one set.

(A SUP/EXH block plates for blocking SUP/EXH station are attached to the individual SUP/EXH spacer.)

- When using the spacer not for individual SUP/EXH but for improving the ability to supply/exhaust air, it is unnecessary to block the SUP/EXH passage. In this case, place an order via VVQ1000-PRA-7-C6.
- The spacer's specification can be changed by changing the coupling of the fittings and bushing.

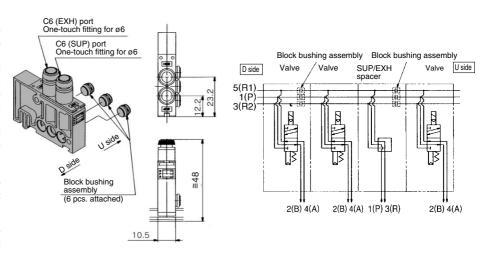

Series VQ1000

Manifold Option Parts

SUP Block bushing assembly VVQ1000-87A-B-50

<For SUP>

When one manifold is to be used for different, high and low pressures, this block bushing assembly is used between the stations under a different pressure. The block assembly is mounted on the U side of the valve's SUP passage.

Specify the number stations on the manifold specification sheet.


<For EXH>


When a valve exhaust affects other stations due to the circuit configuration, this block bushing assembly is used between the stations whose EXH passages are to be separated each other. Since the block bushing assembly is mounted on the U side of the valve's R1 and R2 passages, two assemblies are necessary for one station.


* Specify the number stations on the manifold specification sheet.

<Shut off label>

When using block bushing assembly for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

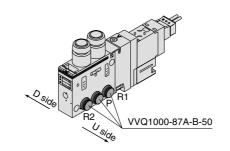

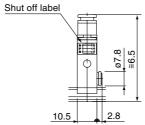



assembly bush assembly 5(R1) 1(P) 3(R2) 2(B) 4(A) 2(B) 4(A) <Example>

Can be included in manifold model no.

SUP Block

U side



D side SUP/EXH

When ordering a block bush incorporated with the manifold, a block indication label is attached to the manifold.









Elbow fitting assembly VVQ1000-F7-L (C3, C4, C6)

It is used in a side-valve-port application.



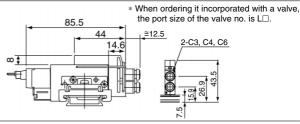


Name plate [-N7] VVQ1000-N7-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.


Open the face plate seating when the manual override is operating.

* It is not applicable to locking manual override.

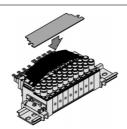



When ordering assemblies incorporated with a manifold, suffix -N to the manifold




Blanking plug

KQ2P-04

Used for unused cylinder port, SUP and EXH port. Purchasing order is available in units of 10 pieces.







Dimensions Applicable fittings Model size ød 3.2 KQ2P-23 16 31.5 5 KQ2P-04 16 32 6

Silencer AN103-X233

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.





6


Dimensions

	Series	Applicable fittings size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
,	VQ1000	6	AN103-X233	20	37	11	7	25

Port plug VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the alve no. Example) **VQ1170-5L-C6-A** — A port, Plug valve no





Plug Lead Unit: Cassette Type Series VQ1000

Double check block (Separated type) VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.

The combination with a two position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	−5 to 50°C
Flow characteristics: C	0.60 dm ³ /(s·bar)
Max. operating frequency	180 CPM

Note) Based on JIS B 8375-1981 (Supply pressure: 0.5

(Check valve operation principle) SUP side pressure (P1) TO CYL PORT VVQ1000-FPG-02 1 set VQ1000-FPG-C6M5-D 2 pcs.

VQC

SQ

VQ0


VQ4


VQ5

VQZ

VQD

Dimensions

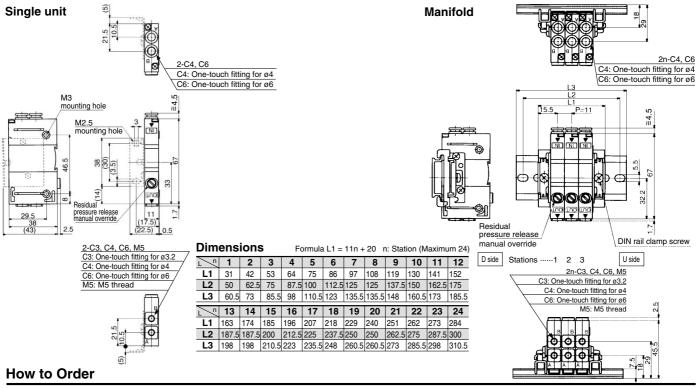

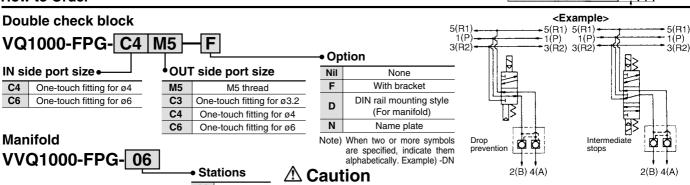

Stations 1 station

<Example>

VVQ1000-FPG-06-6 types of manifold

16

16 stations

*VQ1000-FPG-C4M5-D, 3 sets Double Check block

Bracket Assembly

Part no.	Tightening torque
VQ1000-FPG-FB	0.22 to 0.25 N·m

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish
- Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
 Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not
 work. M5 fitting assembly is attached, not incorporated into the double check block.
- After screwing in the M5 fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2 N·m} If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.




⚠ Precautions


Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Light/Surge Voltage Suppressor

⚠ Caution

The standard model is equipped with an indicator light and surge voltage suppressor. The lighting positions are concentrated on one side for both single solenoid type and double (latching) type. In the double (latching) type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

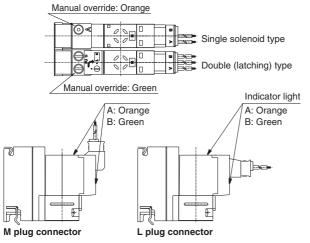

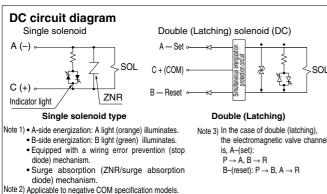

Double (Latching solenoid) Type

⚠ Caution

Different from the conventional double solenoid, the double type uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more). The usage and function is the same as the double solenoid type.

<Special Cautions for Latching Solenoid>

- Select the circuit in which ON and OFF signals are not energized simultaneously.
- 2. 20 ms energization time is necessary for self-holding.
- 3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur.
- Also, do not use in places where strong magnetic fields are present.


 4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side. ON position by operating prior to use
- side, ON position by energizing prior to use. After manual operation, the main valve will return to its original position.
- Manual override on the pilot valve side can retain its switching position after manipulation.
- **6.** Please contact SMC for long-term energization applications.
- 7. In the case of metal seal type, if the supply air goes down below the minimum operating pressure (0.1 MPa or less), the main valve will be back to the home position (B side ON position). Therefore, when the supply air is shut off or applied while leaving A side ON position, cylinder may be pulsated. The valve's switching position when the supply air is operated should be installed on the home position side (B side ON position).

Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

■ Push type (Tool required)

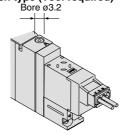


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking slotted type



Push down on the manual override button with a small screwdriver until it stops. While down, turn clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking lever type (Option)




Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

■ Manual override for double (latching) type

In case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard specification.

After manual operation, the main valve of the manual override on the body side returns to the position before the manual operation, however, the pilot valve manual override maintains the change-over position.

Turn before pushing.

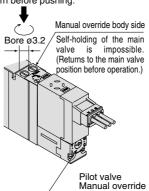

- If the manual override is turned by 180° clockwise and the ► mark is adjusted to A, then pushed in the direction of an arrow (♠), it will be back to the reset condition. (passage P → A)
- If the manual override is turned by 180° counterclockwise and the
 ▶ mark is adjusted to B, then pushed in the direction of an arrow (♠), it will be back to the reset condition. (passage P → B) (It is in the reset state at the time of shipment.)


Self-holding of the main valve possible.

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

How to Mount/Remove Solenoid Valve

<Procedure>

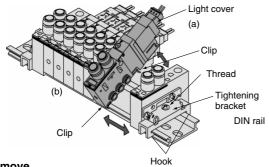

How to Remove

- 1. Loosen the clamp screw on one side.
- 2. Slightly slide a part the valve stations on both sides of the station to be removed.
- 3. Pull up side (a) of the valve station and remove it from the DIN

How to mount

- 1. Take procedures 1 and 2 above to make an open space in the position for mounting a new valve station.
- 2. Diagonally insert the clip on the side (b) of the valve station to the DIN rail.
- 3. Press down on the valve station and insert the clip on the side (a) of the valve station to the DIN rail.
- 4. Slide the valve stations together so that there is no clearance between them. Position the clamp screw and tighten. (Proper tightening torque: 0.7 to 1.0 N·m)

Note) Be careful to keep O-ring or gallery dust free since dirt may cause air leakage.

Be sure both hooks of the bracket are fixed to the DIN rail.

Use caution not to apply force on the light cover when mounting or dismounting the valve.

Replacement of Cylinder Port Fittings

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the side of the valve. Remove the clip with a screwdriver and remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then reinsert the clip to the specified position.

Applicable tubing O.D	Fitting assembly part no.
Applicable tubing ø3.2	VVQ1000-50A-C3
Applicable tubing ø4	VVQ1000-50A-C4
Applicable tubing ø6	VVQ1000-50A-C6

* Purchasing order is available in units of 10 pieces.

- 1. Protect O-rings from scratches and dust to prevent air leakage.
- 2. The tightening torque for inserting fittings to the M5 thread ass'y should be 0.8 to 1.4 N·m.

How to Use Plug Connector

⚠ Caution

For details, refer to page 2-4-67.

How to Calculate the Flow Rate

⚠ Caution

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Fitting assembly

Series VQ1000


Option

Different Number of Connector Pins


F and P kits with the following number of pins are available besides the standard number (F = 25; P = 26). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.



kit (D-sub connector) 15 pins

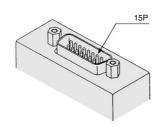

How to order manifold

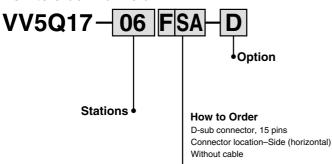


Kit/Electrical entry •

Pins	Top entr	γ	Side entry		
15 pins (Max. 14 stations)	Kit F	UA	Kit F	SA	

Wiring Specifications


Like 25-pin models (standard), terminal no. 1 will be the 1st station SOL.A, and terminal no. 9 for the 1st station SOL.B. Then COM will be the terminal no. 8.

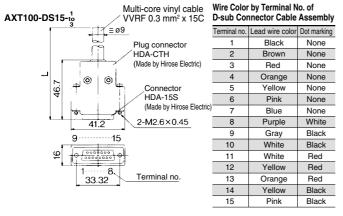


D-sub Connector Cable Assembly


Cable length (L)	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

^{*} For other commercial connectors, use a type conforming to MIL-C-24308.



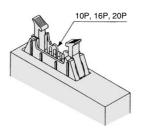

How to order manifold

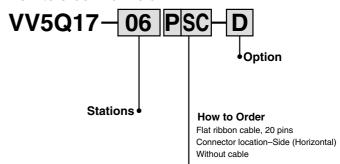


Kit/Electrical entry •

Pins Location	Top entry		Side	entry					
10 pins (Max. 8 stations)	Kit	UA	Kit	SA					
16 pins (Max.14 stations)	D	UB	P	SB					
20 pins (Max.16 stations)	F	UC		SC					

Wiring Specifications

Similarly to 26-pin models (standard), the terminal no. 1 will be allocated to SOL.A of the 1st. station, and terminal no. 2 for SOL.B of the 1st. station. COM occupies 2 pins from the maximum no. of terminal.

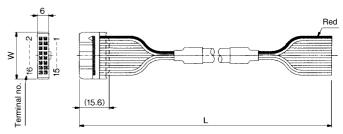

Flat Ribbon Cable Assembly

		•	
Cable length (L)	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)	17.2	24.8	30

For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.



VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Special Wiring Specifications

In the internal wiring of F kit, P kit, J kit, G kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to order valves


Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.



Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without shipping any terminal numbers.

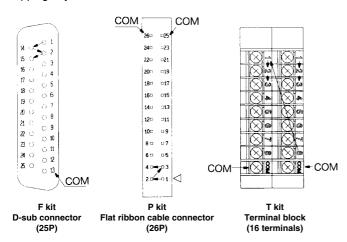

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

kit	F (D-sub co		P kit (Flat ribbon cable connector)				T (Termina	S kit (Serial)	
Туре	Fs⊔ 25P	F s A 15P	Ps⊔ 26P	P s C 20P	P s B 16P	P s A 10P	T1	T2	S□
Max. points	Note) 16	14	Note) 16	Note) 16	14	8	8	16	16

Note) Due to the limitation of internal wiring

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The standard manifold no. can be used. Please contact SMC for negative COM S kit.

How to order negative COM valves



Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold

VV5Q17-08FSO-DN-00T

1(P), 3(R) port size ø1/4"

How to order valves

VQ1170 - 5M

Cylinder port

· o y post								
Symbol	N1	N3	N7					
Applicable tube O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"					

Plug Connector Assembly Model

Connector assembly will be required when the F, P, T, S kits add a valve

Specify the valve and connector assembly.

Connector Assembly Part No.

Specifi	Part no.	
Single	Positive common	AXT661-14A-F
(2-wire)	Negative common	AXT661-14AN-F
Double (latching)	Positive common	AXT661-13A-F
(3-wire)	Negative common	AXT661-13AN-F

Note) Lead wire length: 300 mm

DIN Rail Mounting

Each manifold can be mounted on a DIN rail.

Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.


Example)

VV5Q17-08FU1-D09S

Others, option symbols: to be indicated DIN rail for 9 stations alphabetically.

When ordering DIN rail only DIN rail no.: AXT100-DR-n

* Refer to the DIN rail dimension table for determining the length.



L Dim	_ Dimension									n + 10.5
No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series VQ Single Unit

For individual use of a single valve.




Model

Series Number of solenoids Model				Flow characteristics						Response time (ms) (2)					
						Mode	el	1 → 4	/2 (P →	A/B)	4/2 → 5/3	3 (A/B →	R1/R2)	Standard: 1 W	Low wattage:
		5	Jieriolas			C [dm³/(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	H: 1.5 W	0.5 W	AC .	(g)
		_	Single	Metal seal	VQ1160	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	
		position	Sirigle	Rubber seal	VQ1161	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	50
			Double	Metal seal	VQ1260	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	30
þ	VO1000	2	(Latching)	Rubber seal	VQ1261	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
ported	VQ1000 Cassette		Closed	Metal seal	VQ1360	0.53	0.16	0.12	0.58	0.12	014	20 or less	26 or less	40 or less	
	Diug lood	L	center	Rubber seal	VQ1361	0.65	0.23	0.16	0.70	0.20	0.17	25 or less	33 or less	47 or less	
Body		position	Exhaust	Metal seal	VQ1460	0.54	0.16	0.12	0.60	0.12	014	20 or less	26 or less	40 or less	65
			center	Rubber seal	VQ1461	0.65	0.23	0.16	0.80	0.16	0.19	25 or less	33 or less	47 or less	0.5
		3	Pressure	Metal seal	VQ1560	0.54	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	
			center	Rubber seal	VQ1561	0.70	0.20	0.17	0.72	0.20	0.17	25 or less	33 or less	47 or less	

Note 1) Cylinder port size C6 (VQ1000)

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air. Subject to the pressure and air

JIS Symbol

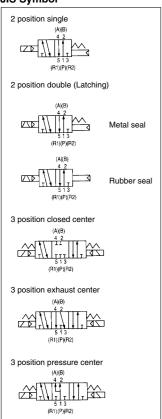

Standard Specifications

	Valve construct	ion	Metal seal	Rubber seal			
ons	Fluid		Air/Inert gas Air/Inert gas				
	Maximum opera	ating pressure	0.7 MPa (High pres	sure type: 0.8 MPa)			
		Single	0.1 MPa	0.15 MPa			
icati	Min. operating pressure	Double (Latching)	0.1 MPa	0.15 MPa			
ecif	p	3 position	0.15 MPa	0.2 MPa			
ds e	Ambient and flu	id temperature	-10 to 5	50°C ⁽¹⁾			
Valve specifications	Lubrication		Not re	quired			
	Manual override	· ⁽²⁾	Push type/Locking type (Tool I	required, Manual type) Option			
	Impact/Vibration	resistance	150/30 m/s ²				
	Enclosure		Dust tight				
	Coil rated voltage		12 , 24 VDC, 100 , 110 , 200, 220 VAC (50/60 Hz)				
	Allowable voltag	ge fluctuation	±10% of rated voltage				
	Coil insulation ty	/pe	Class B or equivalent				
biot		24 VDC	1 W DC (42 mA), 1.5 W DC (63	mA) (3) , 0.5 W DC (21 mA) (4)			
Solenoid		12 VDC	1 W DC (83 mA), 1.5 W DC (12	5 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾			
Ó	Power	100 VAC	Inrush 0.5 VA (5 mA), I	Holding 0.5 VA (5 mA)			
	consumption (Current)	110 VAC	Inrush 0.55 VA (5 mA), I	Holding 0.55 VA (5 mA)			
		200 VAC	Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)				
		220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)				
	a 1) Llea dry air ta prayant condensation when energing at law temperatures						

Note 1) Use dry air to prevent condensation when operating at low temperatures. Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the

axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and

armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W) specifications.

Note 4) Values in the case of low wattage type (0.5 W) specifications.



VQ0


VQ4

VQ5


VQZ

VQD

How to Order Valves

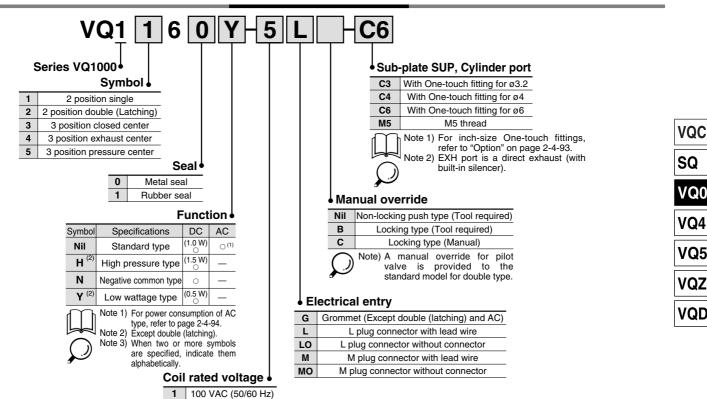

Wiring Specifications: Positive COM

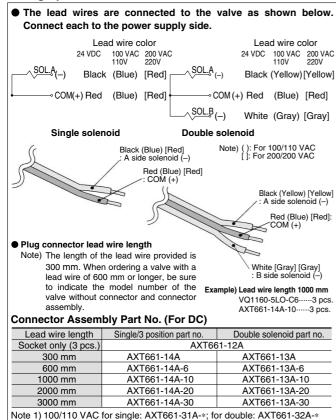

200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-* are in accordance with the above table.

Note 2) 3 position type requires 2 sets for A side and B side.

2

3

4

5


200 VAC (50/60 Hz)

110 VAC (50/60 Hz)

220 VAC (50/60 Hz)

24 VDC **12 VDC**

Wiring Specifications: Negative COM (Option)

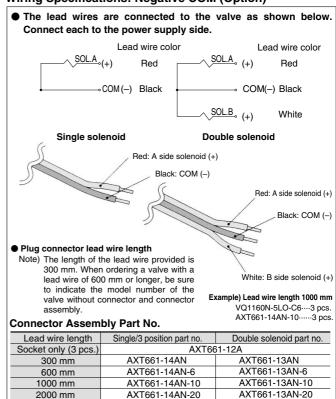

AXT661-14AN-30

Note 2) 3 position type requires 2 sets for A side and B side.

Note 1) When using the negative common specifications, use valves for


3000 mm

negative common


AXT661-13AN-30

Series VQ

Dimensions

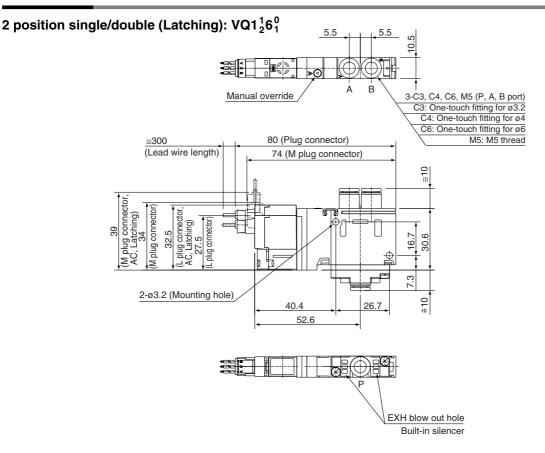

3 position closed center/exhaust center/pressure center: VQ1 $\frac{3}{5}6$ $\frac{0}{1}$

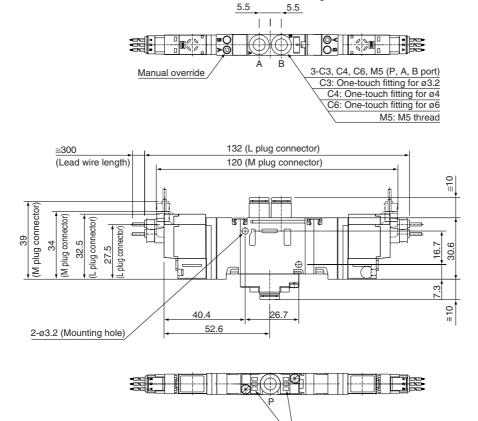


EXH blow out hole Built-in silencer



Series VQ Construction Main Parts, Replacement Parts

Construction: VQ1000/Plug-in Unit, Flip Type

3 position

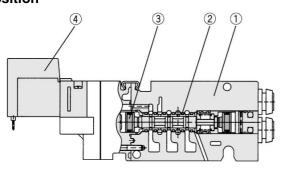


VQ1330	VQ1430	VQ1530
A 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)

Component Parts


No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

4 Pilot valve assembly

Single/3 position	VQ111(H) - □ F Voltage 1 to 6	
Double (Latching)	VQ110L-□F Voltage 1 to 6	




Rubber seal Single/Double (Latching)

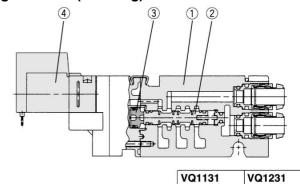

VQ1131	VQ1231
(A)(B)	(A)(B)
4 2	4 2
∞ €∭, ∰	
5 1 3	5 1 3
(R1)(P)(R2)	(R1)(P)(R2)

3 position

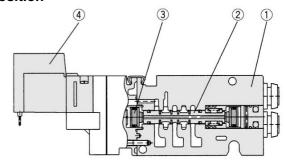


VQ1331	VQ1431	VQ1531
AN 12 11 AS		
5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)

Component Parts


No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool valve	Aluminum/HNBR	
3	Piston	Resin	

4 Pilot valve assembly

Single/3 position	VQ111(H) -□F Voltage 1 to 6	
Double (Latching)	VQ110L-□F Voltage 1 to 6	



Construction: VQ0000, 1000, 2000/Plug Lead Unit, Flip Type

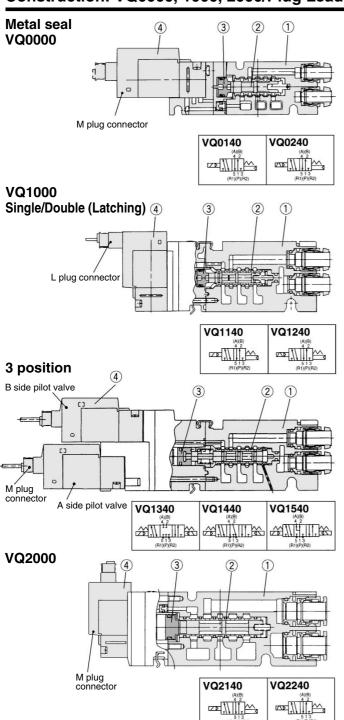


Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

4 Pilot valve assembly

	• •	
Single 3 position (VQ1000)	VQ111 (H) -	
Double (Latching)	VQ110L - M -2 (VQ1000) Voltage 1 to 6	
3 position (VQ1000)	VQ111 (H) Note) L (Y) — MA X18 (A side (Bottom side)) (Y) Voltage G Nil (B side (Top side)) 1 to 6	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.
	00 0 = 144 0 + 00 +	

Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

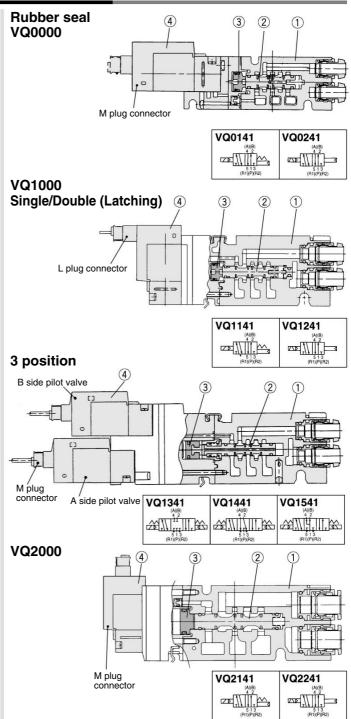

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool valve	Aluminum/HNBR	
3	Piston	Resin	

4 Pilot valve assembly

Single 3 position (VQ1000)	VQ111 (H) -	
Double (Latching)	VQ110L - M -2 (VQ1000) Voltage 1 to 6	
3 position (VQ1000)	VQ111 (H) Note) L (Y) — MA X18 (A side (Bottom side)) (Y) Voltage G Nil (B side (Top side)) 1 to 6	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.

Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only



VQC

SQ

VQ0

VQ4


VQ5


VQZ

VQD


Construction: VQ1000/Plug Lead Unit, Cassette Type

Metal seal Single/Double (Latching)

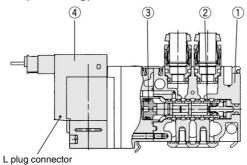



3 position

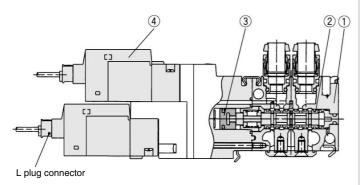


VQ1370	VQ1470	VQ1570
4, 2		
5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)

Component Parts


No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

4 Pilot valve assembly

Single	VQ111(H)-□ M -2 Voltage	
Double (Latching)	VQ110L -□M-2 Voltage 1 to 6	
3 position	VQ111(H)- L (Y) - M - X18 {A side (Bottom side)} Voltage	The direction of the L and Mconnectors of a pilot valve is opposite to that of the single and double type.




Rubber seal Single/Double (Latching)

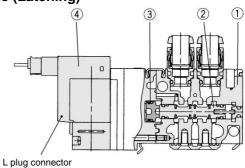

VQ1171	VQ1271
(A)(B) 4 2	(A)(B) 4 2
	<u>₩</u>
5 1 3 (R1)(P)(R2)	(R1)(P)(R2)

3 position

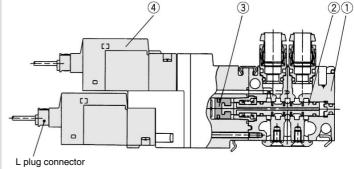


VQ1371	VQ1471	VQ1571
5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum/HNBR	
3	Piston	Resin	

4 Pilot valve assembly


Single	VQ111(H)-□M-2 Voltage → G 1 to 6	
Double (Latching)	VQ110L - □ M - 2 Voltage 1 to 6	
3 position	VQ111(H) L A Side (Bottom side)} Voltage G Nil {B side (Top side)} 1 to 6	The direction of the L and Mconnectors of a pilot valve is opposite to that of the single and double type.




Construction Main Parts, Replacement Parts Series VQ

Construction: VQ1000/Single Unit

Metal seal Single/Double (Latching)

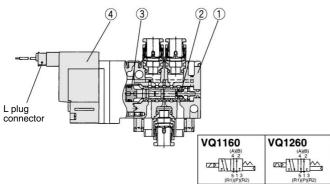

3 position

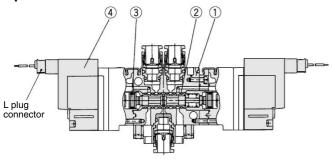


VQ1360	VQ1460	VQ1560
(A)(B)	(A)(B)	(A)(B)
4 2	4 2	4 2
₩	2 <u> </u>	
5 1 3	5 1 3	5 1 3
(R1)(P)(R2)	(R1)(P)(R2)	(R1)(P)(R2)

Component Parts


No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

4 Pilot valve assembly


Single/3 position	Note) VQ111(H)-□M-2 Voltage 1 to 6	
Double (Latching)	VQ110L-□ L Woltage 4 1 to 6	



Rubber seal Single/Double (Latching)

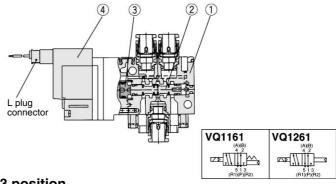

3 position

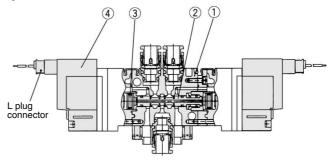

VQ1361	VQ1461	VQ1561
5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)	5 1 3 (R1)(P)(R2)

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD

Component Parts


	No.	Description	Material	Note		
	1	Body	Zinc die-casted			
	2	Spool valve	Aluminum/HNBR			
3 Piston		Piston	Resin			
Dilot valve assembly						

Single/3 position	VQ111(H)-□M-2 V0ltage G 1 to 6	
Double (Latching)	VQ110L-□ ^L _M -2 Voltage 4 1 to 6	



Exploded View of Manifold

VQ1000 (VV5Q13)/Plug-in Unit, Flip Type

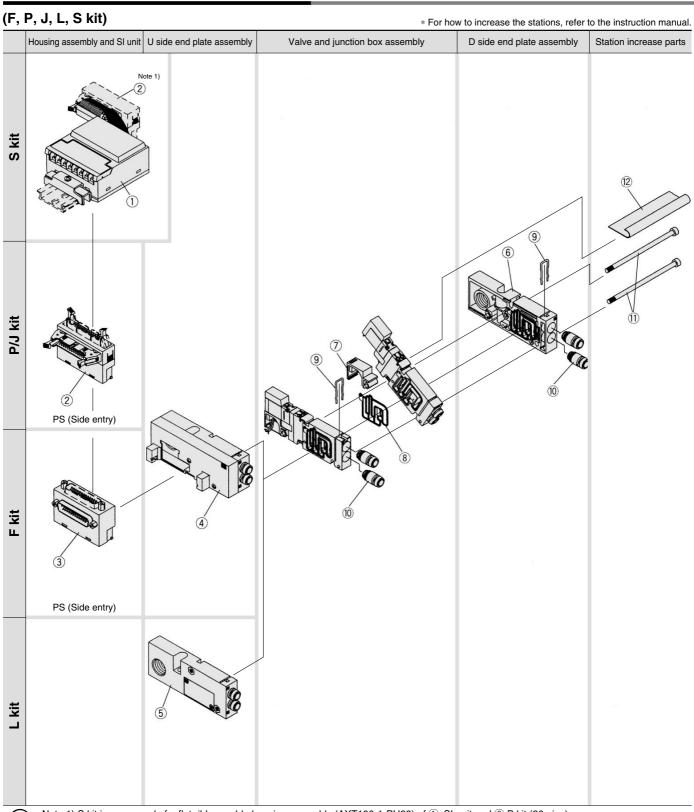



<Housing Assembly and SI Unit> Housing assembly and SI unit no.


No.	Manifold	Part no.	Description
	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
(1)	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
1	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SF1 kit)	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SH kit)	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
<u> </u>	P _S ^U kit	AXT100-1-P _S ^U □ (2)	Flat cable housing assembly □ = Number of pins: 26, 20, 16, 10
2	J [∪] _S kit	AXT100-1-J _S ^U 20 ⁽²⁾	Flat cable housing assembly
3	F _S kit	AXT100-1-F _S ^U □ (2)	D-sub connector housing assembly □ = Number of pins: 25, 15

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-1-PU20) of ① SI unit and ② P kit (20 pins). Place an order for AXT-100-1-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

<D Side End Plate Assembly>

45 D side end plate assembly no.




Note 1) Applicable for L kit only

Note 2) The housing assembly and SI unit of F/P/J/S kit are not included. Separately place an order for ①, ②, and ③.

Note 3) The 10's fitting assembly is included.

<U Side End Plate Assembly No.>

6 U side end plate assembly no.



Nil: Common exhaust

L: For L kit S: For S kit

S: Built-in silencer, direct exhaust

Note) The 10's fitting assembly is included.

<Junction Box Assembly>

Junction box assembly no.

VVQ1000-1A-3-□

 Electrical entry F1: For F kit

P1: P, G, T, S kit for 1 to 12 stations/Double wiring P2: G, S kit for 13 to 16 stations/Double wiring

P3: G, S kit for 1 to 16 stations/Single wiring L0□: L0 kit Note) L1□: L1 kit Note) □: Stations (1 to 16)

□: Stations (1 to 16)

L2□: L2 kit Note)

Note) Lead wire assembly for extensions is attached.

<Replacement Parts>

No.	Part no.	Description	Material	Number
8	VVQ1000-80A-3-2	Seal	HNBR	12
9	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

10 Fittings assembly part no.

VVQ1000-50A-

Port size

C3: Applicable tubing ø3.2

C4: Applicable tubing ø4

C6: Applicable tubing ø6 (1)

Note 1) Standard SUP/EXH port is C6.

Note 2) Purchasing order is available in units of 10 pieces.

<Station Increase Parts>

* The station can be increased up to 2 stations

_	Station increase rarts/		* The station	can be increased up t	o z stations.
Ī	No. ⁽³⁾ Part no.		Description	Material	Number ⁽¹⁾
	11)	VVQ1000-105A-3-□ (2)	Tie-rod bolt	Carbon steel	2
	12		Junction cover	Stainless steel	1



Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) 11 and 12 are in one set.

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Series VQ

VQ0000 (VV5Q04)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

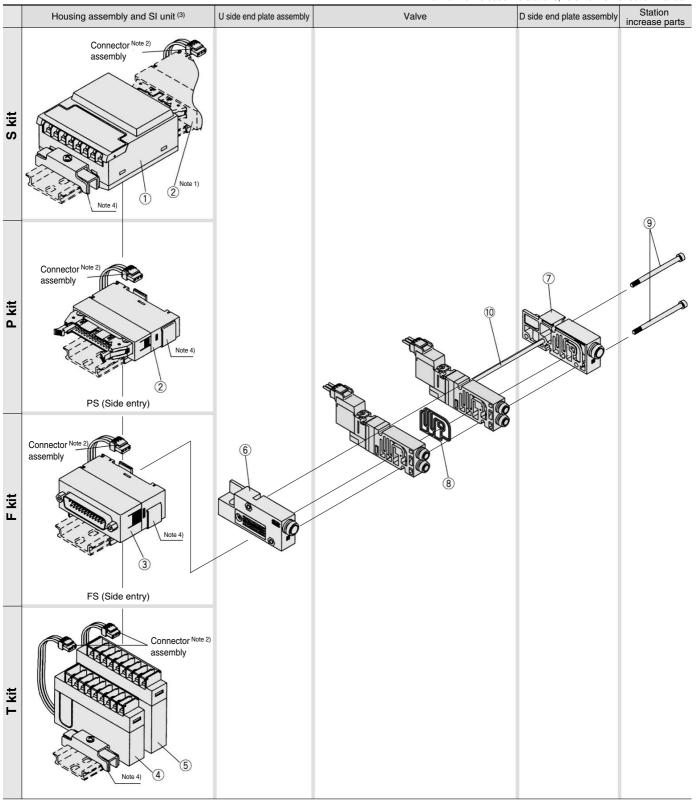



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
①(1)	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
U	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	SF1 kit	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	SH kit	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
2	P _S kit	AXT100-2-P _S ^U □ (2)	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
3	F _S kit	AXT100-2-F ^U _S □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
4 ⁽³⁾	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) In the case of standard specifications and double wiring, 4 is for 1 to 4 stations and 5 is for 5 to 8 stations.

Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

<D Side End Plate Assembly>

6 D side end plate assembly no. VVQ0000-3A-4-□

S: Built-in silencer, direct exhaust

P: Exclusively for SUP

The end plate style is subject to the kit. The combination as standard is as follows.

Kit	Part no.	U side end plate assembly	D side end plateassembly
F, P, S kit	Common exhaust type	VVQ0000-3A-4-P	VVQ0000-2A-4-R
	Built-in silencer, direct exhaust	VVQ0000-3A-4-P	VVQ0000-2A-4-S
C kit	Common exhaust type	VVQ0000-3A-4-P	VVQ0000-2A-4-R
	Built-in silencer, direct exhaust	VVQ0000-3A-4-S	VVQ0000-2A-4-S

<U Side End Plate Assembly No.>

① U side end plate assembly no.

VVQ0000-2A-4-□

Option

S: Built-in silencer, direct exhaust

R: Exclusively for EXH (Common exhaust type)

<Replacement Parts>

No.	Part no.	Description	Material	Number
8	VVQ0000-80A-4-2	Seal	HNBR	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Station Increase Parts>

10.00.					
No. (3)	Part no.	Description	Material	Number (1)	
9	VVQ0000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2	
10		Guide rod	Stainless steel	1	

Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) 9 and 10 are in one set.



VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD


Series VQ

VQ1000 (VV5Q14)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

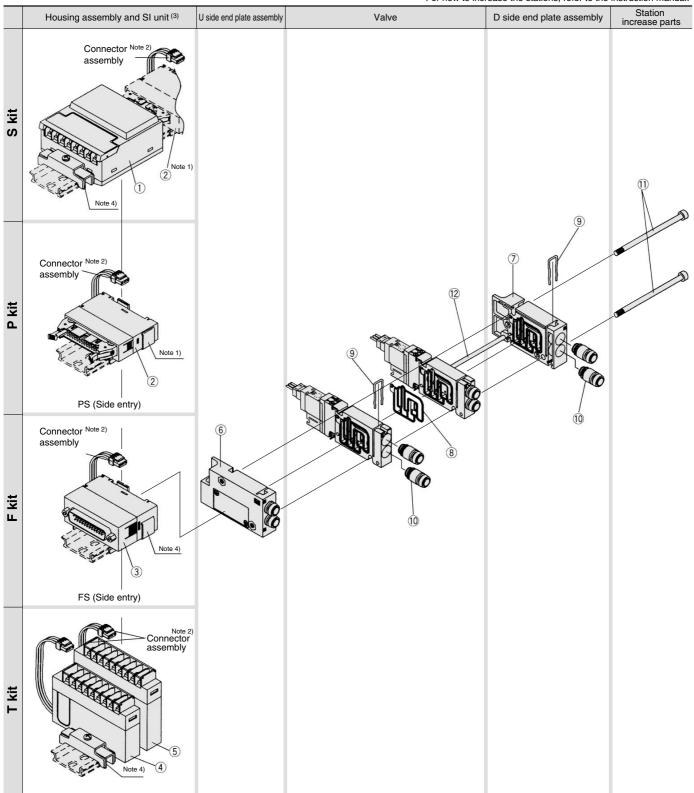



Note 2) Since no connector assymbly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housir	ng assem	bly and S	SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
①(1)	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
U	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SF1 kit)	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SH kit)	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
2	P _S kit	AXT100-2-P _S □ (2)	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
3	F _S kit	AXT100-2-F _S □ (2)	D-sub connector housing assembly □ = Number of pins: 25, 15
4 ⁽³⁾	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
(5) ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.


Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 4) In the case of standard specifications and double wiring, (4) is for 1 to 4 stations and (5) is for 5 to 8 stations.

<D Side End Plate Assembly>

6 D side end plate assembly no.



Note) The 10's fitting assembly is included.

→ Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust (Applicable for C kit only)

<u Side End PlateAssembly No.>

7 U side end plate assembly no.

VVQ1000-2A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust

Note) The ①'s fitting assembly is included.

Note 1) Standard SUP/EXH port is C6.

<Replacement Parts>

N	lo.	Part no.	Description	Material	Number
(8	8	VVQ1000-80A-3-2	Seal	HNBR	12
(9	9	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

10 Fittings assembly part no.

VVQ1000-50A-□

Port size

- C3: Applicable tubing ø3.2
- C4: Applicable tubing Ø4
- **C6**: Applicable tubing ø6 ⁽¹⁾

<Station Increase Parts>

_					
	No. (3)	Part no.	Description	Material	Number (1)
	11)	VVQ1000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
	12		Guide rod	Stainless steel	1



Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) 11) and 12) are in one set.

Note 2) Purchasing order is available in units of 10 pieces.

VQC

SQ VQ0

VQ4

VQ5

VQZ


VQD

Series VQ

VQ2000 (VV5Q24)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

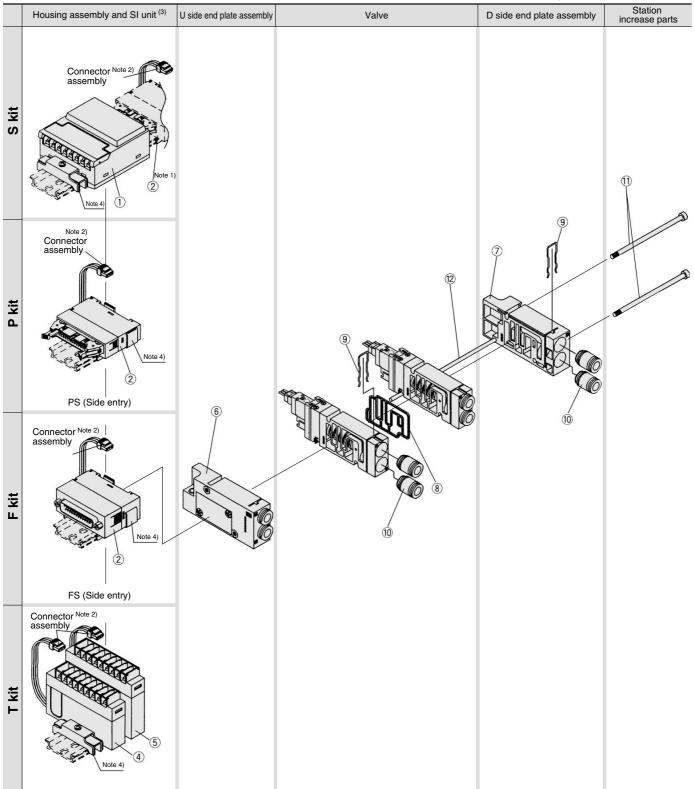



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of 1 SI unit and 2 P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
(1)	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
1)	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	SF1 kit	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	SH kit	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
2	P _S kit	AXT100-2-P _S ^U □ (2)	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
3	F _S kit	AXT100-2-F _S ^U □ (2)	D-sub connector housing assembly □ = Number of pins: 25, 15
4 (3)	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)

Note 4) In the case of standard specifications and double wiring, (4) is for 1 to 4 stations and (5) is for 5 to 8 stations.

SQ VQ0

VQC

VQ5

VQ4

VQZ

VQD

<D Side End Plate Assembly>

6 D side end plate assembly no.

VVQ2000-3A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust (Applicable for C kit only) Note) The ⁽ⁱ⁾'s fitting assembly is included.

<U Side End Plate Assembly No.>

① U side end plate assembly no.

VVQ2000-2A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust

Note) The 10's fitting assembly is included.

<Replacement Parts>

No.	Part no.	Description	Material	Number
8	VVQ2000-80A-3-2	Seal	HNBR	12
9	VVQ2000-80A-3-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

10 Fittings assembly part no.

VVQ1000-51A-□

→ Port size

C4: Applicable tubing ø4

C6: Applicable tubing ø6

C8: Applicable tubing Ø8 (1)

Note 1) Standard SUP/EXH port is C8.
Note 2) Purchasing order is available in units of 10 pieces.

<Station Increase Parts>

No. (3)	Part no.	Description	Material	Number (1)
11)	VVQ2000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
12		Guide rod	Stainless steel	1

Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) 11 and 12 are in one set.




Series VQ

VQ1000 (VV5Q17)/Plug Lead Unit, Cassette Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

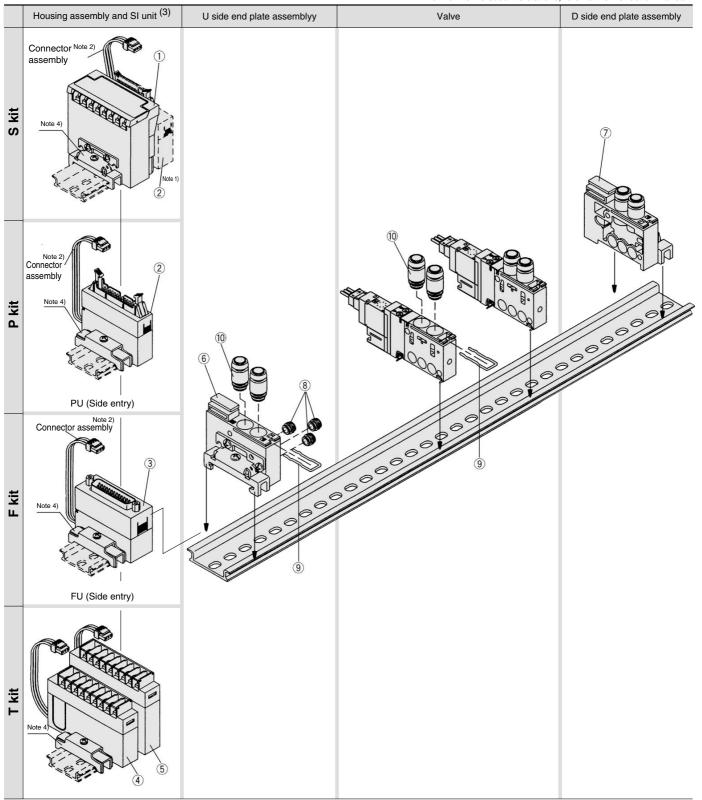



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.



<Housing Assemnly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX321-S001(-XP)	General type SI unit (Series EX300)
	(SB kit)	EX121-SMB1(-XP)	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX121-STA1(-XP)	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX121-SSH1(-XP)	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SE kit)	EX121-SPA1	SI unit for MEWNET-F System (Matsushita Electric Works Ltd.)
	(SF1kit)	EX121-SUW1(-XP)	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SG kit)	EX121-SAB1(-XP)	SI unit for Allen Bradley Remote I/O (RIO) System (Rockwell Automation, Inc.)
① (1)	(SH kit)	EX121-SUH1(-XP)	SI unit for 16 point Uni-wire H System (NKE Corporation)
	(SJ1 kit)	EX121-SSL1(-XP)	SI unit for 16 point S-LINK System (SUNX Corporation)
	(SJ2 kit)	EX121-SSL2(-XP)	SI unit for 8 point S-LINK System (SUNX Corporation)
	(SK kit)	EX121-SFU1(-XP)	SI unit for T-LINK Mini System (Fuji Electric Co.,Ltd.)
	(SQ kit)	EX121-SDN1	SI unit for DeviceNet, CompoBus/D (OMRON Corporation)
	(SR1 kit)	EX121-SCS1(-XP)	SI unit for 16 point CompoBus/S System (OMRON Corporation)
	(SR2 kit)	EX121-SCS2(-XP)	SI unit for 8 point CompoBus/S System (OMRON Corporation)
	(SV kit)	EX121-SMJ1(-XP)	Mitsubishi Electric Corporation: CC-LINK System
2	P _S kit	AXT100-2-P _S ^U □ (2)	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
3	F _S kit	AXT100-2-F ^U _S □ (2)	D-sub connector housing assembly □ = Number of pins: 25, 15
4 (3)	T kit	AXT100-2-TA1	Terminal block assembly (8 terminals)
⑤(3)	T kit	AXT100-2-TA2	Terminal block assembly (8 terminals)

Note 1) A S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately. Suffix -XP for dustproof type SI unit.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)

Note 4) In the case of standard specifications and double wiring, 4 is for 1 to 4 stations and 5 is for 5 to 8 stations.

<D Side End Plate Assembly> 6 D side end plate assembly no.

VVQ1000-3A-7

Note) The $\, @$'s fitting assembly is included.

<U Side End Plate Assembly No.>

7 U side end plate assembly no.

VVQ1000-2A-7

Note) The 10's fitting assembly is included.

<Replacement Parts>

1	No.	Part no.	Description	Material	Number
	8	VVQ1000-80A-7-2	Bushing assembly		3
	9	VVQ1000-80A-7-4	Clip	Stainless steel	12

<Fittings Assembly>

10 Fittings assembly part no.

VVQ1000-50A-□

Port size

C3: Applicable tubing ø3.2

C4: Applicable tubing ø4

C6: Applicable tubing ø6 ⁽¹⁾

Note 1) Standard SUP/EXH port is C6. Note 2) Purchasing order is available in units of 10 pieces.



VQC

