


# Compact Vacuum Ejector

## Series ZA

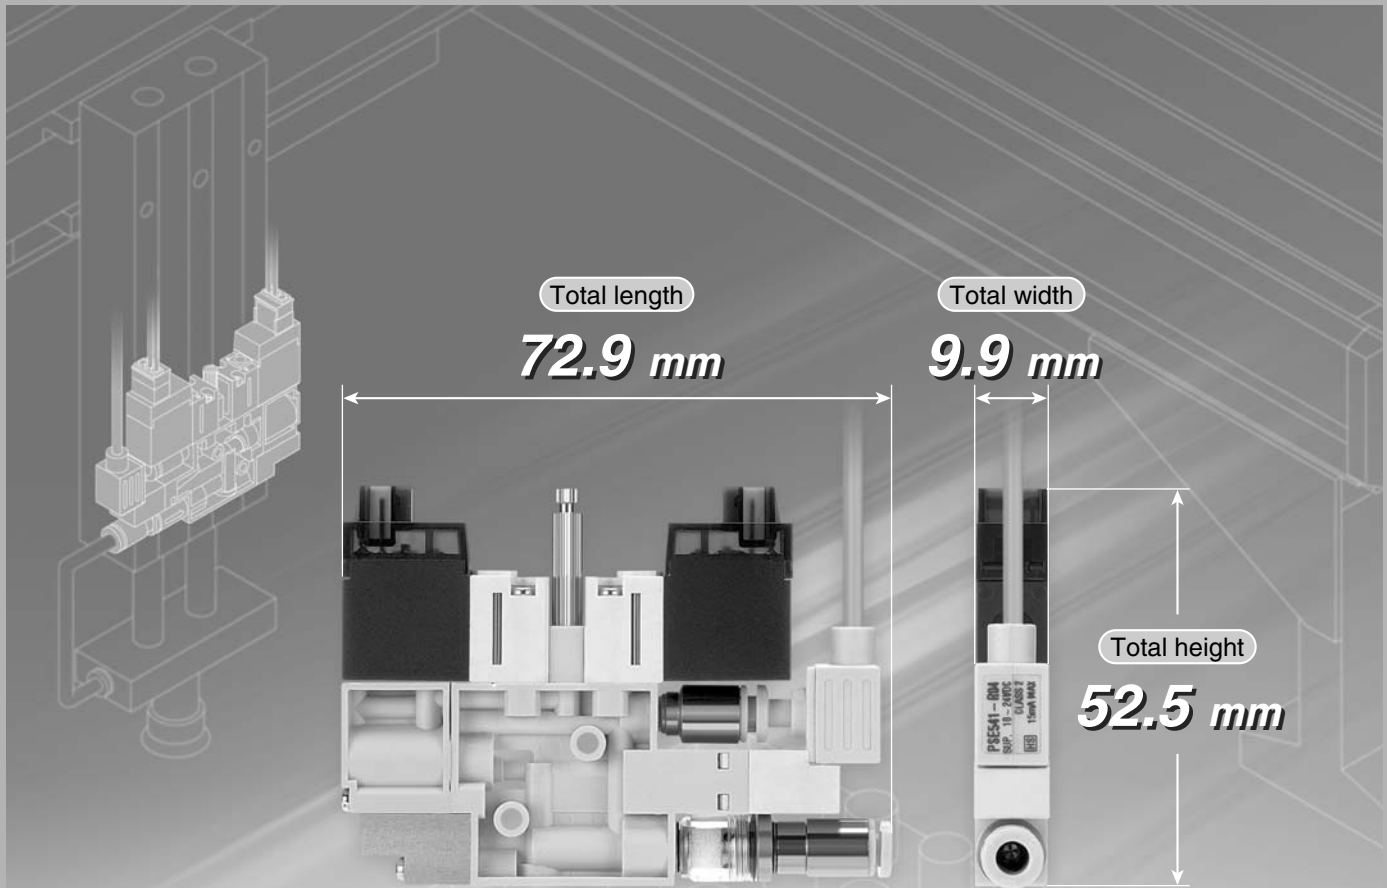

Mass **50 g**


Possible to be mounted on moving parts thanks to lightweight

**Response time**  
**40 ms**

Response time for up to -60 kPa  
Nozzle diameter:  $\phi 0.7$   
Piping:  $\phi 4/\phi 2.5 \times 100$  mm

**Able to install on the moving parts**

Shortened tube length to pad makes the response time improved.

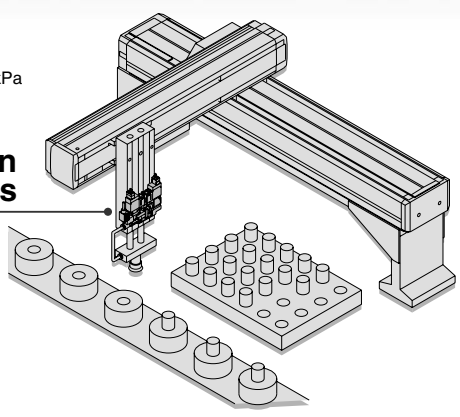


- Supply pilot valve**
  - Normally closed
  - Latching
- Release valve**
  - Normally closed
- Available with or without pressure sensor**

2 kinds of pressure range are selectable.

  - 0 to -101 kPa
  - -100 to 100 kPa
- Suction filter**
  - Nominal filtration rating: 30  $\mu$ m

<b>ZA</b>
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

# Compact Vacuum Ejector Series ZA

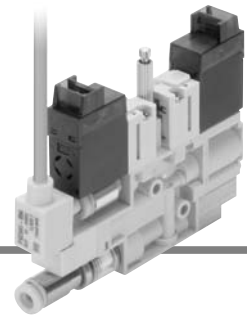

## How to Order

### Ejector Unit

ZA1071-K15L-P1-01

#### Nozzle nominal size

05	ø0.5
07	ø0.7

#### Solenoid valve combination (Refer to Table (1).)

Symbol	For supply	For release
K1	Normally closed	Normally closed
J1	Normally closed	None
Q1	Latching positive common	Normally closed
Q2	Latching positive common	None
N1	Latching negative common	Normally closed
N2	Latching negative common	None

#### Pilot valve (Refer to Table (1).)

Nil	Standard (1 W for DC) <sup>Note</sup>
Y	DC low wattage type (0.5 W) <sup>Note</sup>

Note) Avoid energizing the solenoid valve for long periods of time. (Refer to Design and Selection on Specific Product Precautions 1.)

#### Power supply voltage (Refer to Table (1).)

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

#### Electrical entry

L	L plug connector, with 0.3 m lead wire, with light/surge voltage suppressor	
LO	L plug connector, without connector, with light/surge voltage suppressor	
M	M plug connector, with 0.3 m lead wire, with light/surge voltage suppressor	
MO	M plug connector, without connector, with light/surge voltage suppressor	
G	Grommet, with 0.3 m lead wire (Not available for latching and AC types.)	

#### Vacuum (V) port

Symbol	Applicable tubing O.D.	Part no.
1	ø3.2 (Straight)	KJS23-M5
2	ø4 (Straight)	KJS04-M5
4	ø3.2 (Elbow)	KJL23-M5
5	ø4 (Elbow)	KJL04-M5

#### Air pressure supply (P) port

Symbol	Applicable tubing O.D.	Part no.
0	Without fitting (M3 x 0.5)	—
2	ø4 (Straight)	KJS04-M3
5	ø4 (Elbow)	KJL04-M3
M	Without supply <sup>Note</sup> adapter (For manifold)	Refer to "Construction". (page 853)

Note) O-ring and round head combination screws (M2 x 12) are attached to the supply adapter (M).

#### Pressure sensor specifications

Symbol	Rated pressure range and accuracy	Part no.
P1	With pressure sensor (0 to -101 kPa, accuracy ±2% F.S.)	PSE541
P1A	With pressure sensor (0 to -101 kPa, accuracy ±1% F.S.)	PSE541A
P3	With pressure sensor (-100 to 100 kPa, accuracy ±2% F.S.)	PSE543
P3A	With pressure sensor (-100 to 100 kPa, accuracy ±1% F.S.)	PSE543A
B	Without pressure sensor <sup>Note 1</sup>	KQ2P-04

Note 1) One-touch fittings are plugged when the pressure sensor is mounted.

Note 2) This pressure switch detects pressure and converts the data into analog output. When the product is used as a vacuum switch, a pressure sensor controller Series PSE300 (CAT.ES100-56) is necessary.

#### Suction filter

Nil	Without suction filter
F	With suction filter

#### Manual override

Nil	Non-locking push type
B	Locking type

Table (1) Combination of Solenoid Valve, Pilot Valve and Power Supply Voltage

Combination no.	Solenoid valve combination symbol	Pilot valve symbol	Applicable power supply voltage (V)					
			1 100 AC	2 200 AC	3 110 AC	4 220 AC	5 24 DC	6 12 DC
①	K1	Nil	—	—	—	—	●	●
②	K1	Y	—	—	—	—	●	●
③	J1	Nil	●	●	●	●	●	●
④	J1	Y	—	—	—	—	●	●
⑤	Q1	Nil	—	—	—	—	●	●
⑥	Q2	Nil	●	●	●	●	●	●
⑦	N1	Nil	—	—	—	—	●	●
⑧	N2	Nil	—	—	—	—	●	●


\* Combinations (1) to (8) in the above table are the only possible options.

## Warning

The filter case of this suction filter is made of nylon. The product will be damaged if solvents such as alcohol or chemicals are splashed on it. Avoid using it in an atmosphere where such solvents are present. This suction filter is exclusive to Series ZA. Do not use for other purposes.

How to Order

**Manifold** **ZZA1** **08** - **3** **P**

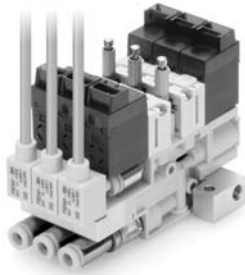

Number of stations

01	1 station
02	2 stations
⋮	⋮
08	8 stations

• Right common air pressure supply (P) port (viewed from the vacuum (V) port side)

Symbol	Applicable tubing O.D.	Part no.
0	Without fitting (M5 x 0.8)	—
2	ø4 (Straight)	KJS04-M5
3	ø6 (Straight)	KJS06-M5
5	ø4 (Elbow)	KJL04-M5
6	ø6 (Elbow)	KJL06-M5
P	With plug	M-5P

• Left common air pressure supply (P) port (viewed from the vacuum (V) port side)

Symbol	Applicable tubing O.D.	Part no.
0	Without fitting (M5 x 0.8)	—
2	ø4 (Straight)	KJS04-M5
3	ø6 (Straight)	KJS06-M5
5	ø4 (Elbow)	KJL04-M5
6	ø6 (Elbow)	KJL06-M5
P	With plug	M-5P

Maximum Simultaneous Operating Stations


Manifold model	Ejector nozzle diameter	
	ø0.5	ø0.7
ZZA1 Stations -2P (KJ04-M5 one side) -5P (KJL04-M5 one side)	4 stations	2 stations
ZZA1 Stations -22 (KJ04-M5 both sides) -55 (KJL04-M5 both sides)	8 stations	4 stations
ZZA1 Stations -3P (KJS06-M5 one side)	8 stations	4 stations
ZZA1 Stations -6P (KJL06-M5 one side)	6 stations	3 stations
ZZA1 Stations -33 (KJS06-M5 both sides)	8 stations	8 stations
ZZA1 Stations -66 (KJL06-M5 both sides)	8 stations	6 stations

Manifold Ordering Example

- ZZA108-2P → 1 pc.
- \*ZA1071-K15L-FP1-M2 → 4 pcs. (Stations 1 to 4)
- \*ZA1051-Q15L-FB-M1 → 3 pcs. (Stations 5 to 7)
- \*ZA1-BP1 → 1 pc. (Station 8)


Blanking plate assembly

Note) The stations are sequentially numbered. When viewed from the side of the vacuum ports, the far left station is designated as station 1.

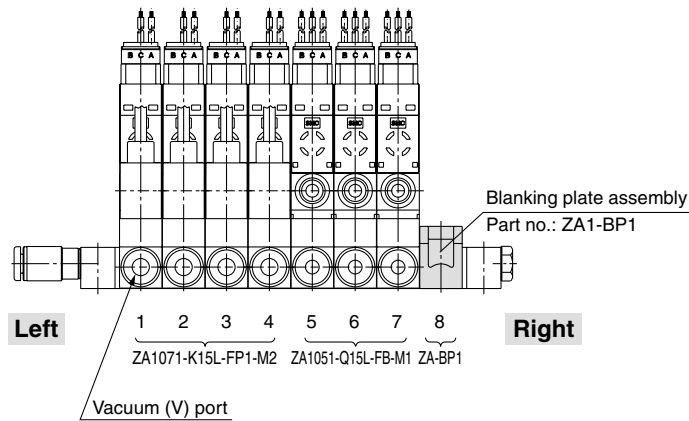


Flow Characteristics / Exhaust Characteristics


ZA05 Exhaust Characteristics

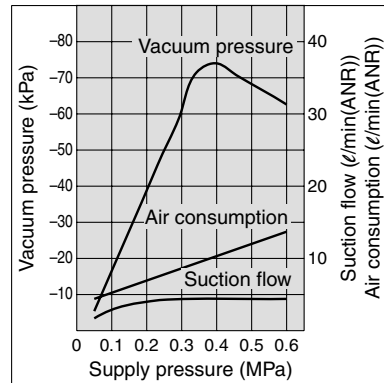


ZA05 Flow Characteristics  
Supply pressure: 0.4 MPa

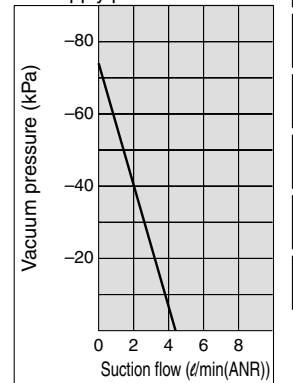

ZA07 Exhaust Characteristics

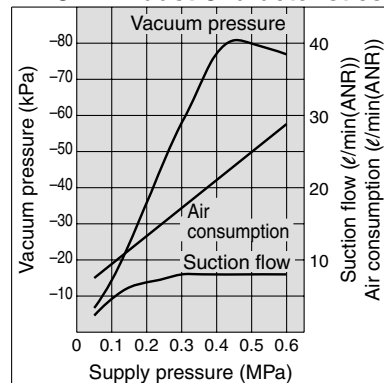

ZA07 Flow Characteristics  
Supply pressure: 0.45 MPa

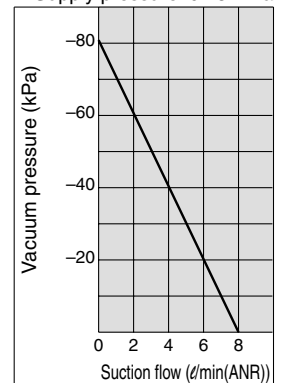

- ZA
- ZX
- ZR
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

## Specifications

### General Specifications

Maximum operating pressure	0.50 MPa
Minimum operating pressure	0.20 MPa
Operating temperature range	5 to 50°C (No condensation)
Fluid	Air
Vibration resistance <sup>Note)</sup>	30 m/s <sup>2</sup>

Note) There was no malfunction confirmed when tested under the following conditions: From 10 to 500 to 10 Hz and whichever of the following is smaller: 1.5 mm amplitude or 98 m/s<sup>2</sup> acceleration in X, Y, Z direction for 2 hours each. (initial value)

### Ejector

Nozzle nominal diameter	0.5 mm	0.7 mm
Standard supply pressure <sup>Note)</sup>	0.40 MPa	0.45 MPa
Maximum vacuum pressure <sup>Note)</sup>	-74 kPa	-78 kPa
Maximum suction flow	4 ℓ/min (ANR)	8 ℓ/min (ANR)
Air consumption	12 ℓ/min (ANR)	28 ℓ/min (ANR)

Note) The maximum vacuum pressure was determined by applying the standard supply pressure. Different supply pressures are required to determine a model.

### Pressure Sensor

Model	PSE541	PSE541A	PSE543	PSE543A
Rated pressure range	0 to -101 kPa		-100 to 100 kPa	
Proof pressure	500 kPa			
Fluid	Air, Non-corrosive gas, Non-flammable gas			
Output voltage	1 to 5 VDC (within rated pressure range)			
Output impedance	Approx. 1 kΩ			
Power supply voltage	12 to 24 VDC, Ripple (p-p) 10% or less (with power supply polarity protection)			
Current consumption	15 mA or less			
Accuracy (Ambient temperature 25°C)	±2% F.S. or less	±1% F.S. or less	±2% F.S. or less	±1% F.S. or less
Linearity	±0.4% F.S. or less			
Repeatability	±0.2% F.S. or less Effects to the output value due to supply voltage: ±0.8% F.S. or less			
Temperature characteristics	±2% F.S. or less (based on 25°C)			
Enclosure	IP40			
Ambient humidity range	Operating/Stored: 35 to 80% RH (No condensation)			
Withstand voltage	1000 VAC or more, 50/60 Hz for 1 minute between live parts and housing			
Insulation resistance	50 MΩ or more between live parts and housing (at 500 VDC mega)			

### Mass


Single unit	
With pressure sensor	50 g
Without pressure sensor	45 g
Manifold base	
1 station	9 g
2 stations	11 g
3 stations	13 g
4 stations	15 g
5 stations	17 g
6 stations	19 g
7 stations	21 g
8 stations	23 g

● Calculation of mass for the manifold type  
(Single unit mass) x (Number of stations)  
+ (Manifold base)

Example) 5 stations manifold with pressure sensors

$$50 \text{ (g)} \times 5 + 17 \text{ (g)} = 267 \text{ (g)}$$

## Construction

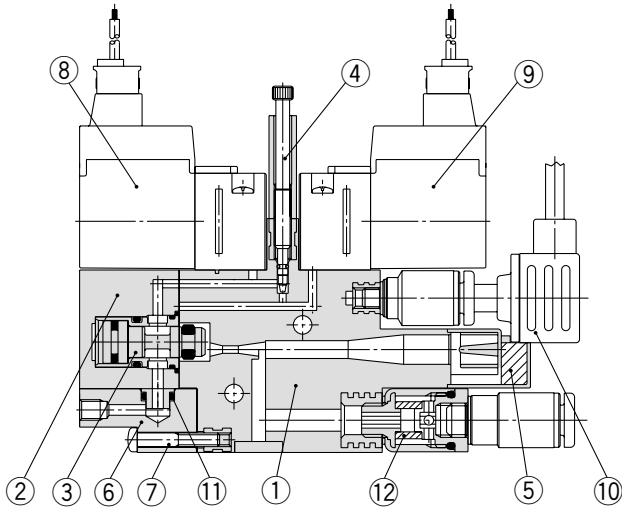

### Component Parts

No.	Description	Material
1	Body	PBT
2	Valve cover	PBT

### Replacement Parts

No.	Description	Part no.
3	Poppet valve assembly	
4	Release flow adjusting needle assembly	
5	Sound absorbing material	ZA1-SAE2
6	Supply adapter	XT631-ZA1-KA2
7*	Round head combination screw	M2 x 12
8	Supply pilot valve	VQ110□-□□□
9	Release valve	VQ110-□□□
10	Pressure sensor	PSE54□□-R04
11*	O-ring	ø3.0 x ø1.0
12	Filter element	ZA1-FE-30

\* For above parts of No. 7 and No. 11, the parts assembly ZA1-OP-1 (10 pcs each) is available.

## How to Order

### Solenoid Valve

**VQ110** □ - **5** **L** □

Pilot valve

Nil	Standard (1 W)
Y	Low wattage type (0.5 W) * Not applicable to AC type.
L	Latching positive common
N	Latching negative common

Rated coil voltage

1	100 VAC
2	200 VAC
3	110 VAC
4	220 VAC
5	24 VDC
6	12 VDC

Solenoid valve connector assembly part no.

Manual override

Nil	Non-locking push type
B	Locking type

Electrical entry

L	L plug connector, with 0.3 m lead wire	
LO	L plug connector, without connector, with light/surge voltage suppressor	
M	M plug connector, with 0.3 m lead wire	
MO	M plug connector, without connector, with light/surge voltage suppressor	
G	Grommet, with 0.3 m lead wire (Not available for latching and AC types.)	

### How to order connector assembly

DC positive common

• Single

AXT661-14A-

• Latching

AXT661-13A-

DC negative common

• Latching

AXT661-13AN-

100 VAC

• Single

AXT661-31A-

• Latching

AXT661-32A-

200 VAC

• Single

AXT661-34A-

• Latching

AXT661-35A-

Connector, socket (3 pcs) only

AXT661-12A

Lead wire length

Nil	300 mm
6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm

### Lead-wire length of the plug connector

The lead-wire length for a valve with a lead-wire is 300 mm. When in need of a valve with a lead-wire longer than 600 mm, place an order for a valve without a connector and connector assembly.

### Vacuum Pressure Switch

**PSE54** **1** □ - **R04**

Rated pressure range


1	0 to -101 kPa
3	-100 to 100 kPa

Accuracy

Nil	±2% F.S. or less
A	±1% F.S. or less



# Series ZA

## Dimensions


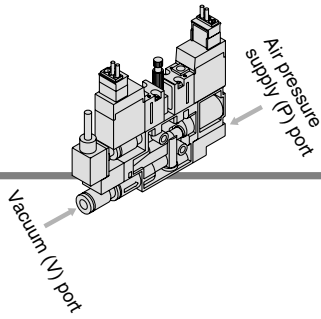


### Type K1

ZA1 □ 1-K1 □ □ □ □ - □ □ □ □

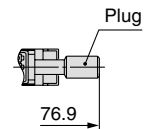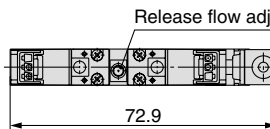


ZA1 □ 1-K1 □ □ □ □ - □ B - □ □

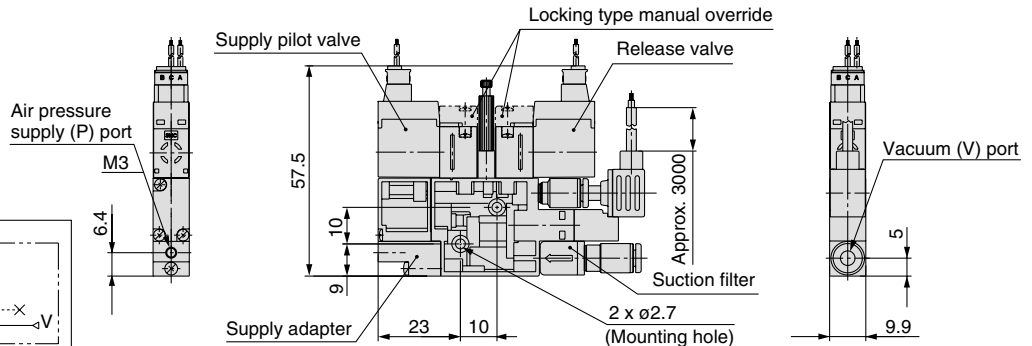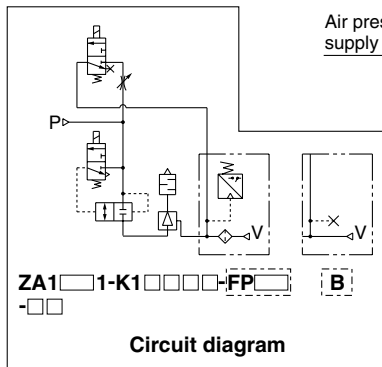


ZA1 □ 1-K1 □ □ L □ - FP □ □ - 02

Note) When the body is mounted, tighten with a torque of  $0.6 \pm 0.06$  N·m. Using excessive torque may cause damage to the body.

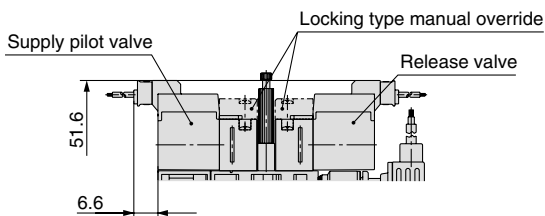

ZA1 □ 1-K1 □ □ M □ - □ □ □ □

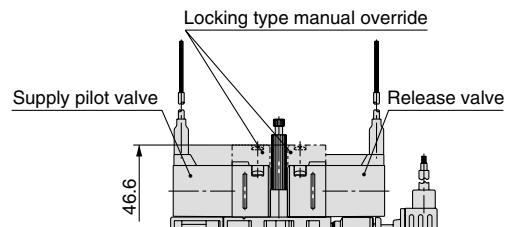


ZA1 □ 1-K1 □ □ G □ - □ □ □ □

## Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation


Dimensions after the fittings are installed on the vacuum (V) port, air pressure supply (P) port of a single unit, and the common air pressure supply (P) port of a manifold are shown below.

Applicable tubing O.D.: ø3.2

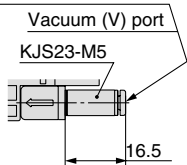


ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 01


Applicable tubing O.D.: ø4

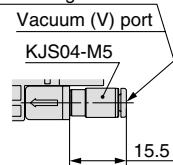

ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 02

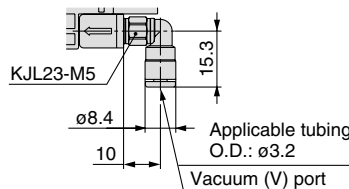


ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 04

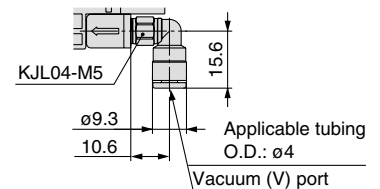


ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 05

## Dimensions of the vacuum (V) port fittings after installation

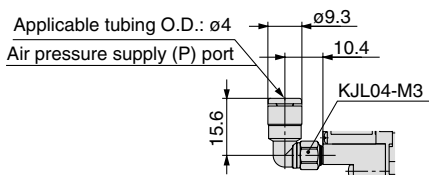


ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 50

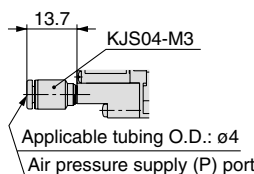

ZA1 □ 1-K1 □ □ □ □ - □ □ □ □ 20


## Dimensions of the air pressure supply (P) port fittings after installation

## Dimensions


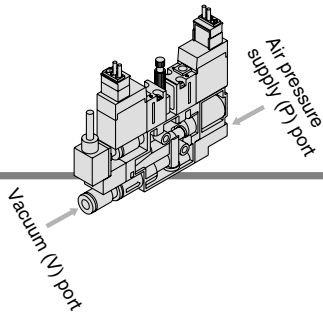


### Type J1

ZA1□□1-J1□□□□-□□□□-□□

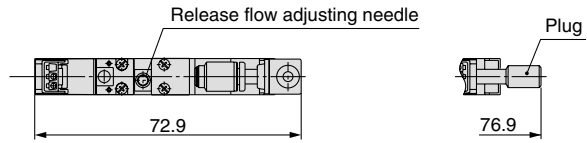


ZA1□□1-J1□□□□□□-□□B-□□

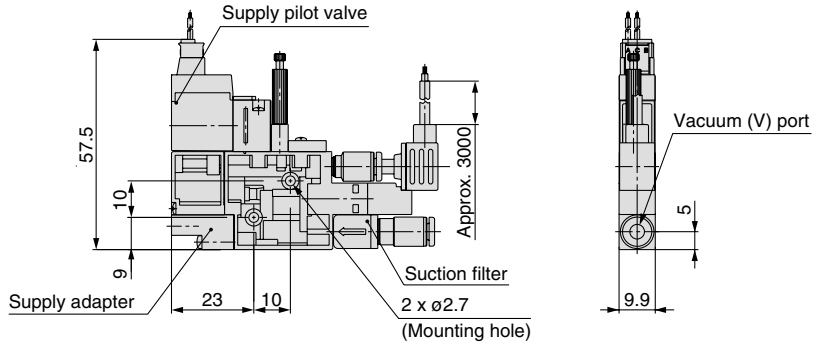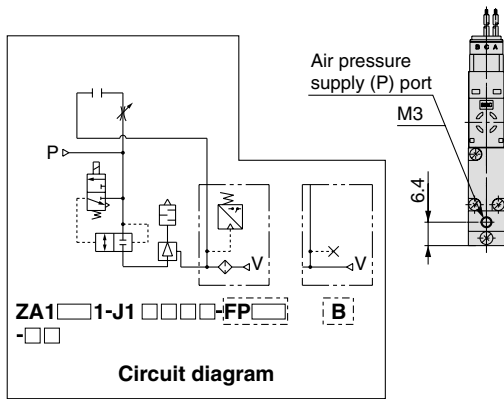


Note) When the body is mounted, tighten with a torque of  $0.6 \pm 0.06$  N·m. Using excessive torque may cause damage to the body.

ZA1□□1-J1□□□□L□-FP□□-02

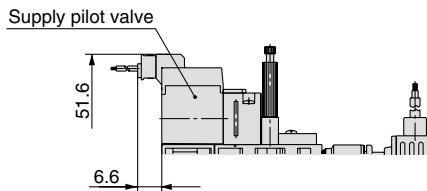

ZA1□□1-J1□□□□M□-□□□□-□□

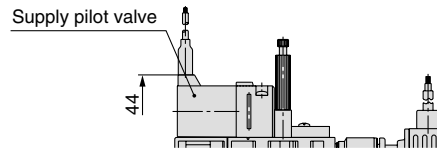


ZA1□□1-J1□□□□G□-□□□□-□□

## Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation


Dimensions after the fittings are installed on the vacuum (V) port, air pressure supply (P) port of a single unit, and the common air pressure supply (P) port of a manifold are shown below.

Applicable tubing O.D.: ø3.2

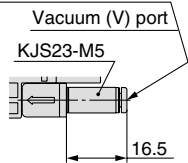


ZA1□□1-J1□□□□□□-□□□□-01


Applicable tubing O.D.: ø4

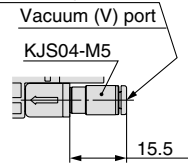

ZA1□□1-J1□□□□□□-□□□□-02

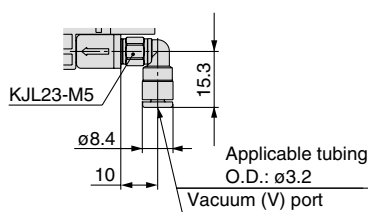


ZA1□□1-J1□□□□□□-□□□□-04

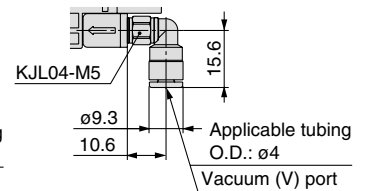


ZA1□□1-J1□□□□□□-□□□□-05

## Dimensions of the vacuum (V) port fittings after installation

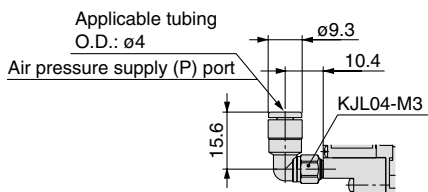

ZA1□□1-J1□□□□□□-□□□□-5□

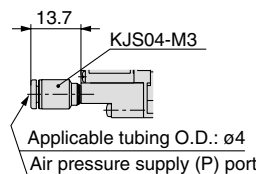


ZA1□□1-J1□□□□□□-□□□□-2□

## Dimensions of the air pressure supply (P) port fittings after installation


ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

# Series ZA





## Dimensions

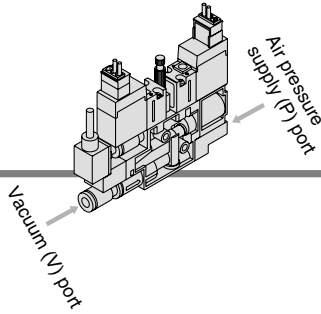

Type  $Q_1$   
N<sub>1</sub>  
ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ □ □

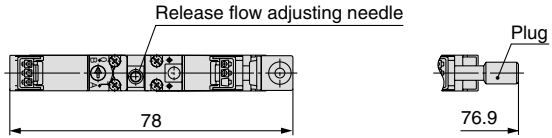


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ B - □ □

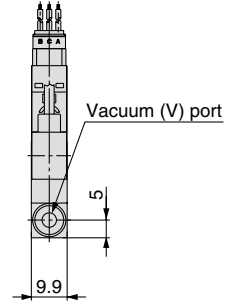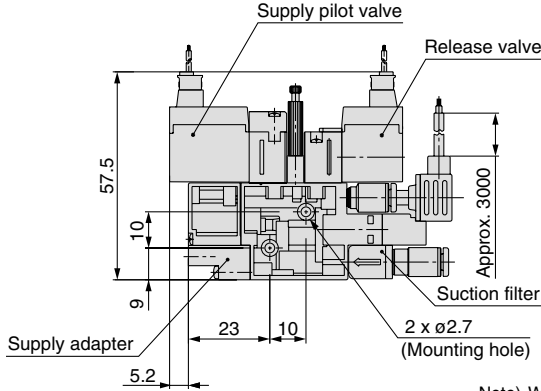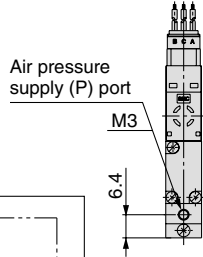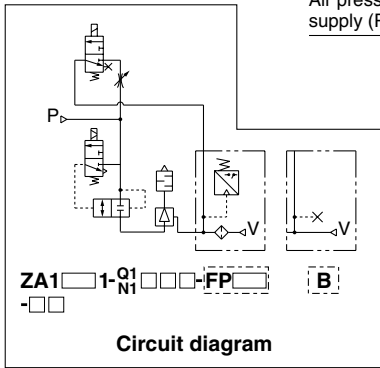

ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - FP □ □ - 02


Note) When the body is mounted, tighten with a torque of  $0.6 \pm 0.06$  N·m. Using excessive torque may cause damage to the body.

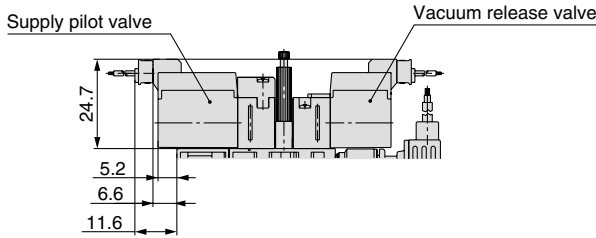


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - M □ □ □ □ - □ □

## Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation


Dimensions after the fittings are installed on the vacuum (V) port, air pressure supply (P) port of a single unit, and the common air pressure supply (P) port of a manifold are shown below.

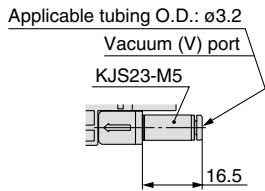


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 1

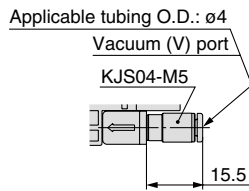

ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 2

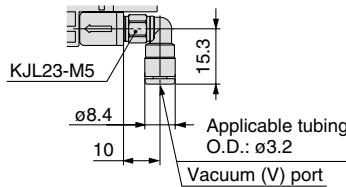


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 4

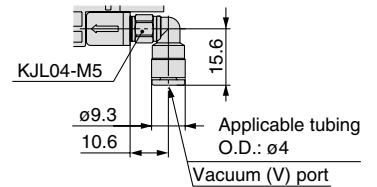


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 5

## Dimensions of the vacuum (V) port fittings after installation

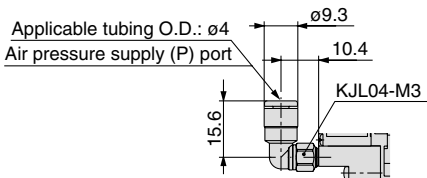

ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 5 □

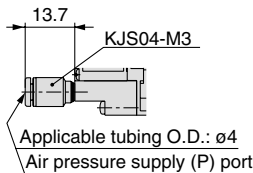


ZA1 □ □ 1 -  $Q_1$  □ □ □ □ - □ □ - □ 2 □


## Dimensions of the air pressure supply (P) port fittings after installation





## Dimensions

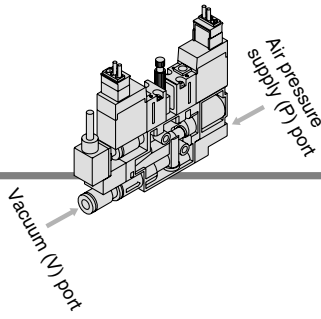

Type  $\frac{Q2}{N2}$   
**ZA1**  1- $\frac{Q2}{N2}$

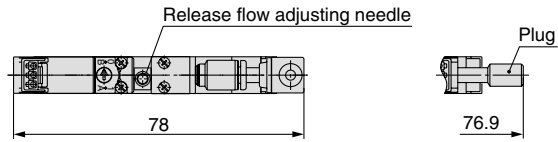


**ZA1**  1- $\frac{Q2}{N2}$       **B**

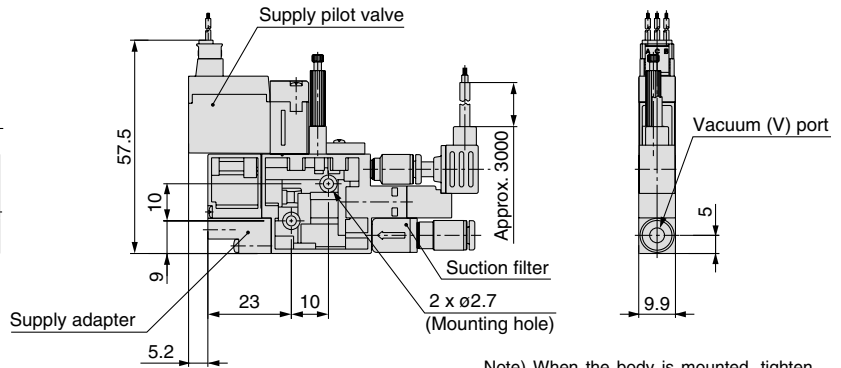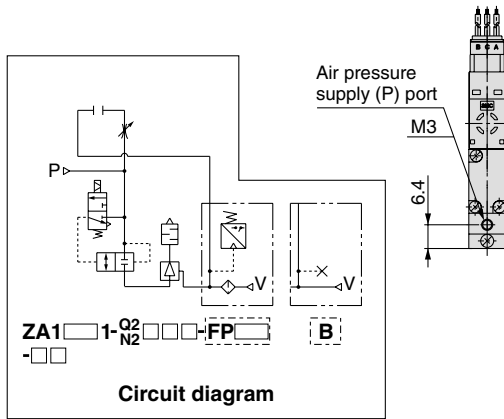

**ZA1**  1- $\frac{Q2}{N2}$     **L**  **FP**   **02**


Note) When the body is mounted, tighten with a torque of  $0.6 \pm 0.06$  N·m. Using excessive torque may cause damage to the body.

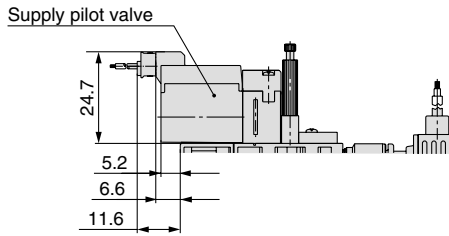


**ZA1**  1- $\frac{Q2}{N2}$     **M**

## Dimensions of the vacuum (V) and air pressure supply (P) port fittings after installation


Dimensions after the fittings are installed on the vacuum (V) port, air pressure supply (P) port of a single unit, and the common air pressure supply (P) port of a manifold are shown below.

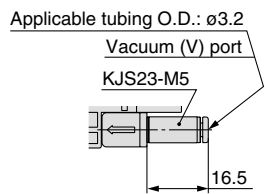


**ZA1**  1- $\frac{Q2}{N2}$         **1**

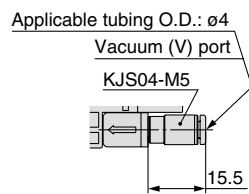

**ZA1**  1- $\frac{Q2}{N2}$         **2**

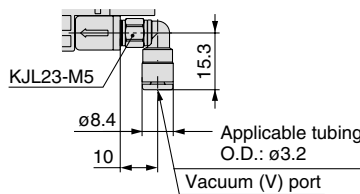


**ZA1**  1- $\frac{Q2}{N2}$         **4**

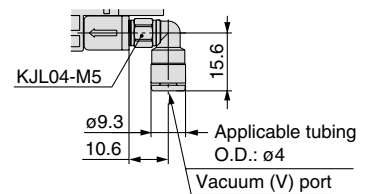


**ZA1**  1- $\frac{Q2}{N2}$         **5**

## Dimensions of the vacuum (V) port fittings after installation

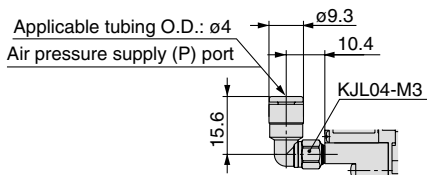

**ZA1**  1- $\frac{Q2}{N2}$         **5**

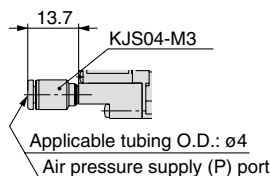


**ZA1**  1- $\frac{Q2}{N2}$         **2**

## Dimensions of the air pressure supply (P) port fittings after installation

- ZA**
- ZX
- ZR
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY
- ZF
- ZP
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment



**Manifold Type: How to Increase / Decrease Manifold Stations**

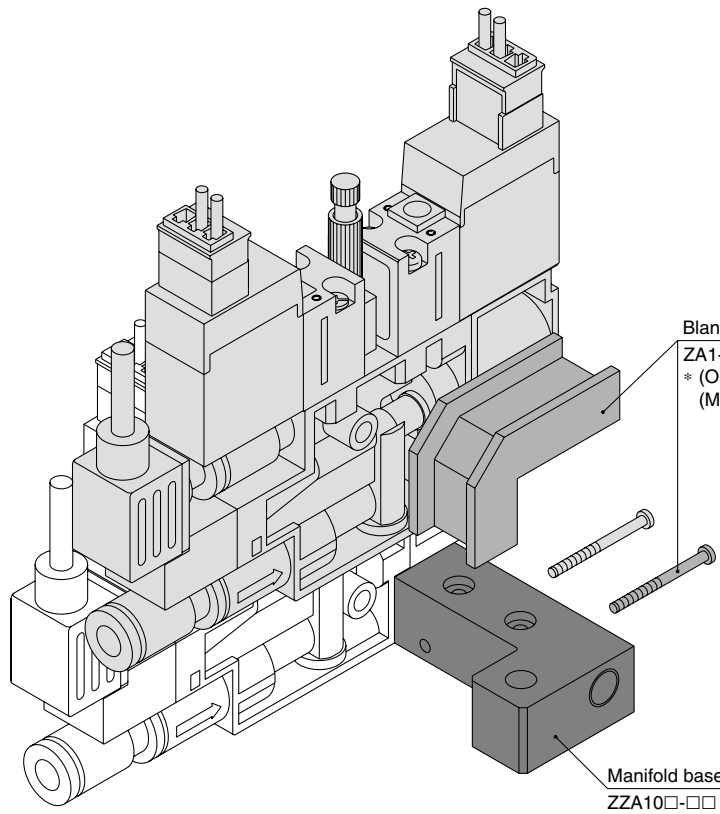

Blanking plate assembly  
 ZA1-BP1  
 \* (O-ring and round head combination screws (M2 x 12) are attached.)

Manifold base  
 ZZA10□-□□

\* An assembly kit (part no. ZA1-OP-1) is available which includes 10 pcs each of O-rings and round head combination screws.

<b>ZA</b>
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment



# Series ZA Specific Product Precautions 1

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

## Design and Selection

### Warning

#### 1. Avoid energizing the solenoid valve for long periods of time.

If a solenoid valve is energized for a long period of time, the coil will get hot and the performance may be reduced. Additionally, the peripheral equipment in close proximity may also be badly affected. Use a low wattage solenoid valve when the solenoid valve is energized continuously or when the duration of the energization is longer than the non-energized period each day. Periods of energization can be shortened by using a normally opened or latching type solenoid valve. But, do not energize the coil on both A and B sides simultaneously when using the latching type.

Continuous energization of the solenoid valve should be less than 10 minutes in duration and the energization period should be shorter than the non-energized period. Take measures for any heat radiation so that the temperature is within the range of solenoid valve specifications when the solenoid valve is mounted on the control panel. Please pay special attention to any temperature increases when a manifold type with 3 stations or more is energized continuously or when three individual units are placed in close proximity.

#### 2. Use the vacuum equipment within the operating supply pressure range.

When the operating with a lower supply pressure, the vacuum performance will be reduced and the poppet valve will cause malfunction.

Never use the vacuum equipment more than the operating supply pressure range as this may cause damage to the product resulting in potentially dangerous operation.

#### 3. Suspension of operation for long periods of time

Please use caution — as detailed below — when the vacuum equipment is turned off for periods in excess of 6 hours.

- Be sure to turn off the pressure supply to the vacuum equipment.

Please observe this precautions as the supply pressure will be applied for a extra period of time due to the line pressure increase and may result in damage to the vacuum equipment.

- Be sure to turn off the power supply to the solenoid valve and the pressure switch.

Please observe this precautions as any heat generated due to the length of energization time may seriously affect the vacuum equipment and peripheral equipment resulting in potentially dangerous operation.

#### 4. Exhaust port (EXH port) on the vacuum ejector

Please check the exhaust port (EXH port) on the vacuum ejector, so that any exhaust resistance will not be increased due to insulating materials or restrictions in the piping. The exhaust resistance may reduce the ejector's performance. Additionally, never use this product in an application where the exhaust port is blocked when detaching a workpiece. This misuse may result in possible damage to the product.

#### 5. Vacuum release flow adjusting needle

Adjust the vacuum release flow adjusting needle from the fully closed to the open state by 1/8 to 1/4 turns to detach a workpiece completely during the ON time of a release valve.

Do not supply compressed air while the vacuum release flow adjusting needle is adjusted. Securely lock it with a lock nut after adjustment.

### Warning

#### 6. How to use the latching type solenoid valve


Our Latching type solenoid are fitted with a self-detaining mechanism. Its construction features an armature inside the solenoid which is set or reset using spontaneous energization. (10 ms or greater) Therefore, continuous energization is not required.

### How to Use the Latching Type Plug Connector


#### Wiring specifications

- Wiring should be connected as shown below. Connect with the power supply respectively.


#### DC positive common

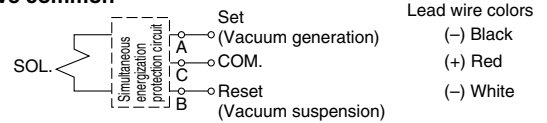

#### DC negative common

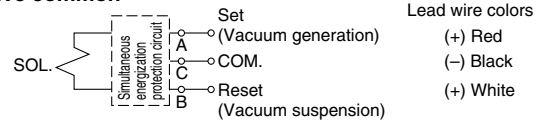

#### AC type

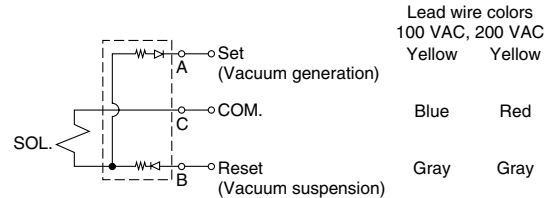

Special care must be taken for the latching type.

- Avoid using this product with a circuit which electrifies both the set and reset signals simultaneously.
- The minimum energization time required for self-detaining is 10 ms.
- Please contact us when using this product in locations where there are vibration levels of 30 m/s<sup>2</sup> or above or highly magnetic fields. No problems arise in normal usage or locations.
- This valve retains the reset position (Flow path: A → R) at the time of shipment. However, it may alter to the set position during transportation or due to vibration when mounting the valve. Therefore, confirm the home position either manually or with power supply prior to use.

#### 7. Suction filter

This suction filter is dedicated to the ZA series. Avoid using it for other purposes.



# Series ZA Specific Product Precautions 2

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

## Mounting

### Warning

1. When the body is mounted, tighten with a torque of  $0.6 \pm 0.06$  N·m.

Using excessive torque may cause damage to the body.

## Operating Environment

### Warning

1. Suction filter

The filter case of this suction filter is made of nylon. The product will be damaged if solvents such as alcohol or chemicals are splashed on it. Avoid using it in an atmosphere where such solvents are present.

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related  
Equipment